

 
 
Roland®

DIGITAL STEREO MICRO MONITOR

DM-20

Owner's Manual Bedienungsanleitung Mode d'emploi Manuale d'uso Manual del usuario

Before using this unit, carefully read the sections entitled: "IMPORTANT SAFETY INSTRUCTIONS" (p. 2), "USING THE UNIT SAFELY" (pp. 3-4), and "IMPORTANT NOTES" (p. 6). These sections provide important information concerning the proper operation of the unit. Additionally, in order to feel assured that you have gained a good grasp of every feature provided by your new unit, Owner's manual should be read in its entirety. The manual should be saved and kept on hand as a convenient reference.

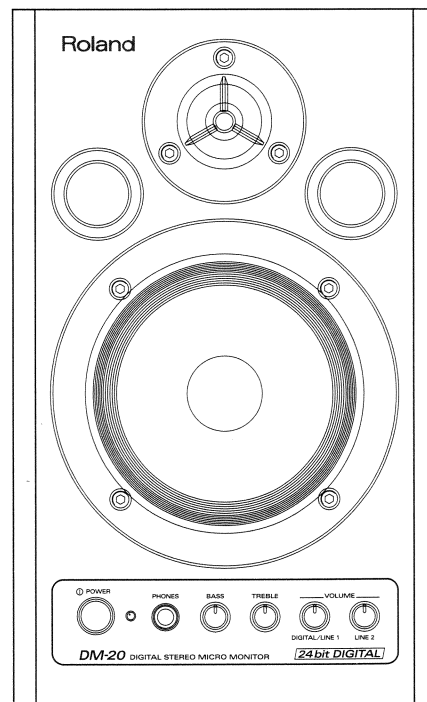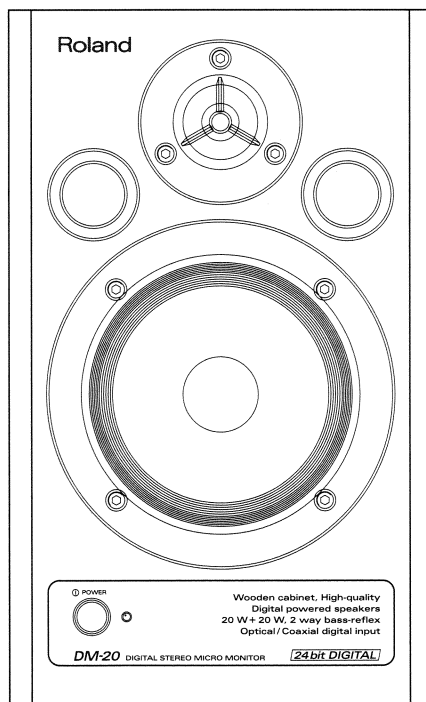

Copyright © 2004 ROLAND CORPORATION

All rights reserved. No part of this publication may be reproduced in any form without the written permission of ROLAND CORPORATION.



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



ATTENTION: RISQUE DE CHOC ELECTRIQUE NE PAS OUVRIR

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK,
DO NOT REMOVE COVER (OR BACK).
NO USER-SERVICEABLE PARTS INSIDE.
REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

INSTRUCTIONS PERTAINING TO A RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS.

IMPORTANT SAFETY INSTRUCTIONS

SAVE THESE INSTRUCTIONS

WARNING - When using electric products, basic precautions should always be followed, including the following:

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any of the ventilation openings. Install in accordance with the manufacturers instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Never use with a cart, stand, tripod, bracket, or table except as specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



For the U.K.

IMPORTANT: THE WIRES IN THIS MAINS LEAD ARE COLOURED IN ACCORDANCE WITH THE FOLLOWING CODE.

BLUE: NEUTRAL
BROWN: LIVE

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:
The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured BLACK.
The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured RED.
Under no circumstances must either of the above wires be connected to the earth terminal of a three pin plug.

USING THE UNIT SAFELY

INSTRUCTIONS FOR THE PREVENTION OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

About ⚠ WARNING and ⚠ CAUTION Notices

⚠ WARNING	Used for instructions intended to alert the user to the risk of death or severe injury should the unit be used improperly.
⚠ CAUTION	Used for instructions intended to alert the user to the risk of injury or material damage should the unit be used improperly. * Material damage refers to damage or other adverse effects caused with respect to the home and all its furnishings, as well to domestic animals or pets.

About the Symbols

	The ⚠ symbol alerts the user to important instructions or warnings. The specific meaning of the symbol is determined by the design contained within the triangle. In the case of the symbol at left, it is used for general cautions, warnings, or alerts to danger.
	The ⚡ symbol alerts the user to items that must never be carried out (are forbidden). The specific thing that must not be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the unit must never be disassembled.
	The ● symbol alerts the user to things that must be carried out. The specific thing that must be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the power-cord plug must be unplugged from the outlet.

ALWAYS OBSERVE THE FOLLOWING

⚠ WARNING

- Before using this unit, make sure to read the instructions below, and the Owner's Manual.



- Do not open or perform any internal modifications on the unit.



- Do not attempt to repair the unit, or replace parts within it (except when this manual provides specific instructions directing you to do so). Refer all servicing to your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the "Information" page.



- Never use or store the unit in places that are:
 - Subject to temperature extremes (e.g., direct sunlight in an enclosed vehicle, near a heating duct, on top of heat-generating equipment); or are
 - Damp (e.g., baths, washrooms, on wet floors); or are
 - Humid; or are
 - Exposed to rain; or are
 - Dusty; or are
 - Subject to high levels of vibration.



- Make sure you always have the unit placed so it is level and sure to remain stable. Never place it on stands that could wobble, or on inclined surfaces.



- The unit should be connected to a power supply only of the type described in the operating instructions, or as marked on the rear side of unit.



⚠ WARNING

- Use only the attached power-supply cord. Also, the supplied power cord must not be used with any other device.



- Do not excessively twist or bend the power cord, nor place heavy objects on it. Doing so can damage the cord, producing severed elements and short circuits. Damaged cords are fire and shock hazards!



- This unit, either alone or in combination with an amplifier and headphones or speakers, may be capable of producing sound levels that could cause permanent hearing loss. Do not operate for a long period of time at a high volume level, or at a level that is uncomfortable. If you experience any hearing loss or ringing in the ears, you should immediately stop using the unit, and consult an audiologist.



- Do not allow any objects (e.g., flammable material, coins, pins); or liquids of any kind (water, soft drinks, etc.) to penetrate the unit.



- Immediately turn the power off, remove the power cord from the outlet, and request servicing by your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the "Information" page when:



- The power-supply cord, or the plug has been damaged; or
- If smoke or unusual odor occurs
- Objects have fallen into, or liquid has been spilled onto the unit; or
- The unit has been exposed to rain (or otherwise has become wet); or
- The unit does not appear to operate normally or exhibits a marked change in performance.

WARNING

- In households with small children, an adult should provide supervision until the child is capable of following all the rules essential for the safe operation of the unit. 
- Protect the unit from strong impact. (Do not drop it!) 
- Do not force the unit's power-supply cord to share an outlet with an unreasonable number of other devices. Be especially careful when using extension cords—the total power used by all devices you have connected to the extension cord's outlet must never exceed the power rating (watts/amperes) for the extension cord. Excessive loads can cause the insulation on the cord to heat up and eventually melt through. 
- Before using the unit in a foreign country, consult with your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the "Information" page. 
- Do not put anything that contains water (e.g., flower vases) on this unit. Also, avoid the use of insecticides, perfumes, alcohol, nail polish, spray cans, etc., near the unit. Swiftly wipe away any liquid that spills on the unit using a dry, soft cloth. 

CAUTION

- The unit should be located so that its location or position does not interfere with its proper ventilation. 
- Always grasp only the plug on the power-supply cord when plugging into, or unplugging from, an outlet or this unit. 
- At regular intervals, you should unplug the power plug and clean it by using a dry cloth to wipe all dust and other accumulations away from its prongs. Also, disconnect the power plug from the power outlet whenever the unit is to remain unused for an extended period of time. Any accumulation of dust between the power plug and the power outlet can result in poor insulation and lead to fire. 
- Try to prevent cords and cables from becoming entangled. Also, all cords and cables should be placed so they are out of the reach of children. 
- Never climb on top of, nor place heavy objects on the unit. 
- Never handle the power cord or its plugs with wet hands when plugging into, or unplugging from, an outlet or this unit. 
- Before moving the unit, disconnect the power plug from the outlet, and pull out all cords from external devices. 
- Before cleaning the unit, turn off the power and unplug the power cord from the outlet. 
- Whenever you suspect the possibility of lightning in your area, pull the plug on the power cord out of the outlet. 

IMPORTANT NOTES

In addition to the items listed under “IMPORTANT SAFETY INSTRUCTIONS” and “USING THE UNIT SAFELY” on pages 2–4, please read and observe the following:

Power Supply

- Do not connect this unit to same electrical outlet that is being used by an electrical appliance that is controlled by an inverter (such as a refrigerator, washing machine, microwave oven, or air conditioner), or that contains a motor. Depending on the way in which the electrical appliance is used, power supply noise may cause this unit to malfunction or may produce audible noise. If it is not practical to use a separate electrical outlet, connect a power supply noise filter between this unit and the electrical outlet.
- Before connecting this unit to other devices, turn off the power to all units. This will help prevent malfunctions and/or damage to speakers or other devices.
- Although the LCD and LEDs are switched off when the POWER switch is switched off, this does not mean that the unit has been completely disconnected from the source of power. If you need to turn off the power completely, first turn off the POWER switch, then unplug the power cord from the power outlet. For this reason, the outlet into which you choose to connect the power cord's plug should be one that is within easy reach.

Placement

 
- Using the unit near power amplifiers (or other equipment containing large power transformers) may induce hum. To alleviate the problem, change the orientation of this unit; or move it farther away from the source of interference.
- This device may interfere with radio and television reception. Do not use this device in the vicinity of such receivers.
- Noise may be produced if wireless communications devices, such as cell phones, are operated in the vicinity of this unit. Such noise could occur when receiving or initiating a call, or while conversing. Should you experience such problems, you should relocate such wireless devices so they are at a greater distance from this unit, or switch them off.
- Do not expose the unit to direct sunlight, place it near devices that radiate heat, leave it inside an enclosed vehicle, or otherwise subject it to temperature extremes. Also, do not allow lighting devices that normally are used while their light source is very close to the unit (such as a piano light), or powerful spotlights to shine upon the same area of the unit for extended periods of time. Excessive heat can deform or discolor the unit.
- When moved from one location to another where the temperature and/or humidity is very different, water droplets (condensation) may form inside the unit. Damage or malfunction may result if you attempt to use the unit in this condition. Therefore, before using the unit, you must allow it to stand for several hours, until the condensation has completely evaporated.
- Do not allow rubber, vinyl, or similar materials to remain on the unit for long periods of time. Such objects can discolor or otherwise harmfully affect the finish.
- Do not paste stickers, decals, or the like to this instrument. Peeling such matter off the instrument may damage the exterior finish.
- Do not allow objects to remain on top of the unit while it is in operation. Placing heavy objects on this unit may result in injury if it overturns or falls.

Maintenance

- To clean the unit, use a dry, soft cloth; or one that is slightly dampened. Try to wipe the entire surface using an equal amount of strength, moving the cloth along with the grain of the wood. Rubbing too hard in the same area can damage the finish.
- Never use benzene, thinners, alcohol or solvents of any kind, to avoid the possibility of discoloration and/or deformation.


Additional Precautions

- Use a reasonable amount of care when using the unit's buttons, sliders, or other controls; and when using its jacks and connectors. Rough handling can lead to malfunctions.
- When connecting / disconnecting all cables, grasp the connector itself—never pull on the cable. This way you will avoid causing shorts, or damage to the cable's internal elements.
- A small amount of heat will radiate from the unit during normal operation.
- To avoid disturbing your neighbors, try to keep the unit's volume at reasonable levels. You may prefer to use headphones, so you do not need to be concerned about those around you (especially when it is late at night).
- When you need to transport the unit, package it in the box (including padding) that it came in, if possible. Otherwise, you will need to use equivalent packaging materials.
- Use a cable from Roland to make the connection. If using some other make of connection cable, please note the following precautions.
 - Some connection cables contain resistors. Do not use cables that incorporate resistors for connecting to this unit. The use of such cables can cause the sound level to be extremely low, or impossible to hear. For information on cable specifications, contact the manufacturer of the cable.
- Be sure to avoid inserting your fingers in the bass reflex ports when transporting or moving the speakers, as your fingers may become wedged and stuck in the ports.

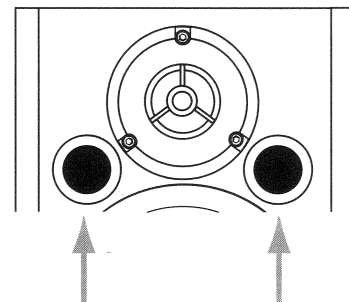

Panel Description

 Left Channel

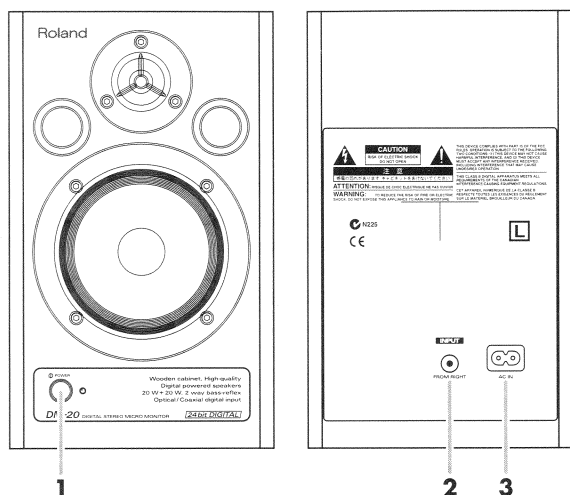

Left Channel

1. POWER Switch, POWER Indicator

This turns the power of the left (L) channel on/off. When the power is on, the indicator located at the side of the switch will light.

2. L Channel Input Jack

Connect this to L Channel Output Jack **14** on the right-side unit. For the connection, use the included speaker cable.

3. AC Inlet

Connect the included Power cord here (p. 17). Plug it firmly in, so that the cable does not accidentally become disconnected.

Right Channel

4. POWER Switch, POWER Indicator

This turns the power of the right (R) channel on/off. When the power is on, the indicator located at the side of the switch will light.

5. PHONES Jack

 
When you connect headphones to this jack, no sound will be heard from the speakers.

6. BASS Control Knob

7. TREBLE Control Knob

These adjust the tones of the bass and treble. Set to center to make the tones flat.

Right Channel

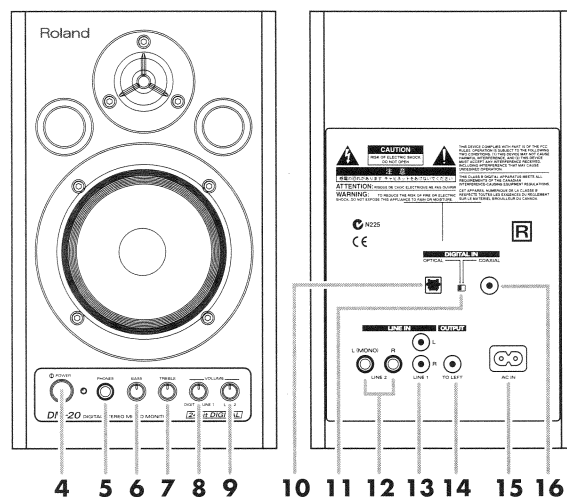

8. VOLUME Knob (DIGITAL/LINE 1)

This adjusts the volume of devices connected to digital input connectors **10**, **16**, and LINE 1 Input Jacks **13**.

9. VOLUME Knob (LINE 2)

This adjusts the volume of the device connected to LINE 2 Input Jacks **12**.

10. Digital Input Connector (Optical)

This is the digital input connector for optic-fiber cable.

11. Digital Input Select Switch

This switch selects digital input connector **10** or **16** on the rear panel. Select the connector used for the input signal.

12. LINE 2 Input Jacks (L (MONO), R) (1/4" phone type)

For mono input, use the L (MONO) jack.

13. LINE 1 Input Jacks (L, R) (RCA phono type)

14. L Channel Output Jack

Connect this to L Channel Input Jack **2** on the left-side unit.

15. AC Inlet

 
Connect the included Power cord here (p. 17). Plug it firmly in, so that the cable does not accidentally become disconnected.

16. Digital Input Connector (Coaxial)

This is the digital input connector for coaxial cable.

Connections


Attaching the Rubber Feet (Included)

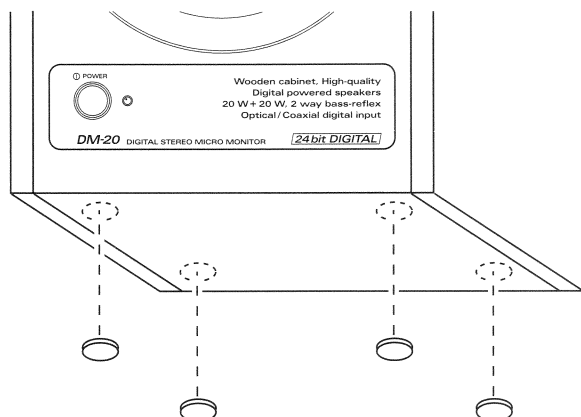


Precautions When Connecting and Turning on the Power

- To prevent malfunction and/or damage to speakers or other devices, always turn down the volume, and turn off the power on all devices before making any connections.
- When connection cables with resistors are used, the volume level of equipment connected to the inputs (Input Jacks) may be low. If this happens, use connection cables that do not contain resistors, such as those from the Roland PCS series.
- Once the connections have been completed, turn on power to your various devices in the order specified. By turning on devices in the wrong order, you risk causing malfunction and/or damage to speakers and other devices. (When turning the power off, reverse this procedure.)
< Connected devices → DM-20 (R) → DM-20 (L) >
- This unit is equipped with a protection circuit. A brief interval (a few seconds) after power up is required before the unit will operate normally.

 Connection Example

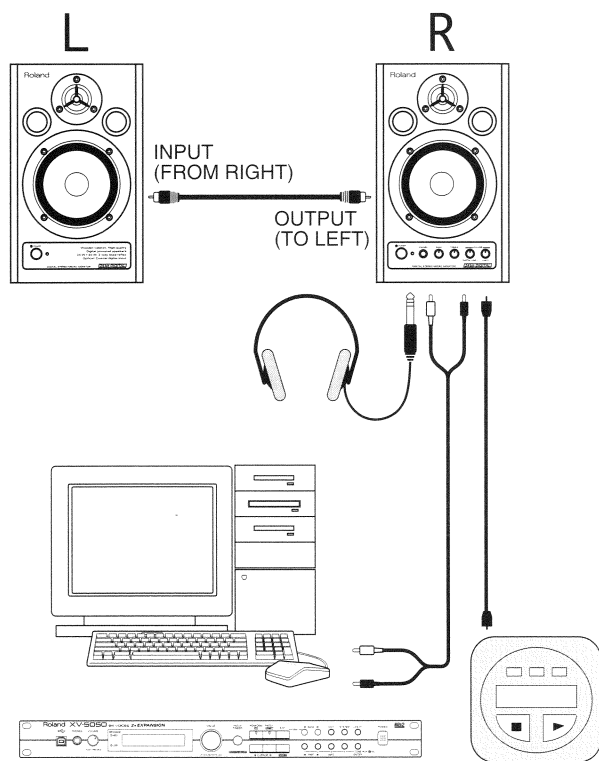


 Sound Module, CD Player, MD Player, etc.

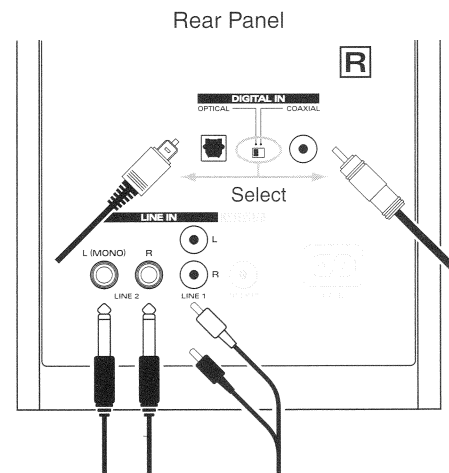

Bedienfeldbeschreibung

 Linker Kanal

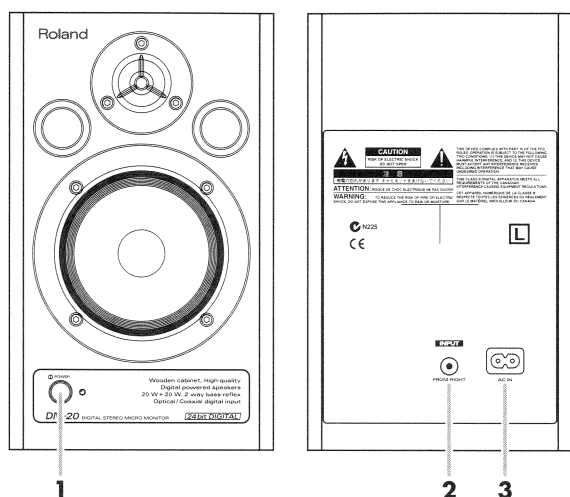

Linker Kanal

1. POWER-Schalter, POWER-Anzeige

Schaltet das Signal für den linken Kanal (L) ein/aus. Bei eingeschaltetem Signal leuchtet die Anzeige an der linken Seite des Schalters auf.

2. L-Kanal-Eingangsbuchse

Verbinden Sie diese Buchse mit der L-Kanal-Ausgangsbuchse **14** der Einheit auf der rechten Seite. Verwenden Sie für den Anschluss das beiliegende Lautsprecherkabel.

3. AC-Einlass

Schließen Sie hier das beiliegende Netzkabel an (s. 17). Stecken Sie das Kabel fest ein, damit es nicht versehentlich vom Anschluss getrennt werden kann.

Rechter Kanal

4. POWER-Schalter, POWER-Anzeige

Schaltet das Signal für den rechten Kanal (R) ein/aus. Bei eingeschaltetem Signal leuchtet die Anzeige an der rechten Seite des Schalters auf.

5. PHONES-Buchse

 
Wenn Sie an diese Buchse Kopfhörer anschließen, hören Sie keinen Sound aus den Lautsprechern.

6. BASS-Drehknopf

7. TREBLE-Drehknopf

Mit diesen Bedienelementen werden Bass und Treble reguliert. Drehen Sie die Drehknöpfe bis zur Mitte, um einen tiefen Ton zu erzeugen.

Rechter Kanal

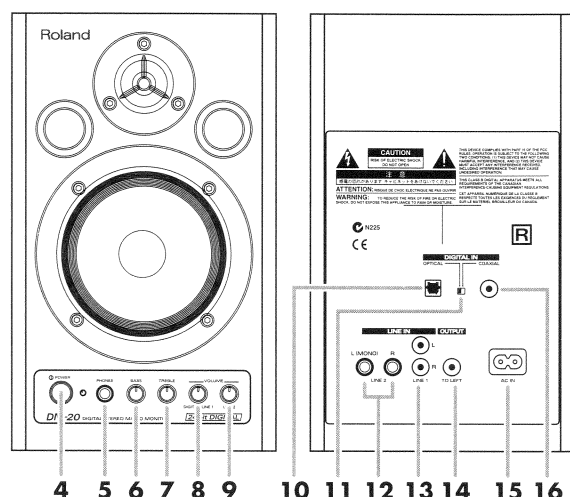

8. VOLUME-Schaltknopf (DIGITAL/LINE 1)

Stellt die Lautstärke der Geräte ein, die an den Digital-Eingängen **10**, **16** und an den LINE 1-Eingangsbuchsen **13** angeschlossen sind.

9. VOLUME-Schaltknopf (LINE 2)

Stellt die Lautstärke der Geräte ein, die an den LINE 2-Eingangsbuchsen **12** angeschlossen sind.

10. Anschluss Digitaleingabe (optisch)

Dies ist der Digitaleingabe-Anschluss für faseroptische Kabel.

11. Digitaleingabe-Auswahlschalter

Dieser Schalter wählt den Digitaleingabe-Anschluss **10** oder **16** auf der Rückseite aus. Wählen Sie den Anschluss, der für das Input-Signal verwendet wird.

12. LINE 2-Eingangsbuchsen (L (MONO), R) (1/4-Zoll-Cinchkbuchse)

Für Mono-Eingang verwenden Sie die L (MONO)-Buchse.

13. LINE 1-Eingangsbuchsen (L, R) (RCA-Stift)

14. L-Kanal-Ausgangsbuchse

Verbinden Sie diese Buchse mit der L-Kanal-Eingangsbuchse **2** der Einheit auf der linken Seite.

15. AC-Einlass

 
Schließen Sie hier das beiliegende Netzkabel an (s. 17). Stecken Sie das Kabel fest ein, damit es nicht versehentlich vom Anschluss getrennt werden kann.

16. Anschluss Digitaleingabe (koaxial)

Dies ist der Digitaleingabe-Anschluss für Koaxialkabel.

Anschlüsse


Anschliessen der Gummibeine (in der Packung)

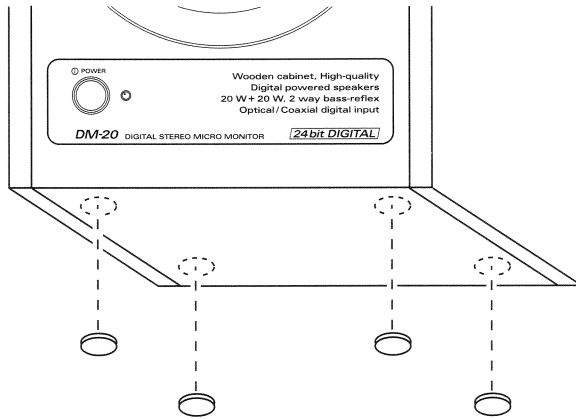


Vorsichtsmaßnahmen beim Anschließen des Netzkabels und beim Einschalten

- Um Fehlfunktionen und/oder Schäden an Lautsprechern oder anderen Geräten zu verhindern, reduzieren Sie stets die Lautstärke und schalten alle Geräte ab, bevor Sie die Verbindungen einrichten.
- Die Verwendung von Anschlusskabeln mit Widerstand kann der Grund für eine zu geringe Lautstärke sein. Verwenden Sie ein Anschlusskabel, das keinen Widerstand enthält.
- Nachdem die Anschlüsse fertig gestellt wurden, schalten Sie die verschiedenen Geräte in der angegebenen Reihenfolge ein. Wenn Sie die Geräte in der falschen Reihenfolge einschalten, besteht die Gefahr von Fehlfunktionen und/oder Schäden an Lautsprechern und anderen Geräten. (Gehen Sie beim Ausschalten der Geräte in der umgekehrten Reihenfolge vor).
< Angeschlossene Geräte → DM-20 (R) → DM-20 (L) >
- Dieses Gerät ist mit einer Schutzschaltung versehen. Ein kurzer Intervall (einige Sekunden) nach dem Einschalten ist erforderlich, bevor das Gerät normal arbeitet.

 Anschluss-Beispiel

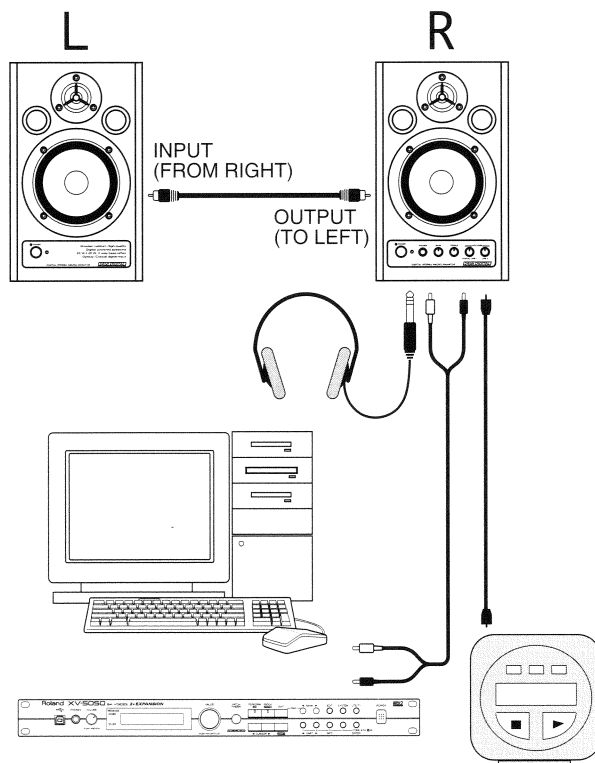


Soundmodul, CD-Player, MD-Gerät, etc.

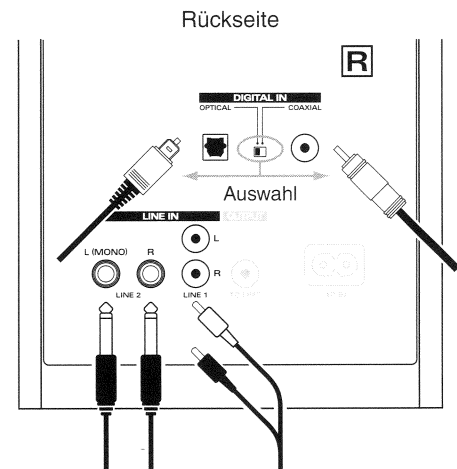 

Description

 Canal gauche

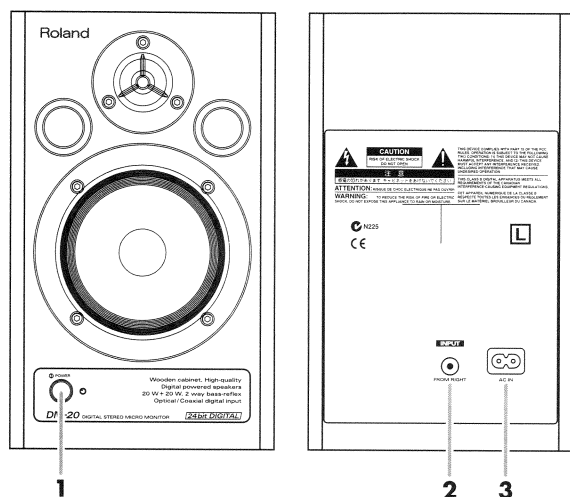

Canal gauche

1. Commutateur POWER, voyant POWER

Ce commutateur sert à activer ou à désactiver le canal gauche (L). Le voyant situé à côté du commutateur s'allume lorsque le canal est activé.

2. Prise d'entrée canal L (G)

Connectez à la prise de sortie du canal L **14** sur la droite de l'appareil. Pour la connexion, utilisez le câble pour enceintes inclus.

3. Connecteur AC IN

Branchez ici le cordon d'alimentation (p. 17). Enfichez-le fermement, pour éviter que le cordon ne soit déconnecté par accident.

Canal droit

4. Commutateur POWER, voyant POWER

Ce commutateur sert à activer ou à désactiver le canal droit (R). Le voyant situé à côté du commutateur s'allume lorsque le canal est activé.

5. Prise PHONES (casque)

 
Si vous reliez un casque à cette prise, le son ne passera plus sur les enceintes.

6. Bouton BASS

7. Bouton TREBLE

Ils servent à régler les basses et les aiguës. Pour obtenir un réglage neutre, mettre les boutons en position médiane.

Canal droit

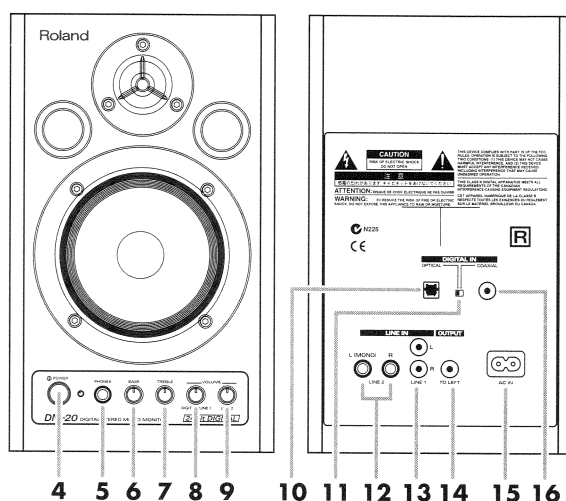

8. Bouton VOLUME (DIGITAL/LINE 1)

Ce bouton ajuste le volume des appareils connectés aux connecteurs d'entrée numérique (**10** et **16**) et aux prises d'entrée LINE 1 (**13**).

9. Bouton VOLUME (LINE 2)

Ce bouton ajuste le volume de l'appareil connecté aux prises d'entrée LINE 2 (**12**).

10. Connecteur d'entrée numérique (optique)

C'est le connecteur d'entrée numérique pour câble en fibre optique.

11. Commutateur Entrée numérique

Ce commutateur sert à sélectionner le connecteur d'entrée numérique **10** ou **16** sur la face arrière. Sélectionnez le connecteur utilisé pour le signal d'entrée.

12. Prises d'entrée LINE 2 (L (MONO), R) (1/4 po. type téléphone)

Pour l'entrée mono, utilisez la prise L (MONO).

13. Prises d'entrée LINE 1 (L, R) (type RCA)

14. Prise de sortie canal L (G)

Connectez à la prise de sortie du canal L **2** sur la gauche de l'appareil.

15. Connecteur AC IN

 
Branchez ici le cordon d'alimentation (p. 17). Enfichez-le fermement, pour éviter que le cordon ne soit déconnecté par accident.

16. Connecteur d'entrée numérique (coaxial)

C'est le connecteur d'entrée numérique pour câble coaxial.

Connexions


Fixer les pieds en caoutchouc (inclus)

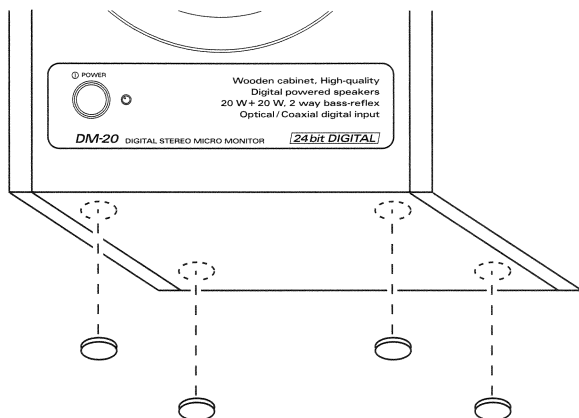


Précautions à prendre lors des connexions et de la mise sous tension

- Afin d'éviter un mauvais fonctionnement et/ou d'endommager les enceintes et autres périphériques, diminuez toujours le volume et mettez toujours les périphériques hors tension avant d'effectuer une connexion.
- L'utilisation d'un câble à résistance peut entraîner une perte de niveau sonore. Utilisez des câbles ne contenant pas de résistance.
- Quand les connexions sont effectuées, mettez sous tension les différents appareils dans l'ordre spécifié. Ne pas respecter cet ordre peut entraîner des dysfonctionnements et/ou endommager les enceintes ou tout autre appareil. (Lors de la mise hors tension, suivez la procédure inverse.)
< Appareils connectés → DM-20 (R) → DM-20 (L) >
- Cet appareil est muni d'un circuit de protection. Après la mise sous tension, un court délai (quelques secondes) est nécessaire avant que l'appareil fonctionne normalement.

 Exemple de connexion

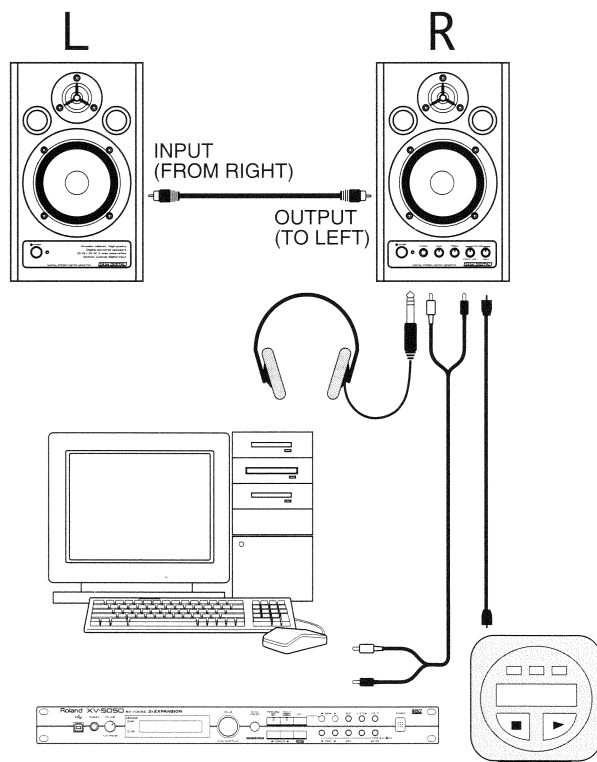


 Module de sons, Lecteur CD, Lecteur MD, etc.

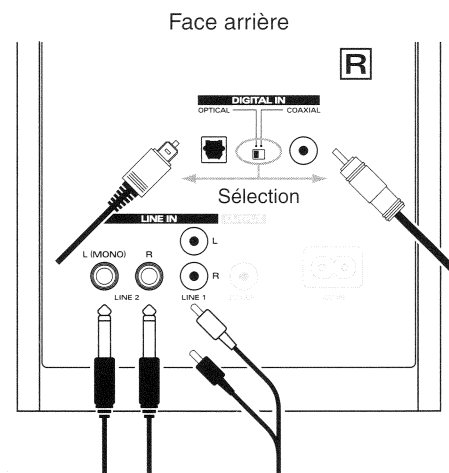

Descrizione del pannello

 Canale sinistro

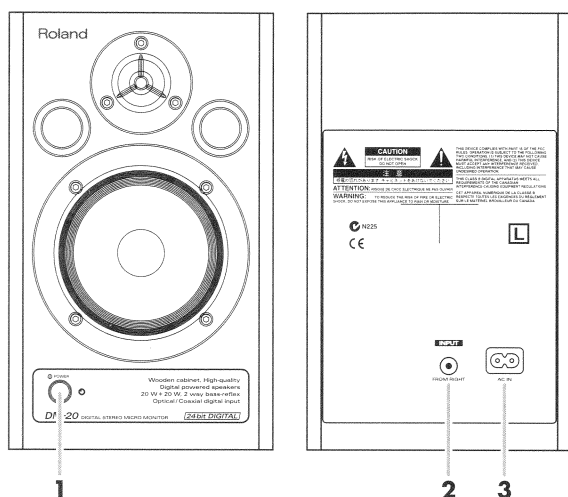

Canale sinistro

1. Interruttore POWER, Indicatore POWER

Questo accende o spegne il canale sinistro (S). Quando acceso, l'indicatore situato a lato dell'interruttore si illuminerà.

2. Presa d'ingresso canale sinistro

Collegare alla presa d'uscita del canale sinistro **14** sul lato destro dell'apparecchio. Per effettuare il collegamento, utilizzare il cavo per altoparlanti in dotazione.

3. Presa AC

Collegare a questa presa il cavo di alimentazione in dotazione (p. 17). Inserirlo a fondo per evitare che si scollegi accidentalmente.

Canale destro

4. Interruttore POWER, Indicatore POWER

Questo accende o spegne il canale destro (D). Quando acceso, l'indicatore situato a lato dell'interruttore si illuminerà.

5. Presa PHONES

 
Se si collegano le cuffie a questa presa, non verrà emesso alcun suono dagli altoparlanti.

6. Manopola BASS

7. Manopola TREBLE

Regolano i bassi e gli acuti. Regolare al centro per uniformare il suono.

Canale destro

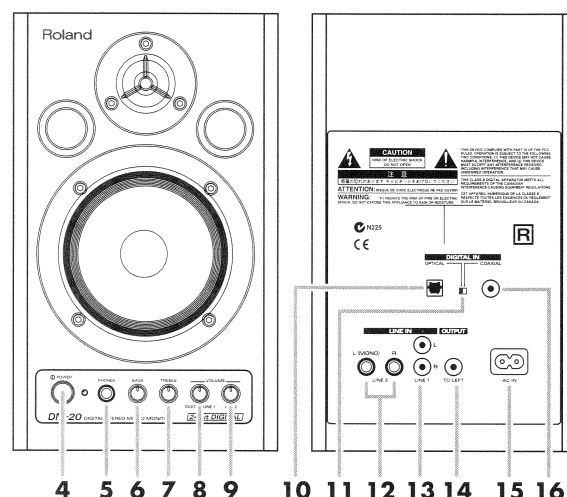

8. Manopola VOLUME (DIGITAL/LINE 1)

Questo regola il volume dei sistemi collegati ai connettori d'ingresso digitali **10**, **16** e prese d'ingresso LINE 1 **13**.

9. Manopola VOLUME (LINE 2)

Questo regola il volume dei sistemi collegati a prese d'ingresso LINE 2 **12**.

10. Connettore di ingresso digitale (ottico)

Connettore d'ingresso digitale per il cavo a fibre ottiche.

11. Interruttore di selezione ingresso digitale

Questo interruttore seleziona il connettore di ingresso digitale **10** o **16** sul pannello posteriore. Selezionare il connettore utilizzato per il segnale in entrata.

12. Prese d'ingresso LINE 2 (L (MONO), R) (1/4" tipo telefono)

Per ingresso mono, utilizzare la presa L (MONO).

13. Prese d'ingresso LINE 1 (L, R) (pin tipo RCA)

14. Presa d'uscita canale sinistro

Collegare alla presa d'ingresso del canale sinistro **2** sul lato sinistro dell'apparecchio.

15. Presa AC

 
Collegare a questa presa il cavo di alimentazione in dotazione (p. 17). Inserirlo a fondo per evitare che si scollegi accidentalmente.

16. Connettore di ingresso digitale (coassiale)

Connettore d'ingresso digitale per il cavo coassiale.

Collegamenti


Montare i Piedini in Gomma (Inclusi)

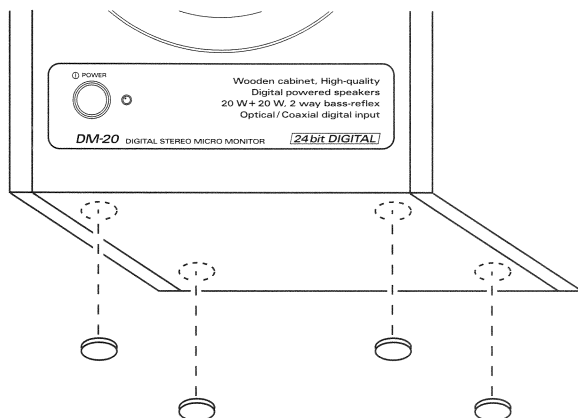


Precauzioni durante i collegamenti e l'accensione

- Per evitare malfunzionamenti e/o danni ai diffusori o ad altri dispositivi, abbassare sempre il volume e accertarsi che tutti gli apparecchi non siano alimentati prima di effettuare i collegamenti.
- L'uso di un cavo provvisto di un resistore potrebbe risultare in un livello audio basso. Utilizzare un cavo di collegamento senza resistore.
- Una volta terminati i collegamenti, accendere i vari dispositivi nell'ordine indicato. Se i dispositivi vengono accesi nell'ordine sbagliato, si rischia di provocare malfunzionamenti e/o danni ai diffusori e agli altri dispositivi. (Seguire la procedura al contrario nella fase di spegnimento.)
< Dispositivi collegati → DM-20 (R) → DM-20 (L) >
- Quest'unità è dotata di un circuito di protezione. È necessario un breve intervallo (di pochi secondi) dopo l'accensione prima che l'unità funzioni normalmente.

 Esempio di collegamenti

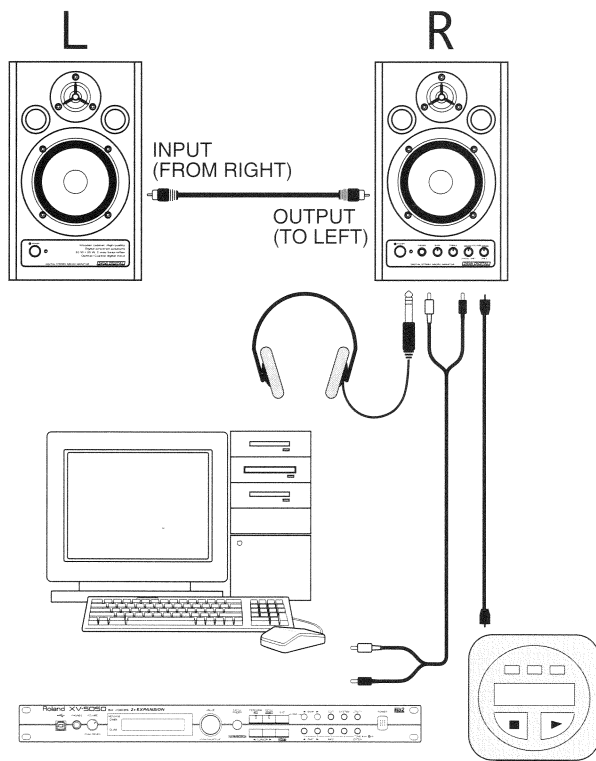


 Modulo sonoro, lettore CD, lettore MD, ecc.

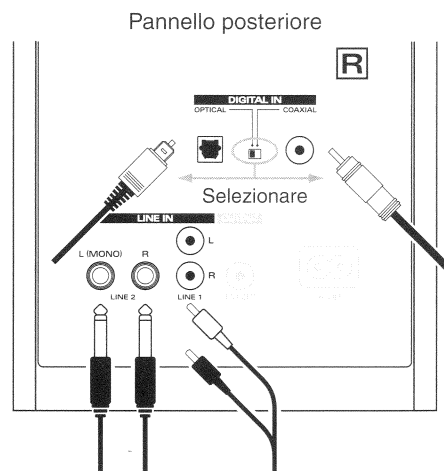

Conexiones


 
Incluye los pies de goma

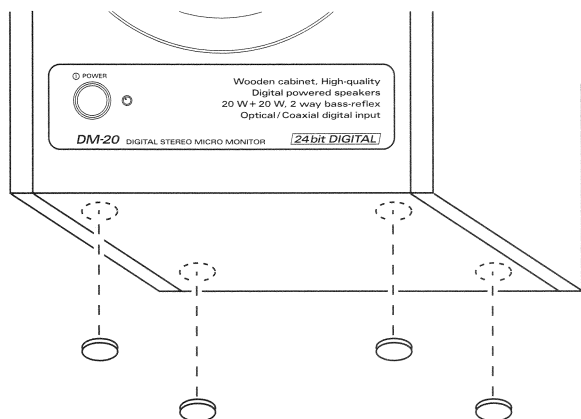

Precauciones que debe tener en cuenta cuando conecte y encienda la unidad

- Para evitar anomalías en el funcionamiento o daños en los altavoces u otros aparatos, baje siempre el volumen y apague todos los aparatos antes de realizar cualquier conexión.
- Si utiliza un cable que posea un reostato, el nivel de sonido puede bajar. Utilice un cable de conexión que no contenga un reostato.
- Una vez completadas las conexiones, encienda los diferentes aparatos en el orden especificado. Si enciende los aparatos en un orden equivocado, puede causar anomalías en el funcionamiento o daños en los altavoces y otros aparatos. (Cuando apague el sistema, siga estas instrucciones en el orden inverso)
< Aparatos conectados → DM-20 (R) → DM-20 (L) >
- Esta unidad está equipada con un circuito de protección. Se requiere de un breve intervalo (unos cuantos segundos) después de encender el suministro de energía antes de que la unidad opere normalmente.

  Ejemplo de conexión

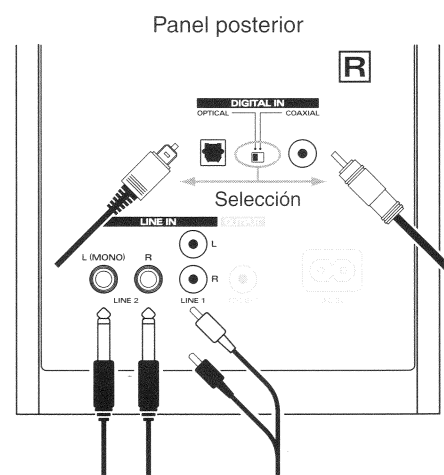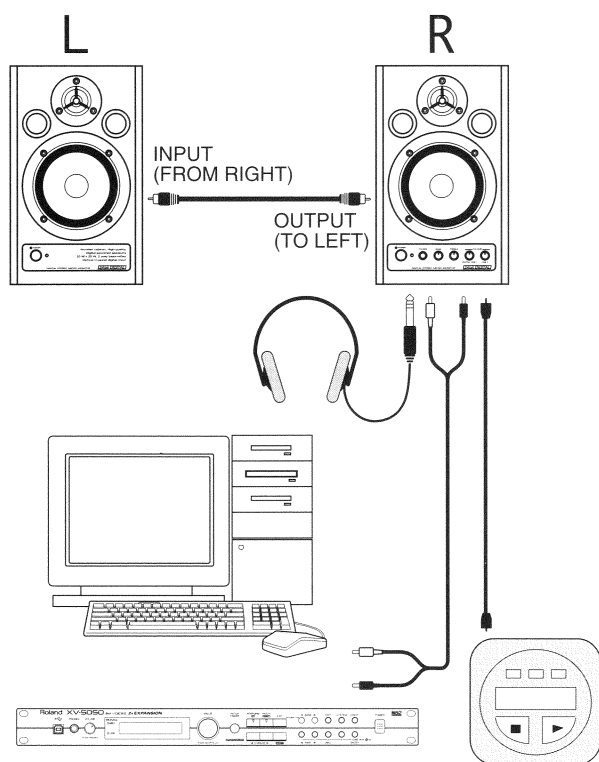

Módulo de sonido, reproductor de CD, reproductor de MD, etc.

Specifications

Rated Power Output

40 W (20 W + 20 W)

Speaker Units

Woofer: 12 cm /
4-3/4" (Magnetically-Shielded)
Tweeter: 4 cm /
1-5/8" (Magnetically-Shielded)

Frequency Range

50 Hz to 22 kHz

Nominal Input Level

Line 1: -10 dBu
Line 2: -10 dBu

Input Impedance

18 k ohms

Controls

< R Channel >
BASS Control Knob
TREBLE Control Knob
VOLUME Knob x 2

- VOLUME 1 (digital input + RCA phono)
- VOLUME 2 (1/4" phono)

POWER Switch
Digital Input Select Switch
< L Channel >
POWER Switch

Indicators

< R Channel/L Channel >
Power Indicator

Connectors

< R Channel >
Front: PHONES Jack (stereo 1/4" phone type)
Rear: LINE 1 Jacks (L, R) (RCA phono type)
LINE 2 Jacks (L (MONO), R) (1/4" phone type)
L Channel Output Jack (RCA phono type)
Digital Input Connector (Optical)
Digital Input Connector (Coaxial)
< L Channel >
Rear: L Channel Input Jack (RCA phono type)

Digital Input Section

Sampling Rate: 32/44.1/48/96 kHz
D/A Converter: 24 bits

Enclosure

2-way Bass-reflex type (Wooden Cabinet)

Power Supply

AC 117 V, AC 230 V or AC 240 V

Current Draw

230 mA (AC 117 V) x 2
120 mA (AC 230 V) x 2
110 mA (AC 240 V) x 2

Dimensions

< R Channel >
170 (W) x 261 (D) x 280 (H) mm
6-3/4 (W) x 10-5/16 (D) x 11-1/16 (H) inches
< L Channel >
170 (W) x 256 (D) x 280 (H) mm
6-3/4 (W) x 10-1/8 (D) x 11-1/16 (H) inches

Weight

< R Channel >
4.5 kg / 9 lbs 15 oz
< L Channel >
4.2 kg / 9 lbs 5 oz

Accessories

Owner's Manual
Speaker Cable (RCA phono type)
Power Cord
Rubber Foot x 4

* 0 dBu = 0.775 V rms

* In the interest of product improvement, the specifications and/or appearance of this unit are subject to change without prior notice.

For 230 V (English)

This box contains continental and British power cables. Please select the correct type for your country.

Für 230 V (Deutsch)

Diese Packung beinhaltet europäische und britische Netzkabel. Bitte suchen Sie sich die richtige Variante für Ihr Land aus.

Pour 230 V (Français)

Cette boîte contient des alimentations anglaises ou continentales. Merci de choisir l'alimentation appropriée de votre pays.

 
Per 230 V (Italiano)

La confezione contiene alimentatori con spina europea e Inglese. Scegliete quella adatta alla Vostra nazione.


Para 230 V (Español)

Esta caja contiene cables de corriente continentales y británicos. Por favor seleccione el tipo correcto para su país.

**Application of AC230 V
Power Cord**

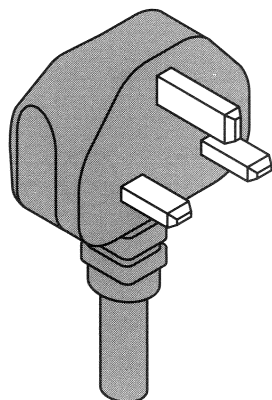

for UK

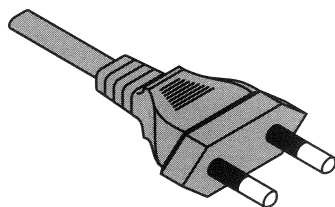 

except for UK

MEMO



This product complies with the requirements of European Directives EMC 89/336/EEC and LVD 73/23/EEC.

For EU Countries

FEDERAL COMMUNICATIONS COMMISSION RADIO FREQUENCY INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Unauthorized changes or modification to this system can void the users authority to operate this equipment.
This equipment requires shielded interface cables in order to meet FCC class B Limit.

For the USA

NOTICE

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

AVIS

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

For Canada

Information

When you need repair service, call your nearest Roland Service Center or authorized Roland distributor in your country as shown below.

AFRICA

EGYPT

Al Fanny Trading Office
9, EBN Hagar, Al Asakany Street,
ARD El Golf, Heliopolis,
Cairo 11341, EGYPT
TEL: 20-2-417-1828

REUNION

Maison FO - YAM Marcel
25 Rue Jules Hermann,
Chaudron - BP79 97 491
Ste Clotilde Cedex,
REUNION ISLAND
TEL: (0262) 218-429

SOUTH AFRICA

That Other Music Shop (PTY) Ltd.
11 Melle St., Braamfontein,
Johannesburg, SOUTH AFRICA
P.O.Box 32918, Braamfontein 2017
Johannesburg, SOUTH AFRICA
TEL: (011) 403 4105

Paul Bothner (PTY) Ltd.
17 Werdmuller Centre,
Main Road, Claremont 7708
SOUTH AFRICA

P.O.Box 23032, Claremont 7735,
SOUTH AFRICA
TEL: (021) 674 4030

ASIA

CHINA

Roland Shanghai Electronics Co., Ltd.
5F, No.1500 Pingliang Road
Shanghai 200090, CHINA
TEL: (021) 5580-0800

Roland Shanghai Electronics Co., Ltd. (BEIJING OFFICE)
10F, No.18 Anhuaxili
Chaoyang District, Beijing 100011
CHINA
TEL: (010) 6426-5050

Roland Shanghai Electronics Co., Ltd. (GUANGZHOU OFFICE)
2/F, No.30 Si You Nan Er Jie Yi
Xiang, Wu Yang Xin Cheng,
Guangzhou 510600, CHINA
Tel: (020) 8736-0428

HONG KONG

Tom Lee Music Co., Ltd. Service Division
22-32 Pun Shan Street, Tsuen
Wan, New Territories,
HONG KONG
TEL: 2415 0911

Parsons Music Ltd.
8th Floor, Railway Plaza, 39
Chatham Road South, T.S.T.,
Kowloon, HONG KONG
TEL: 2333 1863

INDIA

Rivera Digitec (India) Pvt. Ltd.
409, Nirman Kendra Mahalaxmi
Flats Compound Off. Dr. Edwin
Moses Road, Mumbai-400011,
INDIA
TEL: (022) 2493 9051

INDONESIA

PT Citra IntiRama
Jl. Cideng Timur No. 151-150
Jakarta Pusat
INDONESIA
TEL: (021) 6324170

KOREA

Cosmos Corporation
1461-9, Seocho-Dong,
Seocho Ku, Seoul, KOREA
TEL: (02) 3486-8855

MALAYSIA

BENTLEY MUSIC SDN BHD
140 & 142, Jalan Bukit Bintang
55100 Kuala Lumpur, MALAYSIA
TEL: (03) 2144-3333

PHILIPPINES

G.A. Yupangco & Co. Inc.
339 Gil J. Puyat Avenue
Makati, Metro Manila 1200,
PHILIPPINES
TEL: (02) 899 9801

SINGAPORE

Swee Lee Company
150 Sims Drive,
SINGAPORE 387381
TEL: 6846-3676

CRISTOFORI MUSIC PTE LTD
Blk 3014, Bedok Industrial Park E,
#02-2148, SINGAPORE 489980
TEL: 6243-9555

TAIWAN

ROLAND TAIWAN ENTERPRISE CO., LTD.
Room 5, 9th Fl., No. 112 Chung Shan
N.Road Sec 2, Taipei, TAIWAN,
R.O.C.
TEL: (02) 2561 3339

THAILAND

Theera Music Co., Ltd.
330 Verng NakornKasem, Soi 2,
Bangkok 10100, THAILAND
TEL: (02) 2248821

VIETNAM

Saigon Music
Suite DP-8
40 Ba Huyen Thanh Quan Street
Hochiminh City, VIETNAM
Tel: (08) 930-1969

AUSTRALIA/NEW ZEALAND

AUSTRALIA

Roland Corporation Australia Pty., Ltd.
38 Campbell Avenue
Dee Why West, NSW 2099
AUSTRALIA
TEL: (02) 9982 8266

NEW ZEALAND

Roland Corporation Ltd.
32 Shaddock Street, Mount Eden,
Auckland, NEW ZEALAND
TEL: (09) 3098 715

CENTRAL/LATIN AMERICA

ARGENTINA

Instrumentos Musicales S.A.
Av. Santa Fe 2055
(1123) Buenos Aires
ARGENTINA
TEL: (011) 4508-2700

BRAZIL

Roland Brasil Ltda
Rua San Jose, 780 Sala B
Parque Industrial San Jose
Cotia - Sao Paulo - SP, BRAZIL
TEL: (011) 4615 5666

COSTA RICA

JUAN Bansbach Instrumentos Musicales
Ave. 1, Calle 11, Apartado 10237,
San Jose, COSTA RICA
TEL: 258-0211

CHILE

Comercial Fancy II S.A.
Rut.: 96.919.420-1
Nataníel Cox #739, 4th Floor
Santiago - Centro, CHILE

EL SALVADOR OMNI MUSIC

75 Avenida Norte y Final
Alameda Juan Pablo II,
Edificio No.4010 San Salvador,
EL SALVADOR
TEL: 262-0788

MEXICO

Casa Veerkamp, s.a. de c.v.
Av. Toluca No. 323, Col. Olivar
de los Padres 01780 Mexico D.F.
MEXICO
TEL: (55) 5668-6699

PANAMA

SUPRO MUNDIAL, S.A.
Boulevard Andrews, Albrook,
Panama City, REP. DE PANAMA
TEL: 315-0101

PARAGUAY

Distribuidora De Instrumentos Musicales
J.E. Olear y ESQ. Manduvira
Asuncion PARAGUAY
TEL: (021) 492-124

URUGUAY

Todo Musica S.A.
Francisco Acuna de Figueroa 1771
C.P.: 11.800
Montevideo, URUGUAY
TEL: (02) 924-2335

VENEZUELA

Musicaland Digital C.A.
Av. Francisco de Miranda,
Centro Parque de Cristal, Nivel
C2 Local 20 Caracas
VENEZUELA
TEL: (212) 285-8586

EUROPE

AUSTRIA

Roland Elektronische Musikinstrumente HmbH. Austrian Office
Eduard-Bodem-Gasse 8,
A-6020 Innsbruck, AUSTRIA
TEL: (0512) 26 44 260

BELGIUM/HOLLAND/LUXEMBOURG

Roland Benelux N. V.
Houtstraat 3, B-2260, Oevel
(Westerlo) BELGIUM
TEL: (014) 575811

CZECH REP.

K-AUDIO
Kardasovska 626,
CZ-198 00 Praha 9,
CZECH REP.
TEL: (2) 666 10529

DENMARK

Roland Scandinavia A/S
Nordhavnsvej 7, Postbox 880,
DK-2100 Copenhagen
DENMARK
TEL: 3916 6200

FRANCE

Roland France SA
4, Rue Paul Henri SPAAK,
Parc de l'Esplanade, F 77 462 St.
Thibault, Lagny Cedex FRANCE
TEL: 01 600 73 500

FINLAND

Roland Scandinavia As, Filial Finland
Elannontie 5
FIN-01510 Vantaa, FINLAND
TEL: (019) 68 24 020

GERMANY

Roland Elektronische Musikinstrumente HmbH.
Oststrasse 96, 22844 Norderstedt,
GERMANY
TEL: (040) 52 60090

GREECE

STOLLAS S.A. Music Sound Light
155, New National Road
Patras 26442, GREECE
TEL: 2610 435400

HUNGARY

Roland East Europe Ltd.
Warehouse Area "DEPO" Pt.83
H-2046 Torokbalint, HUNGARY
TEL: (23) 511011

IRELAND

Roland Ireland
G2 Calmount Park, Calmount
Avenue, Dublin 12
Republic of IRELAND
TEL: (01) 4294444

ITALY

Roland Italy S. p. A.
Viale delle Industrie 8,
20020 Arcese, Milano, ITALY
TEL: (02) 937-78300

NORWAY

Roland Scandinavia Avd. Kontor Norge
Lilleakerveien 2 Postboks 95
Lilleaker N-0216 Oslo
NORWAY
TEL: 2273 0074

POLAND

MX MUSIC SP.Z.O.O.
UL. Gibraltarska 4,
PL-03664 Warszawa POLAND
TEL: (022) 679 44 19

PORTUGAL

Tecnologias Musica e Audio, Roland Portugal, S.A.
Cais Das Pedras, 8/9-1 Dto
4050-465 PORTO
PORTUGAL
TEL: (022) 608 00 60

ROMANIA

FBS LINES
Piata Libertatii 1,
535500 Gheorgheni, ROMANIA
TEL: (266) 364 609

RUSSIA

MuTek
3-Bogatyrskaya Str. 1.k.1
107 564 Moscow, RUSSIA
TEL: (095) 169 5043

SPAIN

Roland Electronics de España, S. A.
Calle Bolivia 239, 08020
Barcelona, SPAIN
TEL: (93) 308 1000

SWEDEN

Roland Scandinavia A/S SWEDISH SALES OFFICE
Danvik Center 28, 2 tr.
S-131 30 Nacka SWEDEN
TEL: (08) 702 00 20

SWITZERLAND

Roland (Switzerland) AG
Landstrasse 5, Postfach,
CH-4452 Itingen,
SWITZERLAND
TEL: (061) 927-8383

UKRAINE

TIC-TAC
Mira Str. 19/108
P.O. Box 180
295400 Munkachevo, UKRAINE
TEL: (03131) 414-40

UNITED KINGDOM

Roland (U.K.) Ltd.
Atlantic Close, Swansea
Enterprise Park, SWANSEA
SA7 9JF,
UNITED KINGDOM
TEL: (01792) 702701

MIDDLE EAST

BAHRAIN

Moon Stores
No.16, Bab Al Bahrain Avenue,
P.O.Box 247, Manama 304,
State of BAHRAIN
TEL: 211 005

CYPRUS

Radex Sound Equipment Ltd.
17, Diagorou Street, Nicosia,
CYPRUS

IRAN

MOCO, INC.
No.41 Nike St., Dr.Shariyati Ave.,
Roberoye Cerahe Mirdamad
Tehran, IRAN
TEL: (021) 285-4169

ISRAEL

Halilit P. Greenspoon & Sons Ltd.
8 Retzif Ha'aliya Hashnya St.
Tel-Aviv-Yafo ISRAEL
TEL: (03) 6823666

JORDAN

AMMAN Trading Agency
245 Prince Mohammad St.,
Amman 1118, JORDAN
TEL: (06) 464-1200

KUWAIT

Easa Husain Al Yousifi Est.
Abdullah Salem Street,
Safat, KUWAIT
TEL: 243-6399

LEBANON

Chahine S.A.L.
Gerge Zeidan St., Chahine Bldg.,
Achrafieh, P.O.Box: 16-5857
Beirut, LEBANON
TEL: (01) 20-1441

QATAR

Al Emadi Co. (Badie Studio & Stores)
P.O. Box 62, Doha, QATAR
TEL: 4423-554

SAUDI ARABIA

aDawlah Universal Electronics APL
Corniche Road, Aldossary Bldg.,
1st Floor, Alkhobar,
SAUDI ARABIA

P.O.Box 2154, Alkhobar 31952
SAUDI ARABIA
TEL: (03) 898 2081

SYRIA

Technical Light & Sound Center
Rawda, Abdul Qader Jazairi St.
Bldg. No. 21, P.O.Box 13520,
Damascus, SYRIA
TEL: (011) 223-5384

TURKEY

Ant Muzik Aletleri Ithalat Ve Ithracat Ltd Sti
Siraselviler Caddesi Siraselviler
Pasaji No:74/20
Taksim - Istanbul, TURKEY
TEL: (0212) 249624

U.A.E.

Zak Electronics & Musical Instruments Co. L.L.C.
Zabeel Road, Al Sherooq Bldg.,
No. 14, Grand Floor, Dubai, U.A.E.
TEL: (04) 3360715

NORTH AMERICA

CANADA

Roland Canada Music Ltd. (Head Office)
5480 Parkwood Way Richmond
B. C., V6V 2M4 CANADA
TEL: (604) 270 6626

Roland Canada Music Ltd. (Toronto Office)
170 Admiral Boulevard
Mississauga On L5T 2N6
CANADA
TEL: (905) 362 9707

U. S. A.

Roland Corporation U.S.
5100 S. Eastern Avenue
Los Angeles, CA 90040-2938,
U. S. A.
TEL: (323) 890 3700

お問い合わせの窓口

<電話> 受付時間：午前10時～午後5時（土、日曜、祝日および弊社規定の休日を除く）

DTM商品の取り扱いに関するお問い合わせ先・・・ローランドDTMホットライン

■ 東京 TEL (03) 3251-5791 ■ 大阪 TEL (06) 6345-9785 ■ 浜松 TEL (053) 414-7005

ビデオ関連商品の取り扱いに関するお問い合わせ先・・・ローランド・ビデオキャンバス・ホットライン

■ 東京 TEL (03) 3251-3429 ■ 大阪 TEL (06) 6345-9789 ■ 浜松 TEL (053) 414-7530

その他の商品の取り扱いに関するお問い合わせ先・・・ローランドお客様相談センター

■ 東京 TEL (03) 3251-6150 ■ 大阪 TEL (06) 6345-9500 ■ 浜松 TEL (053) 414-7120

<住所> 〒433-8118 静岡県浜松市高丘西4-7-19 ローランド浜松流通センター

修理に関するお問い合わせは・・・商品をお求めの販売店か「サービスの窓口」に記載の営業所、またはサービスステーションまでご相談ください。「サービスの窓口」は保証書に同封、もしくは封筒の裏面に記載されています。

※上記窓口の名称、所在地、電話番号等は、予告なく変更することがありますのでご了承ください。

'03.4.1 現在

 **Roland®**

C5100022

UPC

C5100022



10981

Roland