

Roland®

EXPRESSION PEDAL EV-7


OWNER'S MANUAL

Thank you for purchasing ROLAND EV-7 EXPRESSION PEDAL.

■ FEATURES

- The EV-7 expression pedal is for use exclusively with keyboards, synthesizers, and organs that feature internal expression circuitry.
- The EV-7 features a longer stroke than that available previous expression pedals, allowing greater dynamic expression for your performances.
- The pedal includes a minimum volume setting. The minimum volumes for your performances can be set however you wish, so you may thus alter the volume control range to suit any performance.
- Rubber feet allowing you to change the unit angle (three angles possible) are also included.

■ CONNECTION

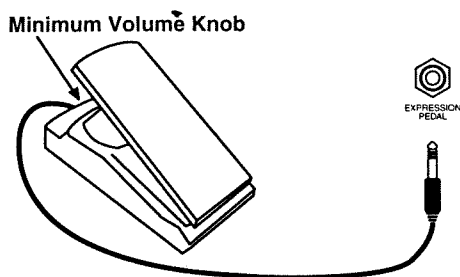

*When connecting or while in use, do not pull or yank the cord with force, as doing so may result in breakdown.

■ OPERATING THE UNIT

1. Connect the EV-7 with the keyboard as shown in "CONNECTION."
2. Press the pedal down as far as it goes, and set the maximum volume using the volume knobs of the keyboard.
3. Return the position of the pedal to the highest position, and set the minimum volume by using the Minimum Volume Knob on the EV-7.
4. You can operate the pedal to control the keyboard, synthesizer, or organ volume and the volume range set with the EV-7's minimum volume setting. _

■ SPECIFICATIONS

Main Volume Pedal
Minimum Volume Knob
Stereo Plug Cord (2 m)
Dimensions: 138 (W) x 298 (D) x 98 (H) mm
5-7/16 (W) x 11-3/4 (D) x 3-7/8 (H) inches
Weight: 1.2 kg / 1 lbs-11 oz
Accessory: Rubber Feet x 2, Owner's Manual

* In the interest of product improvement, the specifications and/or appearance of this unit are subject to change without prior notice.


Copyright © 1998 ROLAND CORPORATION

All rights reserved. No part of this publication may be reproduced in any form without the written permission of ROLAND CORPORATION.

Before using this unit, carefully read the sections entitled: "USING THE UNIT SAFELY" and "IMPORTANT NOTES". These sections provide important information concerning the proper operation of the unit. Additionally, in order to feel assured that you have gained a good grasp of every feature provided by your new unit, this manual should be read in its entirety. The manual should be saved and kept on hand as a convenient reference.

■ CHANGING THE UNIT ANGLE

1. Use a Phillips head screwdriver to remove the two rubber feet attached to the EV-7.
 2. Using the same screws used to hold the original pair of rubber feet, attach the other included set of rubber feet.
- * Be sure to use only the screws that are used to hold the original pair of rubber feet. Using other screws may result in damage to the unit.

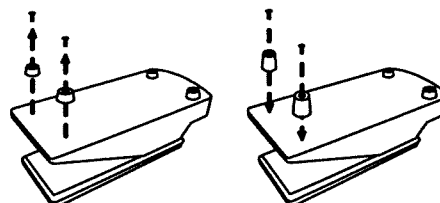

■ IMPORTANT NOTES

In addition to the items listed under "USING THE UNIT SAFELY," please read and observe the following:

- This expression pedal is designed exclusively for use with products from Roland / Boss corporation. Do not connect it to a product not from Roland / Boss corporation, as doing so may result in breakdown.

Placement

- Do not expose the unit to direct sunlight, place it near devices that radiate heat, leave it inside an enclosed vehicle, or otherwise subject it to temperature extremes. Also, do not allow lighting devices that normally are used while their light source is very close to the unit (such as a piano light), or powerful spotlights to shine upon the same area of the unit for extended periods of time. Excessive heat can deform or discolor the unit.
- To avoid possible breakdown, do not use the unit in a wet area, such as an area exposed to rain or other moisture.

Maintenance

- For everyday cleaning wipe the unit with a soft, dry cloth or one that has been slightly dampened with water. To remove stubborn dirt, use a cloth impregnated with a mild, non-abrasive detergent. Afterwards, be sure to wipe the unit thoroughly with a soft, dry cloth.

Additional Precautions

- Use a reasonable amount of care when using the unit's buttons, sliders, or other controls; and when using its jacks and connectors. Rough handling can lead to malfunctions.
- When connecting / disconnecting all cables, grasp the connector itself—never pull on the cable. This way you will avoid causing shorts, or damage to the cable's internal elements.




USING THE UNIT SAFELY

INSTRUCTIONS FOR THE PREVENTION OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

About ⚠ WARNING and ⚠ CAUTION Notices


⚠ WARNING	Used for instructions intended to alert the user to the risk of death or severe injury should the unit be used improperly.
⚠ CAUTION	Used for instructions intended to alert the user to the risk of injury or material damage should the unit be used improperly. * Material damage refers to damage or other adverse effects caused with respect to the home and all its furnishings, as well to domestic animals or pets.


About the Symbols



	The ⚠ symbol alerts the user to important instructions or warnings. The specific meaning of the symbol is determined by the design contained within the triangle. In the case of the symbol at left, it is used for general cautions, warnings, or alerts to danger.
	The ⚡ symbol alerts the user to items that must never be carried out (are forbidden). The specific thing that must not be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the unit must never be disassembled.
	The ● symbol alerts the user to things that must be carried out. The specific thing that must be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the power-cord plug must be unplugged from the outlet.


ALWAYS OBSERVE THE FOLLOWING



⚠ WARNING

• Before using this unit, make sure to read the instructions below, and the Owner's Manual. 


• Do not attempt to repair the unit, or replace parts within it (except when this manual provides specific instructions directing you to do so). Refer all servicing to your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the "Information" page. 


• Never use or store the unit in places that are: 
 • Subject to temperature extremes (e.g., direct sunlight in an enclosed vehicle, near a heating duct, on top of heat-generating equipment); or are 
 • Damp (e.g., baths, washrooms, on wet floors); or are
 • Humid; or are
 • Exposed to rain; or are
 • Dusty; or are
 • Subject to high levels of vibration.

• Make sure you always have the unit placed so it is level and sure to remain stable. Never place it on stands that could wobble, or on inclined surfaces. 


• Do not allow any objects (e.g., flammable material, coins, pins); or liquids of any kind (water, soft drinks, etc.) to penetrate the unit. 



⚠ WARNING

• In households with small children, an adult should provide supervision until the child is capable of following all the rules essential for the safe operation of the unit. 

• Protect the unit from strong impact. (Do not drop it!) 

⚠ CAUTION

• Try to prevent cords and cables from becoming entangled. Also, all cords and cables should be placed so they are out of the reach of children. 

• Never climb on top of, nor place heavy objects on the unit. 

 Roland®

01566878

UPC

01566878



10981

 Roland®