


Thank you, and congratulations on your choice of BOSS FS-6 Dual Foot Switch. Before using this unit, carefully read the sections entitled: "USING THE UNIT SAFELY" and "IMPORTANT NOTES." These sections provide important information concerning the proper operation of the unit. Additionally, in order to feel assured that you have gained a good grasp of every feature provided by your new unit, this manual should be read in its entirety. The manual should be saved and kept on hand as a convenient reference.

■ Features

- This unit combines the functions of the FS-5L (latch type) and FS-5U (momentary type) foot switches. Both of the unit's foot switches may be set to function as either a latch or momentary type switch.
- You can connect to gear equipped with TRS 1/4" phone jacks using a connection cable with stereo 1/4" phone plugs at both ends.
- The FS-6 can be connected to another FS-6, a FS-5U/5L, or an AB-2.

■ Panel Description

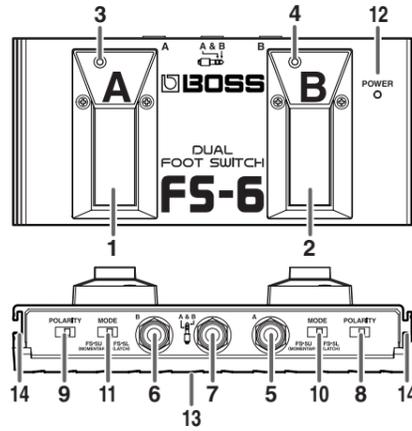

12. POWER Indicator

This lights when the power is on (when a plug is connected to a jack).
 * If this indicator goes dim or no longer lights while the power is on, the battery is near exhaustion and should be replaced immediately.

13. Battery Cover

Open this cover to replace the battery. For instructions on replacing the battery, refer to "Changing the Battery."

14. FS Joint Panel

The FS-6 can be connected to another FS-6, a FS-5U/5L, or an AB-2.

Before Using

Connect the battery supplied to the snap cord with correct polarity.

■ Connections

* To prevent malfunction and/or damage to speakers or other devices, always turn down the volume, and turn off the power on all devices before making any connections.

1. Pedal Switch A

Use this as a switch for the device connected to Jack A or Jack A & B. Refer to "Connections."

2. Pedal Switch B

Use this as a switch for the device connected to Jack B or Jack A & B. Refer to "Connections."

3. Pedal Switch A Indicator

When pedal switch A is set to the latch type function, this indicator alternately lights or goes out each time the pedal switch is pressed. When pedal switch A is set to the momentary type function, this indicator lights only while the pedal switch is held down.

4. Pedal Switch B Indicator

When pedal switch B is set to the latch type function, this indicator alternately lights or goes out each time the pedal switch is pressed. When pedal switch B is set to the momentary type function, this indicator lights only while the pedal switch is held down.

5. Jack A

Connect the device being controlled with pedal switch A here. Use a connection cable with 1/4" phone plugs at both ends.

6. Jack B

Connect the device being controlled with pedal switch B here. Use a connection cable with 1/4" phone plugs at both ends.

7. Jack A & B

Connect devices equipped with TRS 1/4" phone jacks here. Use a connection cable with stereo 1/4" phone plugs at both ends.

* Jacks A, B, and A & B also function as power switches. The power is switched on when a plug is inserted in any of these jacks, and switched off when no plug is connected. Unplug any cable from these jacks whenever you are not using the unit.

8. POLARITY Switch A

This switches the polarity of pedal switch A. After referring to the owner's manual for the device you are connecting, switch this to the appropriate setting.

9. POLARITY Switch B

This switches the polarity of pedal switch B. After referring to the owner's manual for the device you are connecting, switch this to the appropriate setting.

10. MODE Switch A

This sets the function for pedal switch A to LATCH or MOMENTARY.

11. MODE Switch B

This sets the function for pedal switch B to LATCH or MOMENTARY.

LATCH: Alternately switches on or off each time the pedal switch is pressed.
MOMENTARY: Switches on (off) while the pedal switch is held down, and off (on) when the switch is released.

Use the FS-6 with BOSS or Roland devices compatible with the FS-5L or FS-5U.
 * No assurances can be given with respect to the proper functioning of this unit if it is connected with devices or jacks other than those specified.

1. Open the battery cover.
 2. Remove the old battery from the battery housing, and remove the snap cord connected to it.
 3. Connect the snap cord to the new battery.
 4. Place the battery inside the housing.
 5. Close the battery cover.
- * Press the cover until you hear it click into place.

■ Troubleshooting

Power not turning on (POWER indicator not lighting)

- Is the cable fully plugged into the jack?
 → The power switches when a cable is plugged into one of the jacks. Make sure the cable is plugged in firmly and securely.
- Is the battery dead?
 → Replace the battery with a new one as described in "Changing the Battery."
- Are you using a connection cable with stereo 1/4" phone plugs at both ends to connect to Jack A or Jack B?
 → Use a connection cable with mono 1/4" phone plugs at both ends.

Connected device not operating properly

- Have you connected to the appropriate jack on the device?
 → Check the type of jack used on the device being connected.
- Is the POWER indicator dimmed or off?
 → The battery may be dead. Replace the battery with a new one as described in "Changing the Battery."
- Is the setting of the POLARITY switch correct?
 → Set the polarity in accordance with the specifications for the connected device.
- Is the MODE switch setting correct?
 → Set the MODE in accordance with the specifications for the connected device.

Pedal switch indicator not lighting

- Is the switch off?
 → Depress the pedal switch.
- Is the POLARITY switch set firmly in the correct position?
 → Make sure the POLARITY switch is set securely in the correct position.

Indicator dimmed/off

→ The battery may be dead. Replace the battery with a new one as described in "Changing the Battery."

■ Specifications

- **Controls**
 Pedal Switch A, B / POLARITY Switch A, B / Mode Switch A, B
- **Connectors**
 Jack A, Jack B (1/4 inch phone type)
 Jack A & B (TRS 1/4 inch phone type)
- **Power Supply**
 DC 9 V: Dry battery/9 V 6F22 (carbon), 6LR61 (alkaline)
 * Expected battery life under continuous use:
 Carbon: 70 hours, Alkaline: 100 hours
 (A and B = ON, MODE = LATCH)
 These figures will vary depending on the actual conditions of use.
- **Current Draw**
 8 mA (max.)
- **Dimensions**
 188 (W) x 91 (D) x 43 (H) mm
 7-7/16 (W) x 3-5/8 (D) x 1-3/4 (H) inches
- **Weight**
 470 g / 1 lb 1 oz (including battery)
- **Accessories**
 Dry battery/9 V (6F22), Owner's Manual

- * In the interest of product improvement, the specifications and/or appearance of this unit are subject to change without prior notice.

USING THE UNIT SAFELY

INSTRUCTIONS FOR THE PREVENTION OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

About ⚠ WARNING and ⚠ CAUTION Notices

⚠ WARNING	Used for instructions intended to alert the user to the risk of death or severe injury should the unit be used improperly.
⚠ CAUTION	Used for instructions intended to alert the user to the risk of injury or material damage should the unit be used improperly. * Material damage refers to damage or other adverse effects caused with respect to the home and all its furnishings, as well to domestic animals or pets.

About the Symbols

⚠	The ⚠ symbol alerts the user to important instructions or warnings. The specific meaning of the symbol is determined by the design contained within the triangle. In the case of the symbol at left, it is used for general cautions, warnings, or alerts to danger.
ⓧ	The ⓧ symbol alerts the user to items that must never be carried out (are forbidden). The specific thing that must not be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the unit must never be disassembled.
⓪	The ⓪ symbol alerts the user to things that must be carried out. The specific thing that must be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the power-cord plug must be unplugged from the outlet.

ALWAYS OBSERVE THE FOLLOWING

⚠ WARNING

- Before using this unit, make sure to read the instructions below, and the Owner's Manual. ⚠
- Do not open (or modify in any way) the unit. ⓧ
- Do not attempt to repair the unit, or replace parts within it (except when this manual provides specific instructions directing you to do so). Refer all servicing to your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the "Information."
- Never use or store the unit in places that are:
 - Subject to temperature extremes (e.g., direct sunlight in an enclosed vehicle, near a heating duct, on top of heat-generating equipment); or are
 - Damp (e.g., baths, washrooms, on wet floors); or are
 - Humid; or are
 - Exposed to rain; or are
 - Dusty; or are
 - Subject to high levels of vibration.
- Make sure you always have the unit placed so it is level and sure to remain stable. Never place it on stands that could wobble, or on inclined surfaces.
- Do not allow any objects (e.g., flammable material, coins, pins); or liquids of any kind (water, soft drinks, etc.) to penetrate the unit.
- Immediately turn the power off, and request servicing by your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the "Information" when:
 - If smoke or unusual odor occurs
 - Objects have fallen into, or liquid has been spilled onto the unit; or
 - The unit has been exposed to rain (or otherwise has become wet); or
 - The unit does not appear to operate normally or exhibits a marked change in performance.
- In households with small children, an adult should provide supervision until the child is capable of following all the rules essential for the safe operation of the unit. ⚠
- Protect the unit from strong impact. (Do not drop it!) ⓧ
- Batteries must never be recharged, heated, taken apart, or thrown into fire or water. ⓧ

⚠ CAUTION

- Try to prevent cords and cables from becoming entangled. Also, all cords and cables should be placed so they are out of the reach of children. ⚠
- Never climb on top of, nor place heavy objects on the unit. ⓧ
- Disconnect all cords coming from external devices before moving the unit. ⓧ
- If used improperly, batteries may explode or leak and cause damage or injury. In the interest of safety, please read and observe the following precautions. ⚠
- Carefully follow the installation instructions for batteries, and make sure you observe the correct polarity. ⚠
- Remove the batteries whenever the unit is to remain unused for an extended period of time. ⚠
- If a battery has leaked, use a soft piece of cloth or paper towel to wipe all remnants of the discharge from the battery compartment. Then install new batteries. To avoid inflammation of the skin, make sure that none of the battery discharge gets onto your hands or skin. Exercise the utmost caution so that none of the discharge gets near your eyes. Immediately rinse the affected area with running water if any of the discharge has entered the eyes. ⚠
- Never keep batteries together with metallic objects such as ballpoint pens, necklaces, hairpins, etc. ⚠
- Used batteries must be disposed of in compliance with whatever regulations for their safe disposal that may be observed in the region in which you live. ⚠

CE For EU Countries
 This product complies with the requirements of European Directive 89/336/EEC.

BOSS Corporation
 Copyright © 2004 BOSS CORPORATION
 All rights reserved. No part of this publication may be reproduced in any form without the written permission of BOSS CORPORATION.

IMPORTANT NOTES

In addition to the items listed under "USING THE UNIT SAFELY", please read and observe the following:

Power Supply: Use of Batteries

- Batteries should always be installed or replaced before connecting any other devices. This way, you can prevent malfunction and/or damage to speakers or other devices.
- A battery was installed in the unit before it left the factory. The life of this battery may be limited, however, since its primary purpose was to enable testing.
- Before connecting this unit to other devices, turn off the power to all units. This will help prevent malfunctions and/or damage to speakers or other devices.

Placement

- Noise may be produced if wireless communications devices, such as cell phones, are operated in the vicinity of this unit. Such noise could occur when receiving or initiating a call, or while conversing. Should you experience such problems, you should relocate such wireless devices so they are at a greater distance from this unit, or switch them off.
- Do not expose the unit to direct sunlight, place it near devices that radiate heat, leave it inside an enclosed vehicle, or otherwise subject it to temperature extremes. Excessive heat can deform or discolor the unit.
- When moved from one location to another where the temperature and/or humidity is very different, water droplets (condensation) may form inside the unit. Damage or malfunction may result if you attempt to use the unit in this condition. Therefore, before using the unit, you must allow it to stand for several hours, until the condensation has completely evaporated.

Maintenance

- For everyday cleaning wipe the unit with a soft, dry cloth or one that has been slightly dampened with water. To remove stubborn dirt, use a cloth impregnated with a mild, non-abrasive detergent. Afterwards, be sure to wipe the unit thoroughly with a soft, dry cloth.
- Never use benzene, thinners, alcohol or solvents of any kind, to avoid the possibility of discoloration and/or deformation.

Additional Precautions

- Use a reasonable amount of care when using the unit's buttons, sliders, or other controls; and when using its jacks and connectors. Rough handling can lead to malfunctions.
- When connecting / disconnecting all cables, grasp the connector itself—never pull on the cable. This way you will avoid causing shorts, or damage to the cable's internal elements.
- To avoid disturbing your neighbors, try to keep the unit's volume at reasonable levels (especially when it is late at night).
- When you need to transport the unit, package it in the box (including padding) that it came in, if possible. Otherwise, you will need to use equivalent packaging materials.

Information

When you need repair service, call your nearest Roland Service Center or authorized Roland distributor in your country as shown below.

AFRICA	EGYPT Al Faray Trading Office 9, El-Hagar At, Al-Kharyat Street, Ain Helwan, Helwan, Cairo 11541, EGYPT TEL: 20-2-417-1828	REUNION Maison TOU-YAM Marcel 25 Rue Jules Verne, Chateaufort 97747 01 St. Charles-Code REUNION (FRANCE) TEL: (02) 514-629	SOUTH AFRICA That Other Music Shop (PTY) Ltd. 11, Meib St., Brandfontein, Johannesburg, SOUTH AFRICA P.O. Box 12918, Braamfontein 2017 Johannesburg, SOUTH AFRICA TEL: (011) 483-4185	PAUL BOTNER (PTY) Ltd. 12, Westmead Centre, Main Road, Claremont 7708 SOUTH AFRICA P.O. BOX 2382, Claremont 7708, SOUTH AFRICA TEL: (021) 674-4030	ASIA	CHINA Roland Shanghai Electronics Co., Ltd. 3F, No. 1301 Jingling Road Shanghai 200090, CHINA TEL: (021) 5980-8000	BEIJING OFFICE 18F, No. 19, Anhuashan Chaoyang District, Beijing 100011 CHINA TEL: (010) 4226-5200	ROLAND SHANGHAI ELECTRONICS CO., LTD. (BEIJING OFFICE) 2/F, No. 30-31 Yu Nian Er Jie Yi Xiang, Wu Jiang New City, Guangdong 10000, CHINA Tel: (020) 8756-0429	HONG KONG Tom Lee Music Co., Ltd. Service Division 22-32 Pao Shan Street, Tsuen Wan, New Territories, HONG KONG TEL: (283) 5205	PARSONS MUSIC LTD. 88 Floor, Railway Plaza, 39 Cheong Chee Street, S.T.C., Kowloon, HONG KONG TEL: 233 1963	INDIA Rivers Digital India Pvt. Ltd. 409, Neram Kodambakkam Park Compound 3rd Fl, Ekkam Mees Road, Mumbai 400011, INDIA TEL: (022) 2463-9851	JAKARTA PEARL INDONESIA Jl. Cikini 41B No. 19-20 Jakarta Pusat INDONESIA TEL: (021) 4234170	INDONESIA PT Citra IntiRama Jl. Cikini 41B No. 19-20 Jakarta Pusat INDONESIA TEL: (021) 4234170	KOREA Cosmos Corporation 148-6, Seochon-Dong, Seochu-Ku, Seoul, KOREA TEL: (02) 348-8855	MALAYSIA BENTLEY MUSIC SDN BHD 140 & 142, Jalan Bukit Bintang 50100 Kuala Lumpur, MALAYSIA TEL: (03) 214-0133	PHILIPPINES G.A. Tapangco & Co. Inc. 399 Gilmore Road, Makati, Metro Manila 1203, PHILIPPINES TEL: (02) 899-9821	SINGAPORE Swee Lee Company 120 Selegie Road, SINGAPORE 367811 TEL: 424-9133	CRISTOFORO MUSIC PTE LTD 101, Telok Ayer St., Singapore 068490 TEL: (65) 434-9555	TAIWAN ROLAND TAIWAN ENTERPRISE CO., LTD. Room 5, 5th Fl., 112 Chung Shan N. Road, Sec. 2, Taipei, TAIWAN, R.O.C. TEL: (02) 2563-3339	THAILAND Theora Music Co., Ltd. 330 Veeng Nakornkarn, Soi 2, Bangkok 10100, THAILAND TEL: (02) 228-8211	P.O. BOX 2382, Claremont 7708, SOUTH AFRICA TEL: (021) 674-4030	VIETNAM Saigon Music Suite 1018 40 Ba Huyen Thanh Quan Street Ho Chi Minh City, VIETNAM Tel: (81) 930-1969	NEW ZEALAND Roland Corporation Ltd. 32 Shaddock Street, Mount Eden, Auckland, NEW ZEALAND TEL: (09) 289-7878	AUSTRALIA Roland Corporation Australia Pty., Ltd. 28 Campbell Avenue De Winton, Vic. 3069 AUSTRALIA TEL: (0512) 24-2420	NEW ZEALAND Roland Corporation Ltd. 32 Shaddock Street, Mount Eden, Auckland, NEW ZEALAND TEL: (09) 289-7878	AUSTRALIA Roland Corporation Australia Pty., Ltd. 28 Campbell Avenue De Winton, Vic. 3069 AUSTRALIA TEL: (0512) 24-2420	ARGENTINA Instrumentos Musicales S.A. Av. San Martin 2075 (112) Buenos Aires ARGENTINA TEL: (011) 4598-2700	BRAZIL Roland Brazil Ltda Rua Sao Jose, 780 Sala 503 Parque Industrial San Jose Cotia - Sao Paulo - SP, BRAZIL TEL: (011) 4455-5666	COSTA RICA JUAN RAMOS Instrumentos Musicales Avenida Calle 11, Apartado 1037, San Jose, COSTA RICA TEL: 204-2111	CHILE Commercial Fancy II S.A. Rca. No. 919, Dpto. 1 Nacional Cerro 479, 4th Floor Santiago - Centro, CHILE TEL: (02) 240-6000	EL SALVADOR OHN MUSIC SONS BHD Edificio No. 801 San Salvador, EL SALVADOR TEL: 262-0789	MEXICO Casa Vozkampan s.a. de c.v. Av. Ixtapa No. 323, Cd. Obrar de los Palcos 07700 Mexico D.F. MEXICO TEL: (05) 5646-6669	PANAMA ROLAND PANAMA S.A. Boulevard Andros, Abasco, Panama City, REP. DE PANAMA TEL: 370-1000	CRISTOFORO MUSIC PTE LTD 101, Telok Ayer St., Singapore 068490 TEL: (65) 434-9555	TAIWAN ROLAND TAIWAN ENTERPRISE CO., LTD. Room 5, 5th Fl., 112 Chung Shan N. Road, Sec. 2, Taipei, TAIWAN, R.O.C. TEL: (02) 2563-3339	THAILAND Theora Music Co., Ltd. 330 Veeng Nakornkarn, Soi 2, Bangkok 10100, THAILAND TEL: (02) 228-8211	P.O. BOX 2382, Claremont 7708, SOUTH AFRICA TEL: (021) 674-4030	VIETNAM Saigon Music Suite 1018 40 Ba Huyen Thanh Quan Street Ho Chi Minh City, VIETNAM Tel: (81) 930-1969	NEW ZEALAND Roland Corporation Ltd. 32 Shaddock Street, Mount Eden, Auckland, NEW ZEALAND TEL: (09) 289-7878	AUSTRALIA Roland Corporation Australia Pty., Ltd. 28 Campbell Avenue De Winton, Vic. 3069 AUSTRALIA TEL: (0512) 24-2420	ARGENTINA Instrumentos Musicales S.A. Av. San Martin 2075 (112) Buenos Aires ARGENTINA TEL: (011) 4598-2700	BRAZIL Roland Brazil Ltda Rua Sao Jose, 780 Sala 503 Parque Industrial San Jose Cotia - Sao Paulo - SP, BRAZIL TEL: (011) 4455-5666	COSTA RICA JUAN RAMOS Instrumentos Musicales Avenida Calle 11, Apartado 1037, San Jose, COSTA RICA TEL: 204-2111	CHILE Commercial Fancy II S.A. Rca. No. 919, Dpto. 1 Nacional Cerro 479, 4th Floor Santiago - Centro, CHILE TEL: (02) 240-6000	EL SALVADOR OHN MUSIC SONS BHD Edificio No. 801 San Salvador, EL SALVADOR TEL: 262-0789	MEXICO Casa Vozkampan s.a. de c.v. Av. Ixtapa No. 323, Cd. Obrar de los Palcos 07700 Mexico D.F. MEXICO TEL: (05) 5646-6669	PANAMA ROLAND PANAMA S.A. Boulevard Andros, Abasco, Panama City, REP. DE PANAMA TEL: 370-1000	CRISTOFORO MUSIC PTE LTD 101, Telok Ayer St., Singapore 068490 TEL: (65) 434-9555	TAIWAN ROLAND TAIWAN ENTERPRISE CO., LTD. Room 5, 5th Fl., 112 Chung Shan N. Road, Sec. 2, Taipei, TAIWAN, R.O.C. TEL: (02) 2563-3339	THAILAND Theora Music Co., Ltd. 330 Veeng Nakornkarn, Soi 2, Bangkok 10100, THAILAND TEL: (02) 228-8211	P.O. BOX 2382, Claremont 7708, SOUTH AFRICA TEL: (021) 674-4030	VIETNAM Saigon Music Suite 1018 40 Ba Huyen Thanh Quan Street Ho Chi Minh City, VIETNAM Tel: (81) 930-1969	NEW ZEALAND Roland Corporation Ltd. 32 Shaddock Street, Mount Eden, Auckland, NEW ZEALAND TEL: (09) 289-7878	AUSTRALIA Roland Corporation Australia Pty., Ltd. 28 Campbell Avenue De Winton, Vic. 3069 AUSTRALIA TEL: (0512) 24-2420	ARGENTINA Instrumentos Musicales S.A. Av. San Martin 2075 (112) Buenos Aires ARGENTINA TEL: (011) 4598-2700	BRAZIL Roland Brazil Ltda Rua Sao Jose, 780 Sala 503 Parque Industrial San Jose Cotia - Sao Paulo - SP, BRAZIL TEL: (011) 4455-5666	COSTA RICA JUAN RAMOS Instrumentos Musicales Avenida Calle 11, Apartado 1037, San Jose, COSTA RICA TEL: 204-2111	CHILE Commercial Fancy II S.A. Rca. No. 919, Dpto. 1 Nacional Cerro 479, 4th Floor Santiago - Centro, CHILE TEL: (02) 240-6000	EL SALVADOR OHN MUSIC SONS BHD Edificio No. 801 San Salvador, EL SALVADOR TEL: 262-0789	MEXICO Casa Vozkampan s.a. de c.v. Av. Ixtapa No. 323, Cd. Obrar de los Palcos 07700 Mexico D.F. MEXICO TEL: (05) 5646-6669	PANAMA ROLAND PANAMA S.A. Boulevard Andros, Abasco, Panama City, REP. DE PANAMA TEL: 370-1000	CRISTOFORO MUSIC PTE LTD 101, Telok Ayer St., Singapore 068490 TEL: (65) 434-9555	TAIWAN ROLAND TAIWAN ENTERPRISE CO., LTD. Room 5, 5th Fl., 112 Chung Shan N. Road, Sec. 2, Taipei, TAIWAN, R.O.C. TEL: (02) 2563-3339	THAILAND Theora Music Co., Ltd. 330 Veeng Nakornkarn, Soi 2, Bangkok 10100, THAILAND TEL: (02) 228-8211	P.O. BOX 2382, Claremont 7708, SOUTH AFRICA TEL: (021) 674-4030	VIETNAM Saigon Music Suite 1018 40 Ba Huyen Thanh Quan Street Ho Chi Minh City, VIETNAM Tel: (81) 930-1969	NEW ZEALAND Roland Corporation Ltd. 32 Shaddock Street, Mount Eden, Auckland, NEW ZEALAND TEL: (09) 289-7878	AUSTRALIA Roland Corporation Australia Pty., Ltd. 28 Campbell Avenue De Winton, Vic. 3069 AUSTRALIA TEL: (0512) 24-2420	ARGENTINA Instrumentos Musicales S.A. Av. San Martin 2075 (112) Buenos Aires ARGENTINA TEL: (011) 4598-2700	BRAZIL Roland Brazil Ltda Rua Sao Jose, 780 Sala 503 Parque Industrial San Jose Cotia - Sao Paulo - SP, BRAZIL TEL: (011) 4455-5666	COSTA RICA JUAN RAMOS Instrumentos Musicales Avenida Calle 11, Apartado 1037, San Jose, COSTA RICA TEL: 204-2111	CHILE Commercial Fancy II S.A. Rca. No. 919, Dpto. 1 Nacional Cerro 479, 4th Floor Santiago - Centro, CHILE TEL: (02) 240-6000	EL SALVADOR OHN MUSIC SONS BHD Edificio No. 801 San Salvador, EL SALVADOR TEL: 262-0789	MEXICO Casa Vozkampan s.a. de c.v. Av. Ixtapa No. 323, Cd. Obrar de los Palcos 07700 Mexico D.F. MEXICO TEL: (05) 5646-6669	PANAMA ROLAND PANAMA S.A. Boulevard Andros, Abasco, Panama City, REP. DE PANAMA TEL: 370-1000	CRISTOFORO MUSIC PTE LTD 101, Telok Ayer St., Singapore 068490 TEL: (65) 434-9555	TAIWAN ROLAND TAIWAN ENTERPRISE CO., LTD. Room 5, 5th Fl., 112 Chung Shan N. Road, Sec. 2, Taipei, TAIWAN, R.O.C. TEL: (02) 2563-3339	THAILAND Theora Music Co., Ltd. 330 Veeng Nakornkarn, Soi 2,
---------------	--	---	---	---	-------------	--	---	---	--	--	---	--	---	---	--	--	--	---	--	--	--	--	---	--	---	--	---	---	--	--	--	---	--	---	--	--	--	--	---	--	---	---	--	--	--	---	--	---	--	--	--	--	---	--	---	---	--	--	--	---	--	---	--	--	--	--	---	--	---	---	--	--	--	---	--	---	--	---