

Read This First

Use of the setup without the following may prevent the PDX-8's rim shots from sounding, cause double triggering, or result in other problems.

1. Tune the Head (PDX-8 Owner's Manual; p. 4)

2. Make the Settings for the Trigger Type and Trigger Parameters (PDX-8 Owner's Manual; p. 5)

For the PDX-8 function correctly, the trigger type and trigger parameters in your percussion sound module (TD-3, TD-6, TD-12, TD-20, etc.) must be adjusted.

3. Adjust the "Rim Sens" (PDX-8 Owner's Manual; p. 5)

If you find the following kinds of problems occurring, adjust the "Rim Sens" of the percussion sound module.

- If you hear a rim sound when you strike the head, decrease the "Rim Sens" value.
- If you cannot get a rim sound even when you strike the rim hard, increase the "Rim Sens" value.

Example: Connect the PDX-8 to the SNARE input on the TD-3

Trigger Settings

Trigger Parameter	Display	Value
Trigger Type	84P	80r
Mask Time	152	8
Rim Sensitivity	115	10 (7-12)

How To Set the Trigger Parameters

1. Press [LEVEL/PAN] + [TEMPO] on the TD-3.
[EDIT] flashes and "84P" appears in the display, then the trigger type value is indicated.
2. Strike the PDX-8.
The SNARE trigger indicator lights.
3. Press [EDIT] to select the parameter ("84P", "152", "115", etc.).
4. Press [+] or [-] to make the setting.
5. Press [DRUM KIT]; the [EDIT] light goes off.

* Do not turn off the power without the [EDIT] light having gone out. Otherwise you will lose the change you have just made.

