

#### Copyright © 2008 ROLAND CORPORATION All rights reserved. No part of this publication may be reproduced in any form without the written permission of ROLAND CORPORATION.

Before using this unit, carefully read the sections entitled: "USING THE UNIT SAFELY" and "IMPORTANT NOTES." These sections provide important information concerning the proper operation of the unit. Additionally, in order to feel assured that you have gained a good grasp of every feature provided by your new unit, Owner's manual should be read in its entirety. The manual should be saved and kept on hand as a convenient reference.





C5100071 2YG


Check the included items As soon as you open the package, check to see that all items are included. If anything is missing, please contact your dealer.






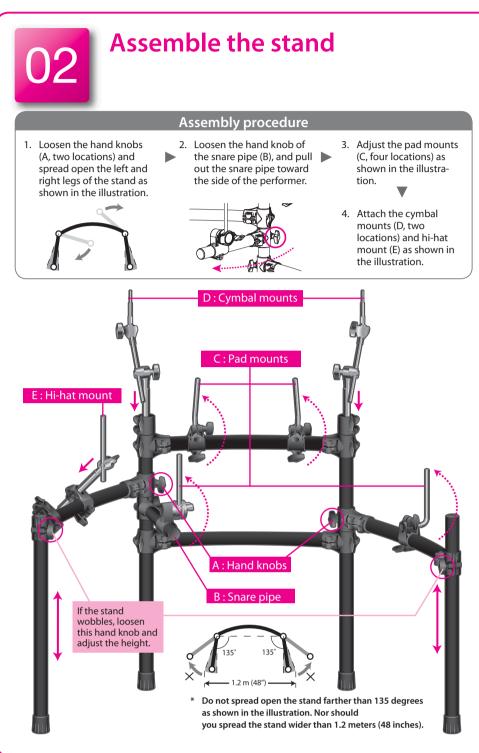

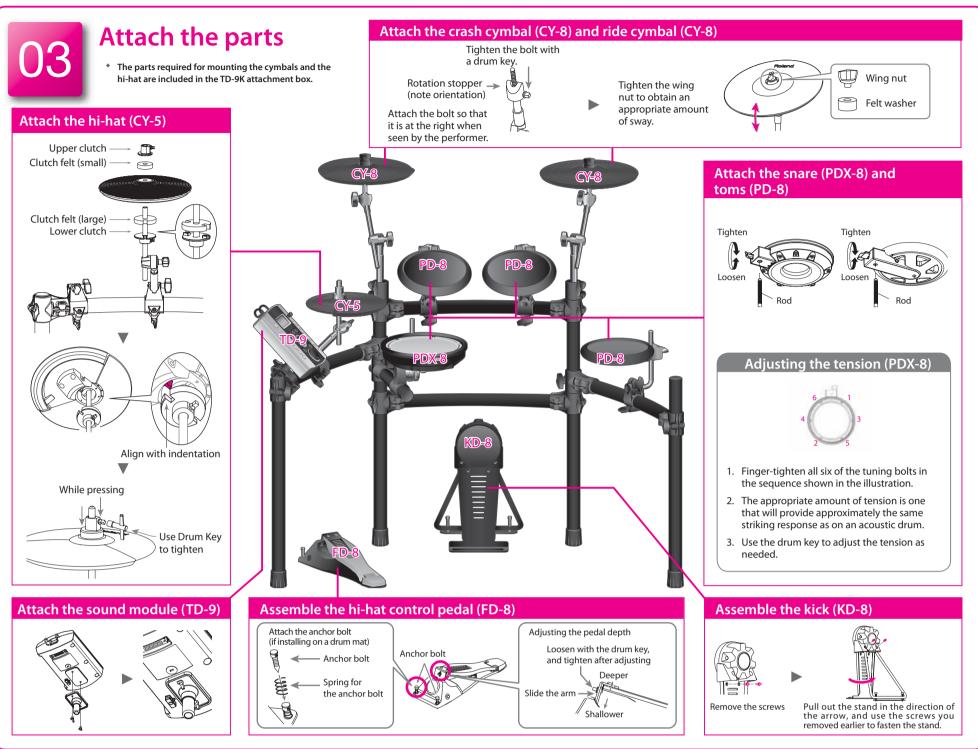

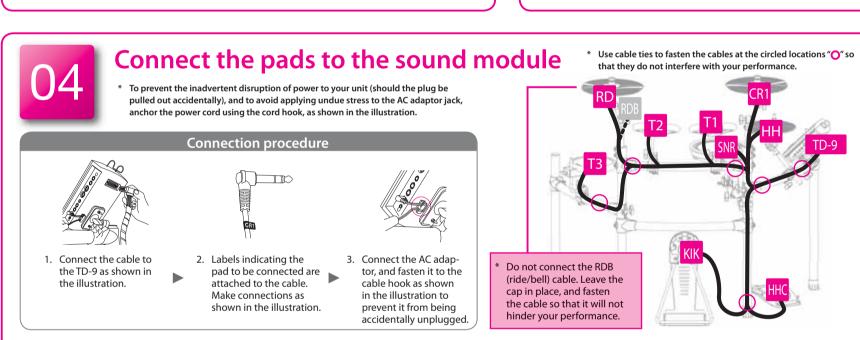

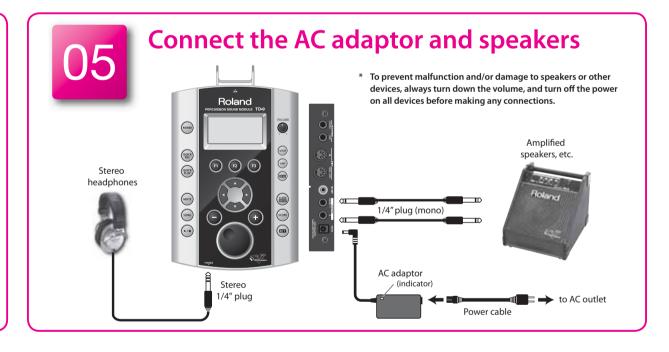

Other side

This completes assembly and connections.


When using on

hard-surfaced flooring

When using on the drum mat


- To learn about the TD-9's wide range of unique functionality, refer to "Quick Start."
- If you need further information regarding the set up of TD-9K, refer to the section "If you don't hear any sound" (p.18) in the Owner's Manual.


Foot plate

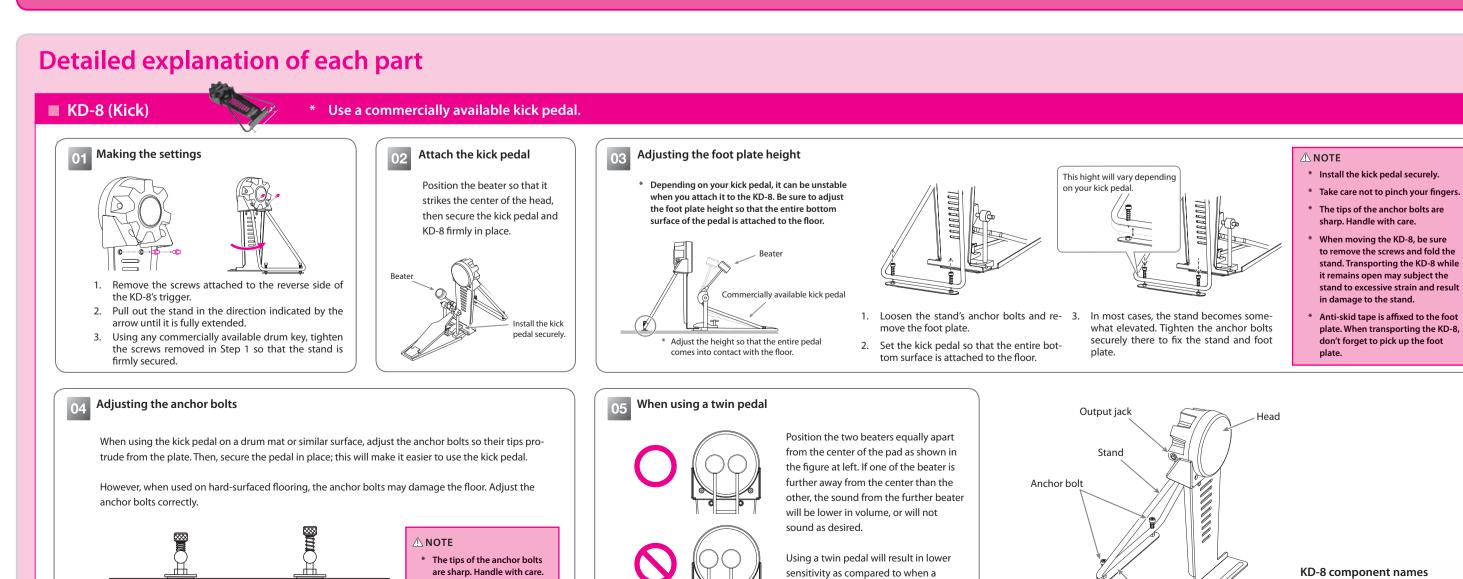


single pedal is used. Raise the sensitivity

on the sound module.

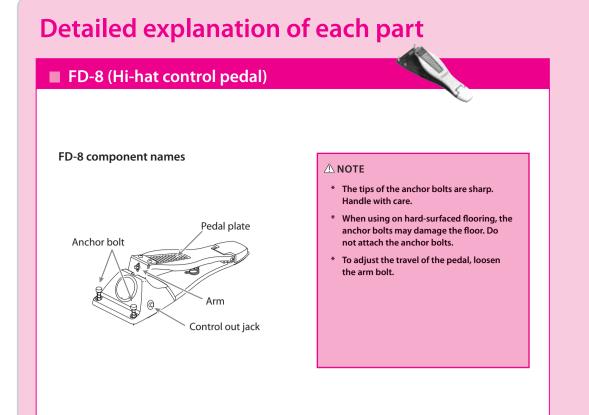


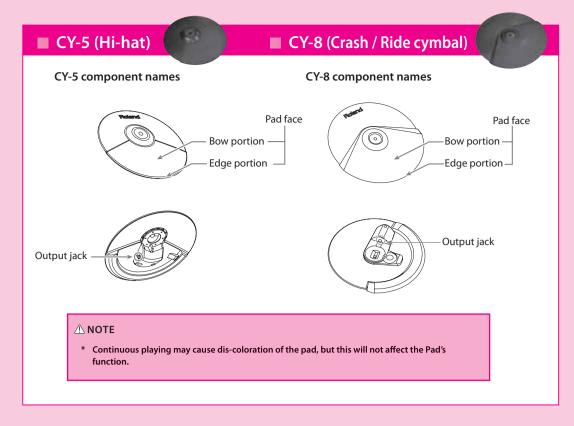


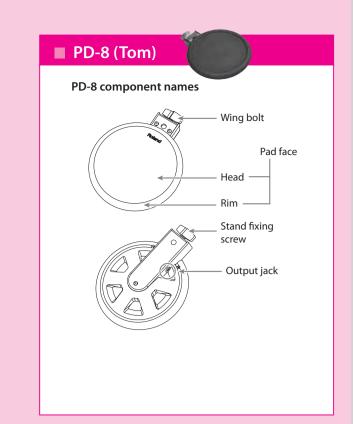




## **PDX-8 component names**

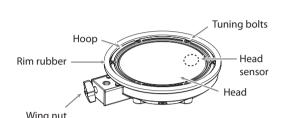


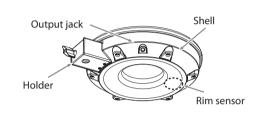

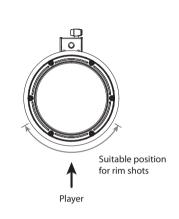

#### **⚠ NOTE**

- Be sure to adjust the head tension of the PDX-8 before use.
- \* Striking the head when the head tension is loose may damage the sensor and
- Do not apply excessive force to the sensor and cushion located under the head. Doing so can interfere with accurate detection, and may damage it.
- \* Due to the nature of the materials used in the sensor of the PDX-8, changes in room temperature may affect the sensitivity of the sensor.
- \* The rim rubber is one component that eventually wears out (depending on the number and strength of the rim shots performed), and will require replacement. Rim shots may not be performed correctly when the rim rubber is worn out. If this occurs, replace the rim rubber. Consult Roland Service for more on replacing the rim rubber.

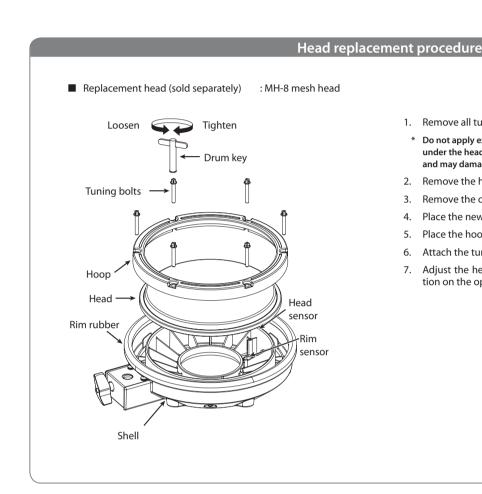

#### 1. Remove all tuning bolts and washers.

- \* Do not apply excessive force to the sensor and cushion located under the head. Doing so can interfere with accurate detection, and may damage it.
- 2. Remove the hoop.
- 3. Remove the old head.
- 4. Place the new head on the shell.
- 5. Place the hoop on the head.
- 6. Attach the tuning bolts to the hoop and shell.
- 7. Adjust the head tension. For details, refer to the explanation on the opposite side of this leaflet.

### **USING THE UNIT SAFELY**

#### INSTRUCTIONS FOR THE PREVENTION OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

About A WARNING and A CAUTION Notices Used for instructions intended to alert the user to the risk of death or severe **⚠WARNING** injury should the unit be used Used for instructions intended to alert

the user to the risk of injury or material damage should the unit be used **A** CAUTION Material damage refers to damage other adverse effects caused with


respect to the home and all its furnishings, as well to domestic animals or pets.

#### About the Symbols The $\triangle$ symbol alerts the user to important instructions or warnings. The specific meaning of the symbol is determined by the design contained within the triangle. In the case of the symbol at left, it is used for general cautions, warnings, or alerts to danger. The symbol alerts the user to items that must never be carried out (are forbidden). The specific thing that must not be done is indicated by the design contained

- within the circle. In the case of the symbol at left, i means that the unit must never be disassembled. The ● symbol alerts the user to things that must be carried out. The specific thing that must be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the power-cord plug must be unplugged from the outlet.
- ALWAYS OBSERVE THE FOLLOWING

### **WARNING**

 Do not open or perform any internal modifications on the unit. (The only exception would be where this manual provides specific instructions which should be followed in order to put in place user-installable options.)

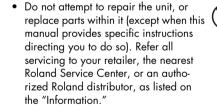

- Never use or store the unit in places that are:
- Subject to temperature extremes (e.g., direct sunlight in an enclosed vehicle, near a heating duct, on top of heat-generating equipment); or
- Damp (e.g., baths, washrooms, on wet floors); or are
- Humid; or are
- Exposed to rain; or are
- Dusty; or are
- Subject to high levels of vibration.
- This unit should be used only with a stand that is recommended by Roland.



• When using the unit with a stand recommended by Roland, the stand must be carefully placed so it is level and sure to remain stable. If not using a stand, you still need to make sure that any location you choose for placing the unit provides a level surface that will properly support the unit, and keep it from wobbling.


### **WARNING**

 Do not allow any objects (e.g., flammable material, coins, pins); or liquids of any kind (water, soft drinks, etc.) to penetrate the unit.



• In households with small children, an adult should provide supervision until the child is capable of following all the rules essential for the safe operation of the unit.



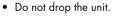



### **A** CAUTION

- Try to prevent cords and cables from becoming entangled. Also, all cords and cables should be placed so they are out of the reach of children.
- Never climb on top of, nor place heavy objects on the unit.



• Should you remove remove nuts, washers, screws, anchor bolts, etc., keep them in a safe place out of children's reach, so there is no chance of them being swallowed accidentally.



### **IMPORTANT NOTES**

- Do not expose the unit to direct sunlight, place it near devices that radiate heat, leave it inside an enclosed vehicle, or otherwise subject it to temperature extremes. Excessive heat can deform or
- · Do not allow rubber, vinyl, or similar materials to remain on the unit for long periods of time. Such objects can discolor or otherwise harmfully affect the finish.

### Maintenance

- For everyday cleaning wipe the unit with a soft, dry cloth or one that has been slightly dampened with water. To remove stubborn dirt, use a cloth impregnated with a mild, non-abrasive detergent. Afterwards, be sure to wipe the unit thoroughly with a soft, dry cloth.
- · Never use benzine, thinners, alcohol or solvents of any kind, to avoid the possibility of discoloration and/or deformation.

### **Additional Precautions**

- Use a reasonable amount of care when using the unit's buttons, sliders, or other controls; and when using its jacks and connectors. Rough handling can lead to malfunctions.
- When connecting / disconnecting all cables, grasp the connector itself—never pull on the cable. This way you will avoid causing shorts, or damage to the cable's internal elements.
- To avoid disturbing your neighbors, try to keep the unit's volume at reasonable levels. You may prefer to use headphones, so you do not need to be concerned about those around you (especially when it This instrument is designed to minimize the extraneous sounds produced when it's played. However,
- since sound vibrations can be transmitted through floors and walls to a greater degree than expected, take care not to allow these sounds to become a nuisance to neighbors, especially when performing at night and when using headphones.
- Some connection cables contain resistors. Do not use cables that incorporate resistors for connecting to this unit. The use of such cables can cause the sound level to be extremely low, or impossible to hear. For information on cable specifications, contact the manufacturer of the cable.
- The rubber portion of the striking surface is treated with a preservative to maintain its performance. With the passage of time, this preservative may appear on the surface as a white stain, or reveal how the pads were struck during product testing. This does not affect the performance or functionality of the product, and you may continue using it with confidence.
- Continuous playing may cause dis-coloration of the pad, but this will not affect the Pad's function.
- In the interest of product improvement, the specifications and/or appearance of this unit are subject to change without prior notice.

# For EU Countries

- nis symbol indicates that in EU countries, this product mu **UK**
- eparately from household waste, as defined in each region. Products earing this symbol must not be discarded together with household waste eses Symbol bedeutet, dass dieses Produkt in EU-Ländern getrennt m Hausmüll gesammelt werden muss gemäß den regionalen stimmungen. Mit diesem Symbol gekennzeichnete Produkte dürfen ht zusammen mit den Hausmüll entsorgt werden.
- Ce symbole indique que dans les pays de l'Union européenne, ce roduit doit être collecté séparément des ordures ménagères selon les irectives en vigueur dans chacun de ces pays. Les produits portant ce ymbole ne doivent pas être mis au rebut avec les ordures ménagères.
- uesto simbolo indica che nei paesi della Comunità europea questo questo simbolo malica cire leri paesi della Comunità ediopea questo prodotto deve essere smaltito separatamente dai normali rifiuti domestic econdo la legislazione in vigore in ciascun paese. I prodotti che riportar questo simbolo non devono essere smaltiti insieme ai rifiuti domestici.
- questo simbolo non devono essere smaltiti insieme ai Ai sensi dell'art. 13 del D.Lgs. 25 luglio 2005 n. 151.
- Este símbolo indica que en los países de la Unión Europea este producto debe recogerse aparte de los residuos domésticos, tal como esté regulado en cada zona. Los productos con este símbolo no se deben depositar con los residuos domésticos.
- Este simbolo indica que nos países da UE, a recolha deste produto deverá ser feita separadamente do lixo doméstico, de acordo com os regulamentos de cada região. Os produtos que apresentem este símbolo não deverão ser eliminados juntamente com o lixo doméstico. Dit symbool geeft aan dat in landen van de EU dit product gescheiden an huishoudelijk afval moet worden aangeboden, zoals bepaald per emeente of regio. Producten die van dit symbool zijn voorzien, nogen niet samen met huishoudelijk afval worden verwijderd.
- gette symbol angiver, at i EU-lande skal dette produkt opsamles adskilt t husholdningsaffald, som defineret i hver enkelt region. Produkter ed dette symbol må ikke smides ud sammen med husholdningsaffald.
- Dette symbolet indikerer at produktet må behandles som spesialavfall i EU-land, iht. til retningslinjer for den enkelte regionen, og ikke kastes sammen med vanlig busholdningsavfall. Produkter som er merket med dette symbolet, må ikke kastes sammen med vanlig husholdningsavfall.

SINGAPORE

IGAPORE 387381

THAILAND
Theera Music Co., Ltd.
100-108 Soi Verng
Nakornkasem, New

AUSTRALIA/

NEW ZEALAND

CENTRAL/LATIN

BARBADOS A&B Music Sup 12 Webster Indus

TAIWAN ROLAND TAIWA

- ymbolen anger att i EU-länder måste den här produkten kasseras pparat från hushållsavfall, i enlighet med varje regions bestämmel rodukter med den här symbolen får inte kasseras tillsammans me vakklegrifat. isee, että tuote on EU-maissa kerättävä erillää
- **(1)** kotitalousjätteistä kunkin alueen voimassa olevien määräysten mukaisesti. Tällä merkinnällä varustettuja tuotteita ei saa hävittää kotitalousjätteiden mukana. Ez a szimbólum azt jelenti, hogy az Európai Unióban ezt a terméket a háztartási hulladéktól elkülönítve, az adott régióban érvényes szabálýozás szerint kell gyíjteni. Az ezzel a szimbólummal ellátott termékeket nem szabad a háztartási hulladék közé dobni.
- Symbol oznacza, że zgodnie z regulacjami w odpowiednim regionie, w krajach UE produktu nie należy wyrzucać z odpadami domowymi. Produktów opatrzonych tym symbolem nie można utylizować razem z odpadami domowymi.
- Fento symbol udává, že v zemích EU musí být tento výrobek sbírán sdděleně od domácího odpadu, jak je určeno pro každý region. Výrobky nesoucí tento symbol se nesmí vyhazovat spolu s domácím odpadem. CZ Tento symbol vyjadruje, že v krajinách EÚ sa musí zber tohto produktu vykonávať oddelene od domového odpadu, podľa nariadení platných v konkrétnej krajine. Produkty s týmto symbolom sa nesmú vyhadzovať spolu s domovým odpadom.
- Spous a donicy in oppeason.

  See sümbol näitab, et EL-i maades tuleb see toode olemprügist eraldi koguda, nii nagu on igas piirkonnas määratletud. Selle sümboliga märgitud tooteid ei tohi ära visata koos olmeprügiga.
- Sis simbolis rodo, kad ES šalyse šis produktas turi būti surenkamas atskirai nuo buitinių atliekų, kaip nustatyta kiekviename regione. Siuo simboliu paženklinti produktai neturi būti išmetami kartu su buitinėmis atliekomis.
- autekomis. Šis simbols norāda, ka ES valstīs šo produktu jāievāc atsevišķi no mājsaimniecības atkritumiem, kā noteikts katrā reģionā. Produktus ar š simbolu nedrīkst izmest kopā ar mājsaimniecības atkritumiem.
- Ta simbol označuje, da je treba proizvod v državah EU zbirati ločeno o gospodinjskih odpadkov, tako kot je določeno v vsaki regiji. Proizvoda tem znakom ni dovoljeno odlagati skupaj z gospodinjskimi odpadki.
- Το σύμβολο αυτό υποδηλόνει ότι στις χώρες της Ε.Ε. το συγκεκριμένο προίόν πρέπει να συλλέγεται χοριστά από τα υπόλοιπα οικιακά αποραμμένα, σύμφου με ότα προβλέγονται σε κάσε πρισχή. Τα προάνα προβλέγονται σε κάσε πρισχή. Τα προάντα που φέρουν το συγκεκριμο σύμβολο δεν πρέπει να απορρίμπονται μαζί με τα οικιακά απορρίμματα.

NORWAY

PORTUGAL

RUSSIA MuTek

KUWAIT

LEBANON

**QATAR** 

SAUDI ARABIA

Electronics APL
Behind Pizza Inn
Prince Turkey Str

TURKEY UHAL DIS TICARET A.S.

U.A.E.

CANADA

NORTH AMERICA

#### Information When you need repair service, call your nearest Roland Service Center or authorized Roland distributor in your country as shown below.

DOMINICAN REPUBLIC

VENEZUELA

Allegro,C.A.

EUROPE

AUSTRIA

## (AFRICA) **EGYPT**

REUNION SOUTH AFRICA T.O.M.S. Sound & Music

Paul Bothner(PTY)Ltd. Royal Cape Park, Unit 24 Londonderry Road, Otte

(ASIA) AUSTRALIA/ NEW ZEALAND Roland Corporatio Australia Pty.,Ltd. Roland Shanghai Electronic Co.,Ltd. Co.,Ltd.
(BEIJING OFFICE)
10F. No.18 3 Section
Chaoyang District Be
100011 CHINA

INDIA

HONG KONG

BRAZIL INDONESIA CHILE KOREA

MALAYSIA

**COSTA RICA** VIET NAM Suoi Nhac Company, Ltd 370 Cach Mang Thang Tam St Dist.3, Ho Chi Minh City, VIET NAM San Jose, COSTA RICA FEL: 258-0211

ECUADOR Mas Musika EL SALVADOR **GUATEMALA** 

BELGIUM/FRANCE/ HOLLAND/ CROATIA ART-CENTAR MARTINIQUE

CZECH REP. DENMARK

**MEXICO** Casa Veerkamp, s. FINLAND NICARAGUA

PANAMA

PARAGUAY

PERU

GERMANY HUNGARY

ITALY

GREECE/CYPRUS

SWEDEN
Roland Scandinavia A/S
SWEDISH SALES OFFICE SWITZERLAND

UNITED KINGDOM

MIDDLE EAST **BAHRAIN** 

ISRAEL Halilit P. G

(Head Office) 5480 Parkwood Way Richmond B. C., V6V 2M4 CANADA TEL: (604) 270 6626 U. S. A.

As of Oct. 1, 2007 (ROLAND)



产品中有毒有害物质或元素的名称及含量

本资料就本公司产品中所含的特定有害物质及其安全性予以说明。

本资料适用于2007年3月1日以后本公司所制造的产品。

有毒有害物质或元素 铅(Pb) 汞(Hg) 镉(Cd) 六价铬(Cr(VI)) 多溴联苯(PBB) 多溴二苯醚(PBDE) 外売 (売体) 电子部件 (印刷电路板等) 附件(电源线、交流适配器等) 0 〇:表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T11363-2006 标准规定的限量要求以下 ×:表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11363-2006 标准规定的限量要求。

## 有关产品中所含有害物质的说明

因根据现有的技术水平,还没有什么物质能够代替它。