

USER MANUAL

MULTI

switch

strymon.

Update your TimeLine, BigSky, or Mobius to Latest Firmware

A FIRMWARE UPDATE FOR YOUR TIMELINE, BIGSKY, OR MOBIUS MAY BE REQUIRED TO ENABLE MULTISWITCH COMPATIBILITY.

www.strymon.net/update

Please visit the link above for instructions on how to check the firmware version, and how to update your pedal to the latest version.


Connect MultiSwitch

Connect your MultiSwitch to the EXP input of your TimeLine, BigSky, or Mobius with the included 1/4" TRS cable.




Expression Mode Setup for Timeline, BigSky, and Mobius

Your TimeLine, BigSky, and Mobius (with the latest firmware version) can work with MultiSwitch in several ways. Select the Expression Mode via the Globals menu on your TimeLine, BigSky, or Mobius.

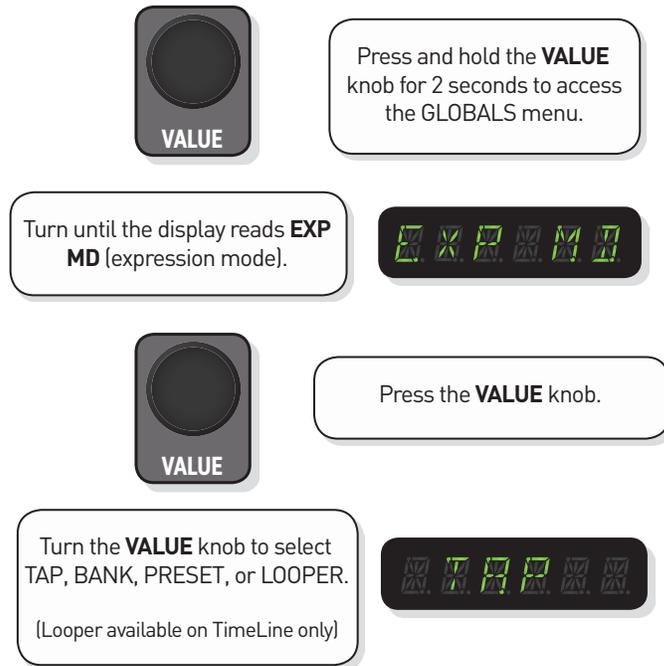

Available Expression Modes

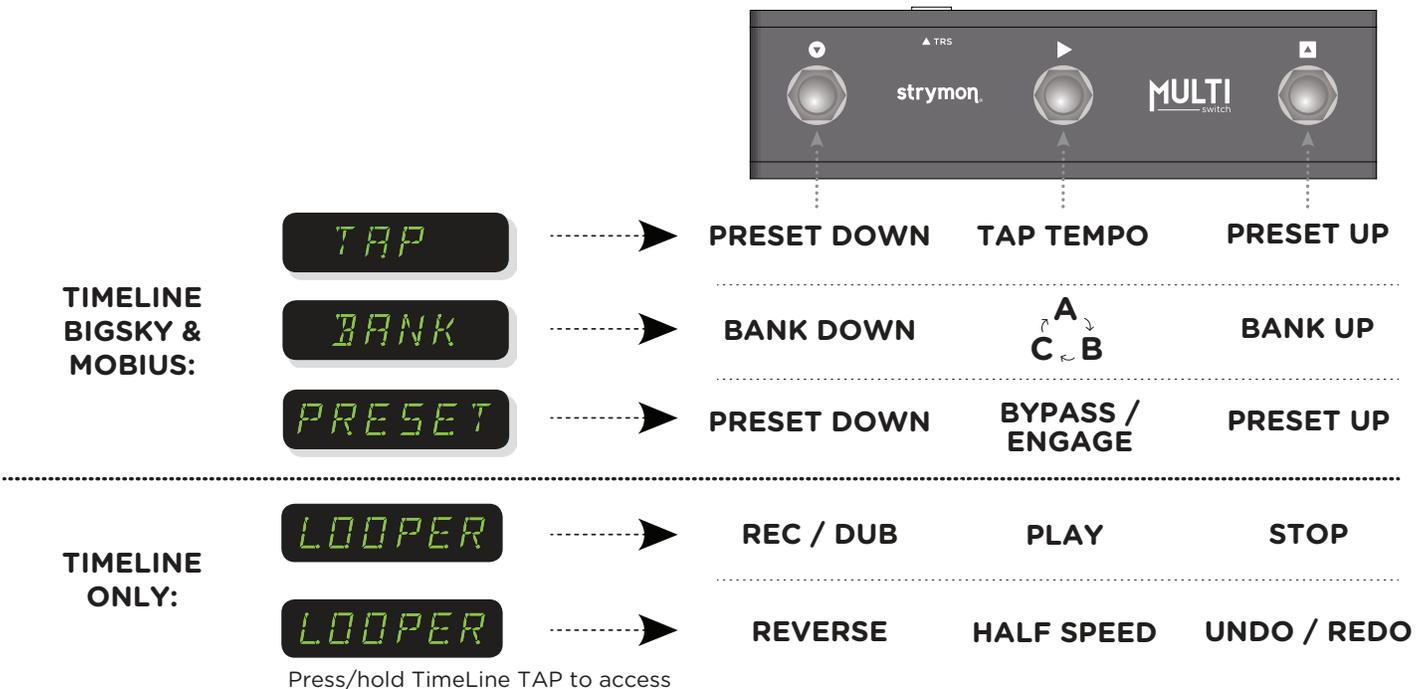

Bank Mode

MultiSwitch gives you a new means of exploring preset banks. Use the left switch to move down a bank, right switch to move up a bank, and middle switch to cycle through your presets within the current bank.



Preset Mode

Use MultiSwitch to recall presets. Scroll through saved presets using the left and right switches, and engage/bypass the preset you have selected with the middle switch.



Tap Mode

Scroll through saved presets and control your tap tempo. Use the left switch to scroll down through your saved presets, the right switch to scroll up, and the middle switch to tap your tempo.



Looper Mode (TimeLine only)

MultiSwitch allows instant access to TimeLine's Record/Overdub, Play, and Stop functions without holding the TAP switch to enter Looper Mode. Access looping features while retaining footswitch control over your delay sounds.



Hold TimeLine's TAP switch to enter looper mode, and MultiSwitch now gives you instant access to Reverse, Half Speed, and Undo/Redo.



Specifications

.....

Cable:	1/4" Right Angle TRS (tip / ring / sleeve)
Dimensions:	1.875" deep x 6.625" wide x 2" tall
Compatible with:	TimeLine, BigSky, or Mobius via expression pedal jack
Expression Modes:	Loop Control Mode (TimeLine only) Bank Mode Preset Mode Tap Mode

No additional power supply required
Rugged gunmetal gray anodized aluminum chassis
Designed and built in the USA

Strymon Non-Transferrable Limited Warranty

Warranty

Strymon warrants the product to be free from defects in material and workmanship for a period of one (1) year from the original date of purchase. If the product fails within the warranty period, Strymon will repair or, at our discretion, replace the product at no cost to the original purchaser.

Exclusions

This warranty covers defects in manufacturing discovered while using this product as recommended by Strymon. This warranty does not cover loss or theft, nor does the coverage extend to damage caused by misuse, abuse, unauthorized modification, improper storage, lightning, or natural disasters.

Limits of Liability

In the case of malfunction, the purchaser's sole recourse shall be repair or replacement, as described in the preceding paragraphs. Strymon will not be held liable to any party for damages that result from the failure of this product. Damages excluded include, but are not limited to, the following: lost profits, lost savings, damage to other equipment, and incidental or consequential damages arising from the use, or inability to use this product. In no event will Strymon be liable for more than the amount of the purchase price, not to exceed the current retail price of the product. Strymon disclaims any other warranties, express or implied. By using the product, the user accepts all terms herein.

How to Obtain Service Under this Warranty

For North American customers: Contact Strymon through our website at <http://www.strymon.net/support> for Return Authorization and information. Proof of original ownership may be required in the form of a purchase receipt.

For International Customers: Contact the Strymon dealer from which the product was purchased from in order to arrange warranty repair service.

Strymon[®] is a division of Damage Control[®], LLC.