

YAMAHA ELECTONE®

B-605/B-805



MAKING THE MOST OF YOUR ELECTONE
BEDIENUNGSANLEITUNG FÜR DIE YAMAHA ELECTONE ORGELN
GÖR MESTA MÖJLIGA AV DIN ELECTONE
SLIK FÅR DU MEST GLEDE AV DITT ELECTONE

Power Switch *PAGE (1)*Auto Arpeggio *PAGE (7)*Master Volume *PAGE (1)*Auto Bass/Chord (Fun Blocks) *PAGE (4)*Pedal Keyboard Tone Levers *PAGE (10)*Upper Keyboard Tone Levers *PAGE (9)*Lower Keyboard Tone Levers *PAGE (10)*Vibrato *PAGE (12)*Upper Custom Voices *PAGE (2)*U & L Special Presets *PAGE (2)*Lower Coupler *PAGE (13)*Manual Balance *PAGE (13)*Melody On Chord *PAGE (8)*Preset Ensemble *PAGE (11)*Upper Slow Attack *PAGE (12)*Auto Rhythm Section *PAGE (3)*Sustain *PAGE (12)*Tremolo/Symphonic Chorus *PAGE (13)*Reverb *PAGE (12)*

Auto Arpeggio PAGE (7)

Power Switch PAGE (1)

Auto Bass/Chord (Fun Blocks) PAGE (4)

Master Volume PAGE (1)

Upper Keyboard Tone Levers PAGE (9)

Pedal Keyboard Tone Levers PAGE (10)

Upper Ensemble Voices PAGE (11)

Lower Keyboard Tone Levers
PAGE (10)

U & L Special Presets PAGE (2)

U & L Custom Voices
PAGE (2)

Vibrato PAGE (12)



Lower Coupler PAGE (13)

Melody On Chord PAGE (8)

Manual Balance PAGE (13) Upper Slow Attack PAGE (12)

Auto Rhythm Section PAGE (3)

Sustain PAGE (12)

Preset Ensemble PAGE (11)

Reverb PAGE (12)

Tremolo/Symphonic Chorus PAGE (13)

Foot Switch Selector PAGE (3)

- Check for correct power voltage. Consult your Yamaha serviceman regarding any changes.

As to the British-Standard model, information is provided in 'Specifications' on the last page.

- Schließen Sie Ihre Electone immer an den richtigen Netzanschluß an.
- Kontrollera att spänningen är rätt. Rådfråga Yamahas serviceman om ev. ändringar.
- Undersøk at spenningen er riktig. Snakk med din Yamaha servicetekniker om ikke spenningen er riktig.

Welcome to Yamaha's wonderful world of music!

Congratulations! With your purchase of a Yamaha Electone you have acquired the most advanced electronic organ available today. In the B-605, B-805 Electone, Yamaha has combined the superb craftsmanship it has acquired over many years of making fine musical instruments with the latest developments in modern electronic technology. We are confident that you will be particularly pleased with the unique "Living Sound" and "Rich Ambience" that Yamaha's original digital electronic technology has made

possible. We also believe that the wide variety of easy-to-play features incorporated in your Electone will provide you with endless satisfaction and musical pleasure. So that you can make maximum use of these many remarkable features, we suggest that you familiarize yourself with their positioning and operation by reading this manual carefully before starting to play. In this way, you should be able to derive maximum enjoyment from the instrument in the shortest possible time.

Willkommen in YAMAHA's wunderbarer Welt der Musik. Wir gratulieren! Mit dem Kauf der Yamaha Electone haben Sie eine der modernsten und leistungsfähigsten elektronischen Orgeln erworben. Die beiden Electone Modelle B-605 und B-805 sind das Produkt jahrelanger handwerklicher Erfahrungen auf dem Gebiet des Musikanstrumentenbaus kombiniert mit neuesten Entwicklungen der Elektronik.

Wir sind überzeugt, daß auch Sie vom lebendigen Klang und dessen verblüffender räumlicher Tiefenwirkung der erst durch richtungsweisende YAMAHA Technologie auf dem Gebiet der Digital-Elektronik möglich wurde, begeistert sein werden. Außerdem glauben wir, daß Sie die vielseitige Ausstattung, die vor allem dazu dient, das

Orgelspiel noch einfacher zu machen, zu schätzen wissen und Ihnen die Electone über lange Jahre viel Freude und Entspannung mit Musik bereitet.

Um die zahllosen Vorteile, die Ihnen diese Orgel bietet, voll nutzen zu können, sollten Sie die Bedienungsanleitung sehr sorgfältig lesen und die darin enthaltenen Anweisungen genau befolgen. Zunächst jedoch müssen Sie sich mit der Aufstellung der Orgel und den Funktionen der verschiedenen Bedienungselemente vertraut machen, bevor Sie mit dem Spielen beginnen. Auf diese Weise lernen Sie ebenfalls spielend die besonderen technischen Merkmale und Eigenschaften Ihrer Yamaha Electone Orgel in kürzester Zeit kennen.

Välkommen till Yamahas underbara musikvärld!

Gratulerar! Genom att köpa en Yamaha Electone har Du förvärvat den mest avancerade elektroniska orgel som finns att få idag. I B-605, B-805 Electone har Yamaha kombinerat den förfämliga yrkesskicklighet de vunnit under många års tillverkning av fina musikanstrument med den senaste utvecklingen inom den moderna elektroniska tekniken. Vi är övertygade om att Du blir särskilt nöjd med det unika naturliga ljud och verklighetstroga instrumentimiljioner som möjliggjorts av Yamahas ursprungliga elektroniska digitalteknik. Vi tror också att de många olika

lättspelade egenskaper som byggs in i Din Electone kommer att ge Dig oändlig tillfredsställelse och musikalisk njutning.

För att Du på bästa sätt skall kunna utnyttja alla dessa anmärkningsvärda egenskaper föreslår vi att Du bekantar Dig med deras placering och funktionssätt genom att noga läsa igenom denna handbok innan Du börjar spela. På det sättet bör Du få ut mesta möjliga glädje av instrumentet på kortast möjliga tid.

Velkommen til Yamahas vidunderlige musikkverden!

Gratulerer! Med Yamaha Electone har du nå fått deg det mest avanserte, elektroniske orgel som er å få idag. I B-605 og B-805 har Yamaha kombinert det ypperlige håndverk som firmaet har tilegnet seg i løpet av de mange år det har laget førsteklasses musikkinstrumenter med de siste utviklingene innen den moderne elektroniske teknologi. Vi er helt overbeviste om at du spesielt kommer til å glade deg over den enestående naturlige lyden og de glimrende instrumentimitasjonene som Yamahas originale digital-elektronikk har muliggjort. Vi tror også at de mange

egenskapene som gjør at Electone er så lett å spille på vil gi deg mange, mange timer med musikalsk glede.

For at du skal få maksimalt utbytte av alle disse bemerkelsesverdige egenskapene foreslår vi at du gjør deg kjent med hvor alle knapper, pedaler o.l. sitter og hvorledes disse brukes ved nøye å lese gjennom denne håndboken før du begynner å spille. På denne måten blir du istrand til å få størst mulig glede av instrumenter på kortest mulig tid.

	Page
Before Starting to play.....	1
Playing Melodies Using Various Instrumental Sounds.....	2
Automatic Rhythm Accompaniments for Your Melodies.....	3
Automatic Chord and Bass Accompaniment.....	4
The Automatic Arpeggio Effect.....	7
Harmonies to the Melody Line.....	8
Creating the Sound You Want.....	9
Ensemble Sounds.....	11
Interesting Tonal Variation and Innovative Sounds.....	12
Accessory Jacks.....	14
Looking After Your Electone.....	14
Important Advice.....	14
Guide to Registrations.....	15
Your Electone Music Book.....	23
Specifications.....	41

	Seite
INHALTSVERZEICHNIS	
Ein Wort vorweg.....	1
Das Spieler einfacher Melodien mit verschiedenen	
Instrumentalstimmen.....	2
Automatische Rhythmusbegleitung zur Melodie.....	3
Automatische Akkord- und Baßbegleitung.....	4
Einsatz des Auto-Arpeggio-Effekts.....	7
Kleine Harmonielehre	8
Klanggestaltung nach eigenen Wünschen	9
Ensemble-Spiel	11
Interessante Klangvariationen und eigene "Klangschöpfungen".....	12
Zubehöranschlußbuchsen	14
Wartung und Pflege Ihrer Electone Orgel	14
Wichtige Ratschläge	14
Leitfaden zur richtigen Wahl der Register.....	15
Ihr Electone Notenheft.....	23
Technische Daten.....	41


	Sid
INNEHÅLL	
Innan Du börjar spela	1
Att spela melodier med användning av olika instrumentljud.....	2
Automatiskt rytmkompanjemang till melodierna	3
Automatiskt ackord- och basackompanjemang	4
Automatisk arpeggio-effekt	7
Melodi med ackord	8
Skapa det "sound" Du önskar	9
Ensembleljud	11
Intressanta tonvariationer och nya ljud	12
Tillbehörsuttag	14
Skötsel av Electone	14
Viktiga råd	14
Registreringshandledning	15
Electone musikbok	23
Specifikationer	41

	Side
INNHOLD	
Før du begynner å spille	1
Spilling av melodier ved hjelp av forskjellige instrumentlyder	2
Automatiske rytmiske-akkompagnementer til dine melodier	3
Automatisk akkord- og bass-akkompagnement	4
Den automatiske arpeggio-effekten	7
Harmonier til melodien	8
Slik skaper du den lyd du ønsker	9
Ensemblelyder	11
Interessante tonevariasjoner og "nye" lyder	12
Uttak for ekstrautstyr	14
Stell av ditt Electone	14
Viktige råd	14
Registreringsveiledning	15
Ditt Electone Notehefte	23
Spesifikasjoner	41

PART I: Before Starting to Play

Some Fundamentals of Music

Let us first look at the relationship between the conventional musical staff notation and the keys on the actual keyboard.

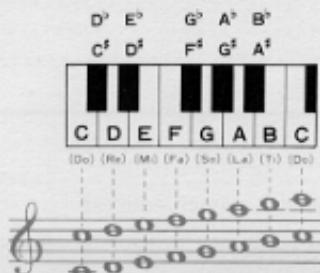

Next familiarize yourself with the notation for the length values of the notes and the rests.

Symbol	Value in terms of quarter notes
● Whole note	↑ + ↑ + ↑ + ↑
○ Dotted half note	↑ + ↑ + ↑
○ Half note	↑ + ↑
○ Dotted quarter note	↑ + ○
○ Quarter note	↑
○ Dotted eighth note	○ + ○ (○ = ↑)
○ Eighth note	○ (○ = ↑)
○ Sixteenth note	○ (○ ○ ○ ○ = ↑)

Symbol	Rest values in terms of quarter notes
— Full rest	↓ + ↓ + ↓ + ↓
— Dotted half rest	↓ + ↓ + ↓
— Half rest	↓ + ↓
— Dotted quarter rest	↓ + ○
— Quarter rest	↓
— Dotted eighth rest	○ + ○ (○ ○ = ↓)
— Eighth rest	○ (○ ○ = ↓)
— Sixteenth rest	○ (○ ○ ○ ○ = ↓)

Now that you have a basic understanding of the relative values of the notes and rests, let's look at a segment of an actual score.

This diagram shows a segment of a musical score. Annotations include:
- "This note (F) is raised 1/2" pointing to a note.
- "Designation for the rhythm (3/4 time or waltz time)" pointing to a time signature.
- "Names of chord (Accompaniment)" pointing to a bracket above a series of notes.
- "Melody" pointing to a bracket below a series of notes.
- "One Measure or Bar" with a horizontal arrow indicating the duration of a measure.

"Little Brown Jug"

A musical score for the song "Little Brown Jug" in common time (C). The score consists of two staves. The top staff is for the Melody and the bottom staff is for the Accompaniment. The melody staff features a treble clef, a key signature of one sharp (F#), and a common time signature (C). The accompaniment staff features a bass clef and a common time signature (C).

Preliminary Settings for Sound Production

First of all, make sure that the plug is firmly inserted in the electrical outlet and then:

- 1) Turn the Power Switch to the "ON" position.

The power indicator lamp will light up.



- 2) Turn the Master Volume knob clockwise.

This knob controls the volume for the entire instrument. The further you turn it clockwise, the greater the volume.



- 3) Depress the Expression Pedal.


This pedal enables you to change the volume level while you are playing without taking your hands from the keyboards.




- 4) Select the desired Voice functions.

(Refer to pages 2, 9 and 10 for instructions on setting these controls).

PART II: Playing Melodies Using Various Instrumental Sounds

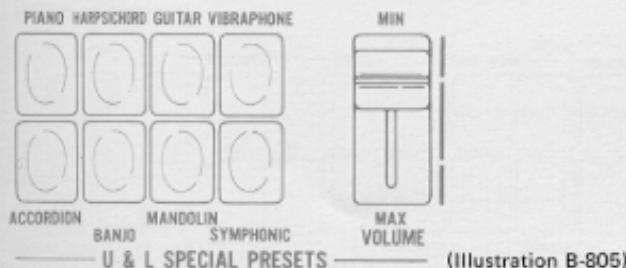

(Illustration B-805)

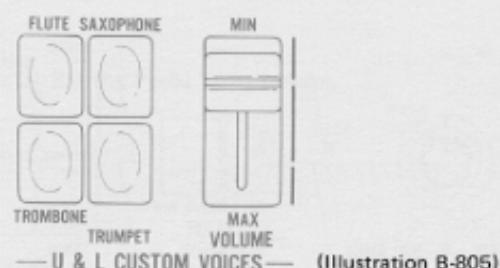

(Illustration B-805)

Special Presets

By pressing one of the voice selector buttons in the Special Presets switch bank, you can program the Electone to play with the sound quality and timbre of a variety of instruments. Let's use one of these instrumental voices to play a melody on the upper keyboard.

★ Please turn all other buttons and levers OFF.

- 1) Depress one of the seven (B-605: five) voice selector buttons in the Special Presets switch bank.
- 2) Depress the yellow Special Presets tablet in the Preset Ensemble section.



- 3) Set the Special Presets Volume control to Max.
- 4) Pressing the keys of the upper keyboard will now produce the sound of the instrument you have selected.

★ Practice playing the melody on the previous page in a variety of different voices.

■ Symphonic

Now, if you depress the Symphonic button, you will obtain a rich, expansive sound.

★ The Special Presets can also be used with the lower keyboard. Refer to page 11 for details.

Custom Voices

Like the Special Presets, the Custom Voices consist of an array of voices which can duplicate the sounds of a variety of instruments. Since the tone qualities and volumes of the voices in this array vary minutely, they produce a very realistic and natural sound.

- 1) Depress one of the four voice selector buttons in the Custom Voices switch bank.
- 2) Depress the red Custom Voices tablet in the Preset Ensemble section.



- 3) Slide the Custom Voices Volume control lever to Max.
- 4) Pressing the keys of the upper keyboard will now produce the sound of the instrument you have chosen.

★ Practice using the following melody.

★ The Custom Voice function can also be used with the lower keyboard (B-805 only). Refer to page 11 for details.

"Nocturne"

PART III: Automatic Rhythm Accompaniments for Your Melodies

(Illustration B-805)



Auto Rhythm

This function automatically provides the clear, crisp rhythms of percussion instruments like cymbals, drums, bongos and the like. Why not add a little rhythmic background to your performance?

1) Choose one of the 16 (B-805: 12) Rhythm selector buttons and depress it.

You can also combine rhythms to achieve interesting and varied effects by pushing several buttons in any horizontal combination simultaneously. (However, it is not possible to obtain compound rhythms by pressing both buttons in any one vertical combination.)

2) Depress either one of the START switches.

If you press the START switch on the right the rhythm accompaniment will begin immediately.

If you press the SYNCHRO START switch on the left, the rhythmic accompaniment will cut in as soon as you depress either a key on the lower keyboard or one of the pedals.

3) The rhythm is regulated by a combination of the TEMPO, VOLUME and BALANCE knobs.

TEMPO knob: The further this is turned clockwise, the faster the tempo of the rhythm.

VOLUME knob: (Inner control knob) Turn this clockwise to increase the volume.



BALANCE knob (B-805 only): (Outer control knob) Turn this clockwise to emphasize the rhythm's treble, and counterclockwise to accentuate its bass.

■ Rhythm Variation

This function allows you to introduce a preselected one-bar rhythmic variation into the music every four or eight bars. Since the rhythms change at natural breaks in the musical phrasing, it provides an excellent way to enliven the music.

If you depress the ON button only, the new rhythm variation pattern will be introduced every four bars.

To introduce the variation every eight bars you must depress both the ON and the 4 BAR/8 BAR buttons simultaneously.

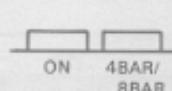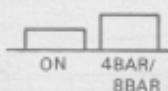

■ Break Variation

To produce a break variation rhythm, simply press the ON switch. If you press this button while the normal rhythmic accompaniment is operating, it will light up and the rhythmic pattern will change to the fill-in pattern. When you remove your finger from the button the break variation rhythm will continue until the end of the bar and the original normal rhythmic pattern will be automatically restored from the beginning of the next bar.

★ This button also enables you to generate an intro rhythm automatically. If you press the ON switch before you depress the Rhythm Start switch, you will get a two-bar intro rhythm pattern before the rhythm starts.

★ When the BREAK VARIATION switch is ON you can use the foot switch (located at the rear left of the Expression Pedal) to turn the break variation rhythm on and off.

You thus have the convenience of being able to introduce the rhythm fill-in into the piece you are playing without taking your hands from the keyboard.




■ Rhythm Stop

This function (activated by a switch in Model B-805) enables you to use the foot switch (located at the rear left of the Expression Pedal) to stop the rhythm accompaniment whenever you wish without taking your hands from the keyboards.

★ Now, you can play the melodies shown on page 1 and 2 using your favorite rhythm.

PART IV: Automatic Chord and Bass Accompaniment

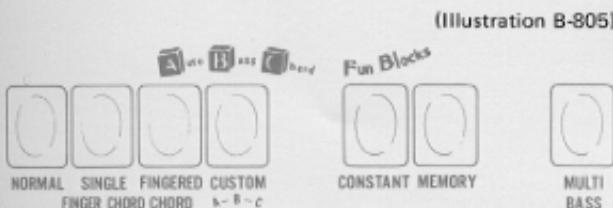

Auto Bass/Chord (Fun Blocks)

This function allows the introduction of lower keyboard chords and pedal bass notes into the rhythm accompaniment. You can thus play a wide variety of chords and bass notes automatically, determining the combination by selecting one of the function switches: Single Finger Chord, Fingered Chord, or Custom A-B-C. For added convenience and flexibility your Electone is also equipped with two more automatic functions — Memory and Multi Bass.


Automatic Chord Accompaniment with the Touch of a Finger

[Single Finger Chord]

- 1) Press the START or SYNCHRO START switch in the Auto Rhythm switch bank.


Depress the desired rhythm selector button and set the TEMPO, VOLUME and BALANCE knobs.

- 2) Adjust the Lower Tone Levers to the desired settings.

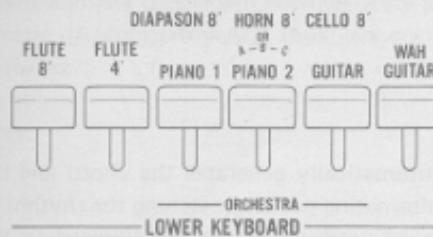

When the Auto Bass/Chord switch is on, the three (B-605: two) Orchestra voices of the Lower Tone Levers generate the tones of the instruments indicated in the lower line [Piano 1, Piano 2(B-805 only), Guitar] and automatically produce a chord rhythm that matches the pattern produced by the Auto Rhythm section. The flute tones will be constant.

- 3) Set the Pedal Tone Levers.

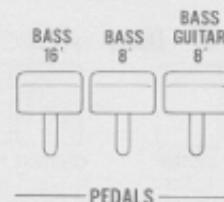

- 4) Depress the green Single Finger Chord button.




- 5) Now if you hold down one of the keys on the lower keyboard you will automatically introduce the chord and bass note into the established rhythm.



The chord produced at this time is the major chord whose fundamental is the note corresponding to the key played on the lower keyboard. Thus to produce a C major chord, just press the C key, press the F key to produce an F major chord and so forth.

Relation between key position on lower keyboard and the generated chord.

(Lower keyboard)

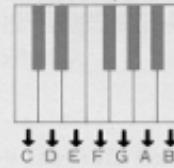


C D E F G A B (Major chord)

The bass note that is generated is also determined by the key played on the lower keyboard and will alternate with the chord automatically.

- ★ Try using this automatic program function while playing the selection given below. Play on the upper keyboard while you supply the accompaniment by simply pressing the key on the lower keyboard that corresponds to the fundamental of the chord you want.


"Little Brown Jug"

The musical notation consists of two staves. The upper staff is for the right hand (treble clef) and the lower staff is for the left hand (bass clef). The notes are: C, F, G, C, C, F, G, C.

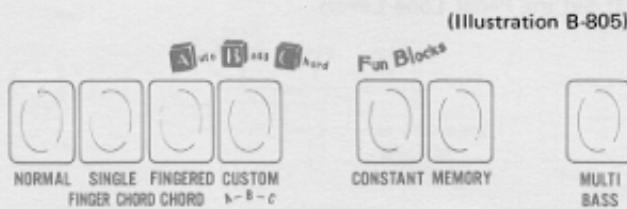

■ Producing Minor and Seventh Chords

In addition to major chords, you can also use the Single Finger Chord function to produce automatic accompaniment with minor or seventh chords. To produce a seventh chord simply tread on any of the white (long) pedals on the pedalboard while holding down the appropriate key on the lower keyboard at the same time. To produce a minor chord, depress one of the black (short) pedals instead.

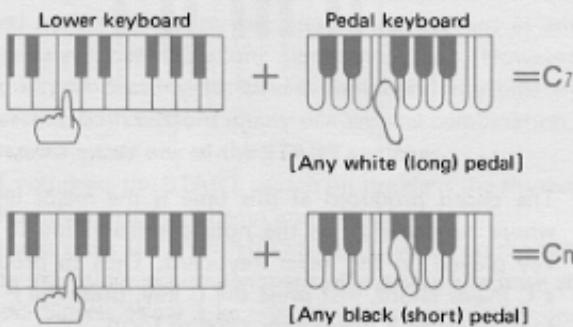

If you depress both a black and a white pedal while holding down a key on the lower keyboard the result will be a minor seventh chord.

★ Let's practice using this function while playing the melody below.

Producing an Automatic Chord Accompaniment by Fingering an Entire Chord

[Fingered Chord]

- 1) Turn on the START or SYNCHRO START switch in the Auto Rhythm switch bank.
Depress the desired rhythm selector button and set the TEMPO, VOLUME and BALANCE knobs.
- 2) Adjust the Lower Tone Levers to the desired settings.
- 3) Adjust the Pedal Tone Levers to the desired settings.
- 4) Depress the red Fingered Chord button.




- 5) Finger and hold down a chord on the lower keyboard.



This automatically generates the chord and bass note in an alternating pattern matching the rhythm selected. The chord produced is the one fingered on the lower keyboard and the bass note is determined by this chord.

- ★ Play the accompaniment on the previous page using the fingered chord. This is the finger positioning for the lower keyboard:

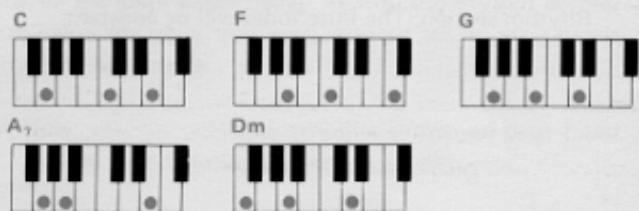

"Nocturne"

C A₇ Dm

Automatic Accompaniment Using Both Lower Keyboard and Pedals

[Custom A-B-C]

- 1) Turn on the START or SYNCHRO START switch in the Auto Rhythm switch bank.

Depress the desired rhythm selector button and set the TEMPO, VOLUME and BALANCE knobs.

- 2) Adjust the Lower Tone Levers to the desired settings.

- 3) Adjust the Pedal Tone Levers to the desired settings.

- 4) Switch on the white Custom A-B-C button.



- 5) Depress the pedals while holding down the chord on the lower keyboard.

The chord part of the Automatic Accompaniment will be the sound generated by the lower keyboard, while the bass note shall be based on the note depressed on the pedals. In other words, the lower keyboard and the pedals will each generate a separate Automatic Accompaniment, thus enhancing your performance.

■ Memory



This function allows you to store the Automatic Rhythm Accompaniment you have selected in a memory bank. If you press the Memory button together with the Single Finger Chord, the Fingered Chord or the Custom A-B-C button, the automatic rhythm accompaniment will continue even if you should remove your hand from the lower keyboard. (With the Custom A-B-C program the bass note selected for pedal accompaniment will also be retained in the memory.) Using this Memory function you have only to touch the lower keyboard to effect a chord change. A welcome convenience indeed!

■ Multi Bass (B-805 only)



This function allows you to change the automatic bass accompaniment pattern. If you press the Multi Bass button together with the Single Finger Chord, the Fingered Chord or the Custom A-B-C button, the bass note will slip out of the former simple pattern of alternating with the chord into a number of other, more complex, patterns such as the "walking style". This permits you to use and enjoy a wide variety of automatic bass patterns in the pieces you play. The exact nature of the new pattern will vary according to the rhythm originally established.

■ Constant

This switch is used to disengage the automatic accompaniment from the auto-rhythm pattern. When the Constant button and the Single Finger or Fingered Chord button are pressed together, the automatic accompaniment will no longer match the auto-rhythm pattern. Instead, the chord and the bass note will be produced continuously, as if the respective keys were being held down. This function can also be coupled with the Memory function to allow greater flexibility.




■ Normal

This control cancels the Auto Bass/Chord program. When the Normal control is ON you may play the lower keyboard and the pedals to provide any normal accompaniment you may desire without introducing automatic patterns. When the auto-rhythm is on and the Memory button is depressed together with the Normal button, the last sound you played on the lower keyboard will be emitted continuously even if you take your hand off.

★ The Auto Bass/Chord function will not operate if the Break Variation program is on.

★ If you do not employ the Auto-Rhythm, the Auto Bass/Chord program will not function.

PART V: Using the Automatic Arpeggio Effect

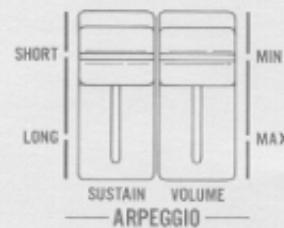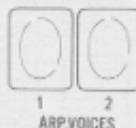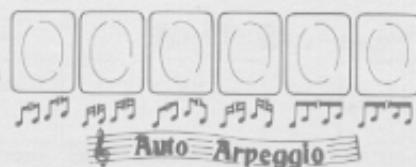

(Illustration B-805)

Auto Arpeggio

This function enables you to automatically produce a brilliant arpeggio in time with the auto-rhythm by simply depressing the keys on the lower keyboard. This function can be used to great advantage in enhancing your performance by adding a decorative ripple effect to the accompaniment.

- 1) Switch on the SYNCHRO START button in the Auto-Rhythm switch bank, choose the appropriate Rhythm Selector and adjust the TEMPO, VOLUME and BALANCE knobs to your liking. Because the Auto Arpeggio works in conjunction with the Auto-Rhythm function, make certain that you set the latter into the operating mode when you want to utilize the automatic arpeggio effect.
- 2) Select one of the six (B-605 : four) available patterns by pressing the appropriate selector button.



- 3) Switch on the desired Voice selector button.

These buttons determine the register of the Auto Arpeggio with #2 being one octave higher than #1. By turning on both switches at the same time, you can generate two voices simultaneously. Since these Voice buttons also function as activating and deactivating switches, be sure that both are in the OFF position when the Auto Arpeggio effect is not wanted.

- 4) Set the Volume control.
The more the slide is moved towards MAX the louder the arpeggio effect will be.
- 5) Hold down a key on the lower keyboard.
This will automatically produce an arpeggio based on the notes you have selected. Holding down a chord rather than a single note will generate a flowing broken chord sound. The arpeggio pattern will change to match the rhythm even if you change to a different tempo.

■ Sustain

By using the Sustain lever you can produce a sustained arpeggio. Moving the lever toward LONG will increase the sustain effect and prolong the arpeggio.

■ Auto Arpeggio + Auto Bass/Chord

With the Single Finger Chord function on: simply play a note on the lower keyboard to generate an arpeggio together with the automatic chord and bass accompaniment. The arpeggio effect will follow the same pattern as a chord would when played on the lower keyboard; in the same way you can change the arpeggio to that of a seventh or minor chord by simply depressing one of the pedals together with one of the keys. You can also use the Fingered Chord and the Custom ABC together.

Arpeggio + Memory: When the Memory function is activated along with the Arpeggio, the arpeggio effect will continue even when you take your hand from the lower keyboard.

- ★ The Auto Arpeggio program will not function when the Break Variation program is being used.
- ★ Now try playing the tune on the previous page with the Auto Arpeggio ON.

PART VI: Harmonies to the Melody Line



Melody On Chord

This function automatically generates harmonies for each note of the melody played on the upper keyboard. Since the chord selected on the lower keyboard is superimposed on the melody, you can enjoy the luxury of a rich and full melody line with harmonies even though you only play a single note at a time on the upper keyboard.

1) Set the Upper and Lower Tone Levers. (Refer to pages 9–10)

The sounds to harmonize with the melody played on the upper keyboard should be determined by the Upper Tone Levers or the Ensemble Voices.

★ The Special Presets and Custom Voices cannot be used to generate chords with the Melody On Chord function.

2) Switch on either Mode 1 or Mode 2.



These switches control the operation of the Melody On Chord function.

Mode 1 (Open harmony): when you select this mode, harmonies are added in the lower registers some way from the notes played on the upper keyboard, so that the melody and the harmony sound as if they are slightly separated.

Mode 2 (Closed harmony): in this mode, the harmonies are added in higher registers than in Mode 1 and the melody sounds almost as if it is being played in chords.

3) Play the melody on the upper keyboard and the chord on the lower.



When this is done the chord played on the lower keyboard will be produced with the melody in the voice selected for the upper keyboard. The Melody On Chord function ceases to operate when you stop holding down the keys on either the upper or the lower keyboard.

■ Volume Soft



The Volume Soft button further reduces the sound generated by the Melody On Chord, which is normally quieter than the sound produced by the upper keyboard anyway.

■ Cancel



This button disengages the Melody On Chord function.