



N-100 Quick Operation Guide

★ Try selecting the voice demos and preset songs from the keyboard!

As soon as you press the [DEMO] button, the GRAND PIANO 1 demo song starts.

Simultaneously hold down the [DEMO] button and press the one of the highlighted keys shown below to select the desired voice demo or preset song.

Voice Demo

Preset Song

DEMO
PIANO/VOICE

A-1 B-1 C#0 D0 D#0 E0 F#0 G0 G#0 A#0 B0 **C1** C#1 D1 D#1 E1 F#1 G1 G#1 A1 A#1 B1 **C2** C#2 D2 D#2 E2 F#2 G2 G#2 A2 A#2 B2 **C3** C#3 D3 D#3 E3 F#3 G3 G#3 A3 A#3 B3 **C4** C#4 D4 D#4 E4 F#4 G4 G#4 A4 A#4 B4 **C5** C#5 D5 D#5 E5 F#5 G5 G#5 A5 A#5 B5 **C6** C#6 D6 D#6 E6 F#6 G6 G#6 A6 A#6 B6 **C7**

Grand Piano 1 Demo Grand Piano 2 Demo
Piano & Strings Demo Electronic Piano 1 Demo
Electronic Piano 2 Demo Church Organ Demo Jazz Organ Demo
Strings Demo Vibraphone Demo Harpsichord Demo
Song No. 1 Song No. 2 Song No. 3 Song No. 4
Song No. 5 Song No. 6 Song No. 7 Song No. 8
Song No. 9 Song No. 10 Song No. 11 Song No. 12
Song No. 13 Song No. 14 Song No. 15 Song No. 16
Song No. 17 Song No. 18 Song No. 19 Song No. 20
Song No. 21 Song No. 22 Song No. 23 Song No. 24
Song No. 25 Song No. 26 Song No. 27 Song No. 28
Song No. 29 Song No. 30 Song No. 31 Song No. 32
Song No. 33 Song No. 34 Song No. 35 Song No. 36
Song No. 37 Song No. 38 Song No. 39 Song No. 40
Song No. 41 Song No. 42 Song No. 43 Song No. 44
Song No. 45 Song No. 46 Song No. 47 Song No. 48
Song No. 49 Song No. 50 ALL

★ Try selecting voices from the keyboard and change the parameter settings!

While hold down the [PIANO/VOICE] button, press the highlighted keys shown below to select the voices or set the parameters.

DEMO
PIANO/VOICE


A-1 B-1 C#0 D0 D#0 E0 F#0 G0 G#0 A#0 B0 **C1** C#1 D1 D#1 E1 F#1 G1 G#1 A1 A#1 B1 **C2** C#2 D2 D#2 E2 F#2 G2 G#2 A2 A#2 B2 **C3** C#3 D3 D#3 E3 F#3 G3 G#3 A3 A#3 B3 **C4** C#4 D4 D#4 E4 F#4 G4 G#4 A4 A#4 B4 **C5** C#5 D5 D#5 E5 F#5 G5 G#5 A5 A#5 B5 **C6** C#6 D6 D#6 E6 F#6 G6 G#6 A6 A#6 B6 **C7**

Voices (including Dual voices)
Grand Piano 1, Grand Piano 2, Electronic Piano 1, Electronic Piano 2, Church Organ, Jazz Organ, Harpsichord, Strings, Vibraphone
Reverb Type
Room, Hall 1, Hall 2, Stage, Off
Reverb Depth
1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, Default
Dual Octave Setting
-1 (Voice 1), 0 (Voice 1), +1 (Voice 1), -1 (Voice 2), 0 (Voice 2), +1 (Voice 2)
Dual Balance
-6, -4, -2, 0, 1, 3, 5, 6, 8, 10, 12, 14, 16, 18, 20
Touch Type
FIXED, MEDIUM, HARD

N-100 Quick Operation Guide

★ Change the transpose setting and make important MIDI settings.

Simultaneously hold down both the [DEMO] and [PIANO/VOICE] buttons, and press the one of the highlighted keys shown below to change the desired parameter setting.

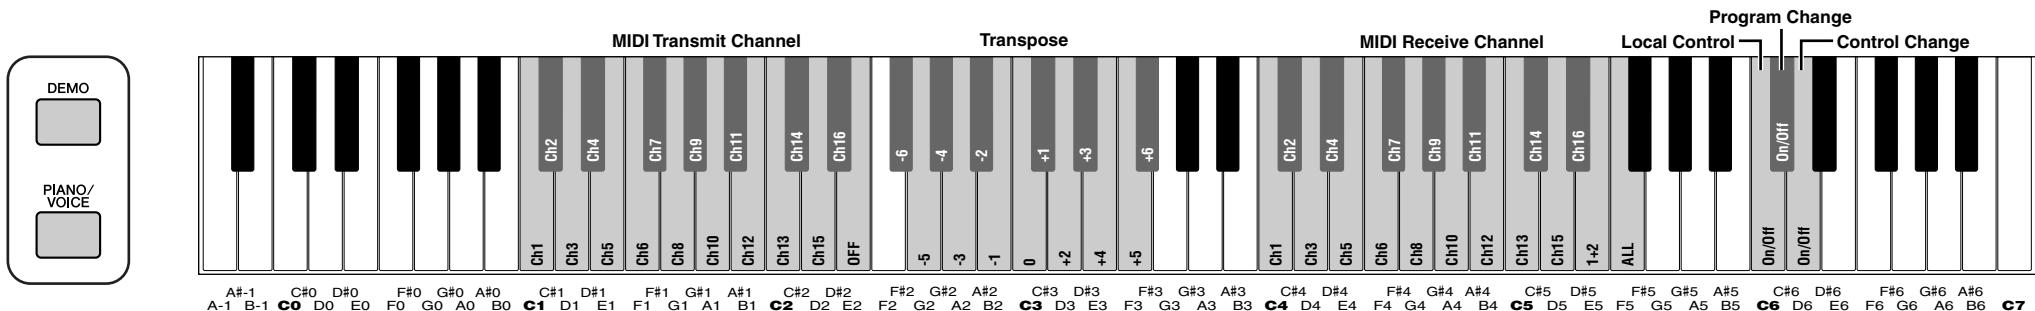

★ Fine-tune the pitch of the instrument.

Simultaneously hold down the highlighted keys at the far left of the keyboard, and press the one of the highlighted keys in the center (shown below) to adjust the fine tuning setting.

