

Troubleshooting

Please note that the appearance of any of the following phenomena does not indicate a mechanical failure of the SK-100.

Problem	Possible Cause and Solution
A crackling noise is sometimes heard.	Noise may be produced when either an electrical appliance is turned on or off, or an electric power tool (such as a drill) is used in the proximity of the SK-100. If this occurs, plug the SK-100 into an electrical outlet located as far as possible from the device that seems to be the source of the problem.
Interference from radio, TV, or other sources occurs.	This is caused by the proximity of a high-power broadcasting station or amateur ham radio set up.
The sound of the SK-100 causes surrounding objects to resonate.	Because the SK-100 is capable of producing powerful bass sounds, resonance may be caused in surrounding objects, such as cabinets or glass windows. To avoid this, relocate the objects or lower the volume on the SK-100.
When too many keys are pressed, not all of the notes sound.	Total polyphonic capacity is 10 simultaneous notes.
The sound is too soft.	Check all of the volume controls, making sure that they are set to suitable levels: the MASTER VOLUME control, the ACCOMPANIMENT/RHYTHM VOLUME controls (when using rhythm/accompaniment) and the Expression pedal.
While an Intro./Ending pattern is automatically playing, playing keys in the Split Left section does not produce any sound or have any effect on the chords.	Since the accompaniment chords play automatically one after another, the Split Left section of the keyboard is designed not to produce any sound or change the chords during the play of an Intro./Ending pattern.
The sound of the chord you play with your left hand is different than expected and/or the rhythm starts playing unexpectedly.	This may happen when Registration Menu standby is on or the Synchro Start function has been inadvertently turned on, and is normal for those conditions. (See pages 4, 7.)

Specifications

Technische Daten / Caractéristiques / Especificaciones

Keyboard	61 keys (C1 - C6)
Registrations	Church Organ, Full Flutes, Theatre Opener, Theatre Ballad, Organ Combo 1, Organ Combo 2, Marching Band 1, Marching Band 2, Polka, Dixieland Band, Musical, Bluegrass, Waltz, Country Ballad, Big Band 1, Big Band 2, Hawaiian, 50's Rock, 60's Slow Rock, 70's Ballad, Bossanova, Samba, Beguine, Tango
Voices	Pipe Organ, Full Organ, Theatre Organ, Jazz Organ, Strings, Brass, Tutti, Chorus, Clarinet, Horn, Saxophone, Flute, Piano, Vibraphone, Guitar, Banjo, Accordion, Hawaiian Guitar
Voice Controls	Melody On Chord (M.O.C.), Transpose (▼, ▲), Left Voice, Voice Bank
Effects	Tremolo (Fast), Sustain
Rhythms	March, March 6/8, Polka, Dixie, Waltz, Broadway, Country 1, Country 2, Swing 1, Swing 2, Ballad, Slow Rock, 8 Beat, Rock 'n' Roll, Bossanova, Samba, Beguine, Tango
Rhythm and Accompaniment Controls	Accompaniment/Rhythm Volume; Accompaniment Variation; Auto Bass Chord (A.B.C.): Single Finger (S.F.), Fingered Chord (F.C.), Off; Tempo (▼, ▲); Intro, Ending; Fill In; Synchro Start; Start/Stop; Rhythm Bank
Other Controls	Demo, Master Volume, Expression Pedal, Power Switch
Outputs	Headphones (mono), AUX Out (mono)
Amplifier	35 W
Speakers	20 cm x 2, 5 cm x 1 (two-way system)
Dimensions (W x D x H)	1030 x 475 x 883 mm (40-5/8" x 18-5/8" x 34-3/4")
Weight	37.5 kg (82 lbs., 11 oz.)
Included Accessories	Bench, Music Stand, Owner's Manual


Specification and descriptions in this Owner's Manual are for information purposes only. Yamaha Corp. reserves the right to change or modify products or specifications at any time without prior notice. Since specifications, equipment or options may not be the same in every locale, please check with your Yamaha dealer.

Minus-One Song Scores

Noten der MINUS-ONE-Stücke / Partition des œuvres "Minus One" / Partituras de canción Menos Uno


- Even if you have no previous experience playing a keyboard, you'll still be able to easily play the Minus-One songs below. The note names in the scores correspond to the key names printed just above the keyboard, and indicate the keys you should play. (Refer to the Minus-One Songs section on page 15 for more information.)
- Selbst wenn Sie keine Erfahrung beim Spiel mit einem eyboard haben, können Sie trotzdem leicht die nachfolgenden Minus-One-Stücke spielen. Die Bezeichnung der Noten auf dem Notenblatt entspricht den Tastenbezeichnungen, die unmittelbar über der Tastatur aufgedruckt sind, und die Tasten kennzeichnen, die Sie anschlagen müssen. (Weitere Informationen hierzu finden Sie im Kajetel "Stücke mit der Minus-One Funktion" auf Seite 15.)
- Même si vous n'avez aucune expérience d'un instrument de musique à clavier, vous serez en mesure de jouer sans peine les œuvres "Minus One" ci-dessous. Les noms des notes figurant sur les partitions correspondent à ceux gravés au-dessus du clavier et vous indiquent les notes que vous devez jouer. (Pour plus de renseignements, reportez-vous au paragraphe Œuvres "Minus One", page 15.)
- Aunque no tenga experiencia previa de tocar el teclado, podrá tocar sin problemas las canciones Menos Uno de debajo. Los nombres de nota en las partituras corresponden a los nombres de tecla impresos justo por encima del teclado, e indican las teclas que deberá tocar (consulte la sección de canciones Menos Uno en la página 15 para más información).

- All the chords (Fingered Chord mode) you'll need for the following songs are given in the fingering chart below. Play these chords as indicated in the Split Left section of the keyboard.
- Alle Akkorde (FINGERED CHORD-Modus), die für die folgenden Stücke benötigt, sind in der nachfolgenden Tabelle für geöffnete Akkordbegleitung angegeben. Spielen Sie diese Akkorde wie angezeigt im Tastaturreteil links vom Split-Punkt.
- Tous les accords (mode d'accord à plusieurs doigts) que vous devrez jouer au cours des œuvres qui suivent figurent sur le tableau ci-dessous. Jouez ces accords sur la partie gauche du clavier, comme indiqué.
- Todos los acordes (en el modo de acorde de todos los dedos) que necesitará para las canciones siguientes se ofrecen en la tabla de debajo. Toque dichos acordes como se indica en la sección de División Izquierda del teclado.

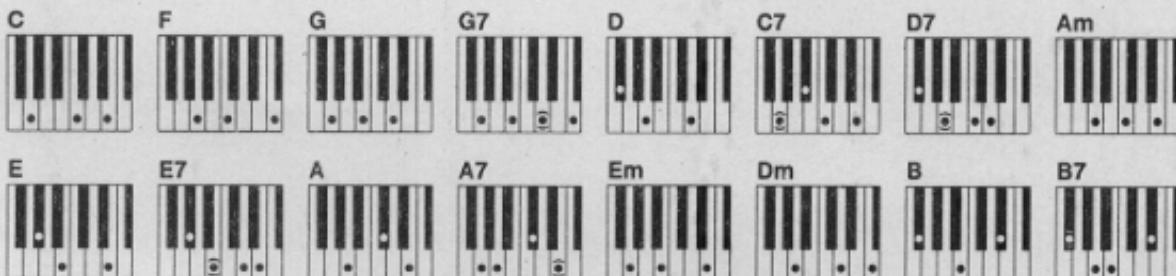

- The Minus-One songs of the SK-100 are simple arrangements of popular songs, and as such, may sound different or have a different feel compared to the original versions.
- Die Minus-One-Songs der SK-100 sind einfache Arrangements populärer Stücke. Daher klingen sie möglicherweise etwas anders und haben im Verhältnis zu den Originalversionen ein anderes "Feeling".
- Les œuvres "Minus One" sont des arrangements simples de chansons populaires; ces arrangements peuvent donc sembler différents de l'œuvre d'origine.
- Las canciones Menos Uno del SK-100 son arreglos simples de canciones populares, y como tales, pueden sonar diferente o dar una sensación diferente en relación a las versiones originales.

The star marks ★ next to the titles indicate the relative difficulty of the songs; a single star indicating the easiest level, and so on.
Der Stern ★ neben den Titeln kennzeichnet den relativen Schwierigkeitsgrad eines Stücks. Ein Stern kennzeichnet leichte Stücke und so weiter.
Des astérisques ★ sont employés pour indiquer la difficulté des œuvres; un seul astérisque signifie que l'œuvre est facile.
Las marcas de estrella ★ junto a los títulos indican la dificultad relativa de las canciones; una sola estrella indica el nivel más fácil, y así sucesivamente.

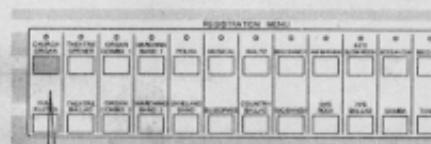

The First Noel

Sacred Song

Press the shaded button twice quickly./ Drücken Sie die schaltierte Taste zweimal kurz hintereinander./ Appuyez rapidement et à deux reprises sur le bouton ombré./ Pulse dos veces seguidas el botón sombreado de la figura.


INTRO.

Play the entire phrase twice.

Spielen Sie die gesamte Phrase zweimal.

Jouez deux fois la même phrase musicale.

Toque toda la frase dos veces.

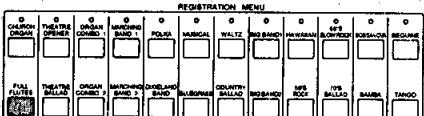

Michael, Row The Boat Ashore

American Folk Song


Play the melody one octave higher than is written. / Spielen Sie die Melodie eine Oktave höher als angegeben. / Jouez la mélodie une octave plus haut qu'indiqué. / Toque la melodía una octava más alta de lo que está escrita.

C FILL IN C F G

C C F G7

C C F C

C F G7 C ENDING

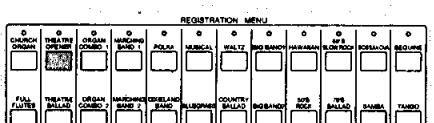

Buffalo Gals

American Folk Song

C C G(G7) C

FILL IN

C G(G7) C



Aura Lee

Traditional

The sheet music consists of four staves of music. The first staff starts with a 'FILL IN' followed by a bar line. The second staff begins with a 'C' note. The third staff begins with a 'D' note. The fourth staff begins with a 'G(G7)' chord. The fifth staff begins with a 'C' note.



Piano Sonata No.8 2nd Mov.

L.v. Beethoven

- Play the melody one octave higher than is written. Also, try playing "in the groove" with the Bossanova rhythm, playing the notes with slightly shorter durations than written.
- Spielen Sie die Melodie eine Oktave höher als angegeben. Ferner versuchen Sie im Einklang mit dem Bossanova-Rhythmus zu spielen, und die Töne etwas kürzer anzuschlagen als in den Noten angegeben.
- Jouez la mélodie une octave plus haut qu'indiqué. Par ailleurs, tentez de jouer dans l'ambiance du rythme de bossanova, c'est-à-dire en donnant aux notes une durée très légèrement plus brève que ce que le veut la mesure.
- Toque la melodía una octava más alta de lo que está escrita. También pruebe a tocar "en plena forma" con el ritmo Bossanova, tocando las notas con duraciones ligeramente más cortas que están escritas.

The sheet music consists of five staves of music. The first staff starts with a 'FILL IN' followed by a bar line. The second staff begins with a 'C' note. The third staff begins with a 'D7' chord. The fourth staff begins with a 'G' note. The fifth staff begins with a 'C' note. The sixth staff begins with an 'F' note. The seventh staff begins with a 'G(G7)' chord. The eighth staff begins with an 'Em' chord. The ninth staff begins with an 'A' note. The tenth staff begins with a 'Dm' chord. The eleventh staff begins with a 'G(G7)' chord. The twelfth staff begins with an 'F' note. The thirteenth staff begins with a 'C' note.

REGISTRATION MENU											
CHURCH ORGAN	THEATRE ORGAN	ORGAN COULET	MARCHING BAND	POLKA	MUSICAL	WALTZ	BIG BAND	HARMONICA	BLUES	ROCK	REGGAE
FUSS PIANO	THEATRE PIANO	ORGAN PIANO	MARCHING BAND	BLUES	COUNTRY BAND	REGGAE	SO'S BAND	SO'S BAND	SO'S BAND	Salsa	Tango
FLUTE	THEATRE FLUTE	ORGAN FLUTE	MARCHING FLUTE	BLUES FLUTE	COUNTRY FLUTE	REGGAE FLUTE	SO'S FLUTE	SO'S FLUTE	SO'S FLUTE	Salsa	Tango
CLARINET	THEATRE CLARINET	ORGAN CLARINET	MARCHING CLARINET	BLUES CLARINET	COUNTRY CLARINET	REGGAE CLARINET	SO'S CLARINET	SO'S CLARINET	SO'S CLARINET	Salsa	Tango



My Old Kentucky Home

American Folk Song

Sheet music for "My Old Kentucky Home" in C major. The first measure shows a bass line with a downward stroke and four 'X' marks above it, followed by a treble clef and a 'C' chord. The second measure starts with a 'F' chord, followed by a 'C' chord with an 'A' and 'G' note. The third measure starts with a 'D(D7)' chord, followed by a 'G' chord.

Sheet music for "My Old Kentucky Home" in C major. The first measure starts with a 'C' chord, followed by a 'F' chord, a 'C' chord with an 'A' and 'G' note, a 'G(G7)' chord, and a 'C' chord. The second measure starts with a 'C' chord, followed by a 'F' chord, a 'C' chord with an 'A' and 'G' note, a 'G(G7)' chord, and a 'C' chord.

REGISTRATION MENU											
CHURCH ORGAN	THEATRE ORGAN	ORGAN COULET	MARCHING BAND	POLKA	MUSICAL	WALTZ	BIG BAND	HARMONICA	BLUES	ROCK	REGGAE
FUSS PIANO	THEATRE PIANO	ORGAN PIANO	MARCHING PIANO	BLUES	COUNTRY BAND	REGGAE	SO'S BAND	SO'S BAND	SO'S BAND	Salsa	Tango
FLUTE	THEATRE FLUTE	ORGAN FLUTE	MARCHING FLUTE	BLUES FLUTE	COUNTRY FLUTE	REGGAE FLUTE	SO'S FLUTE	SO'S FLUTE	SO'S FLUTE	Salsa	Tango
CLARINET	THEATRE CLARINET	ORGAN CLARINET	MARCHING CLARINET	BLUES CLARINET	COUNTRY CLARINET	REGGAE CLARINET	SO'S CLARINET	SO'S CLARINET	SO'S CLARINET	Salsa	Tango

★ The Stars And Stripes Forever

J.P. Sousa

Sheet music for "The Stars And Stripes Forever" in C major. The first measure starts with a 'C' chord, followed by a 'G' chord. The second measure starts with a 'C' chord, followed by a 'G' chord. The third measure starts with a 'C' chord, followed by a 'G' chord. The fourth measure starts with a 'C' chord, followed by a 'G' chord.

Sheet music for "The Stars And Stripes Forever" in C major. The first measure starts with a 'C' chord, followed by a 'G' chord. The second measure starts with a 'C' chord, followed by a 'G' chord. The third measure starts with a 'C' chord, followed by a 'G' chord. The fourth measure starts with a 'C' chord, followed by a 'G' chord.

Sheet music for "The Stars And Stripes Forever" in C major. The first measure starts with a 'G(G7)' chord, followed by a 'C' chord. The second measure starts with a 'F' chord, followed by a 'G(G7)' chord. The third measure starts with a 'C' chord, followed by a 'F' chord. The fourth measure starts with a 'G(G7)' chord, followed by a 'C' chord.

Sheet music for "The Stars And Stripes Forever" in C major. The first measure starts with a 'C' chord, followed by an 'E7' chord. The second measure starts with an 'E7' chord, followed by an 'A' chord. The third measure starts with an 'A' chord, followed by a 'C' chord.

Sheet music for "The Stars And Stripes Forever" in C major. The first measure starts with an 'F' chord, followed by a 'C' chord. The second measure starts with a 'C' chord, followed by a 'G' chord. The third measure starts with a 'G(G7)' chord, followed by a 'C' chord.



Unter dem Doppeladler


J. F. Wagner



★★ She'll Be Coming Round The Mountain

American Folk Song

The image shows three staves of sheet music for guitar. The top staff starts with a 'C' chord, followed by an 'INTRO.' section with a bass note and a treble line. The middle staff begins with a 'C' chord, followed by a 'G(G7)' chord, then a 'C' chord. The bottom staff begins with an 'F' chord, followed by a 'C' chord, then a 'G(G7)' chord, and ends with a 'C' chord.

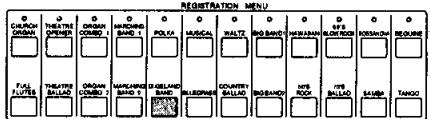

★ Skip To My Lou

American Folk Song

C INTRO.


G(G7)

C

G(G7) C

C G(G7) C

C G(G7) C

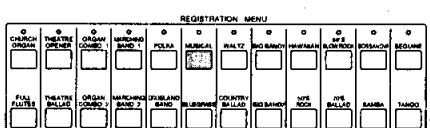

★★ Ouverture "Orphée aux enfers"

J. Offenbach

C INTRO.

C G C G C G

C G C G A E F D G F E D C B A G F E D C G C

C G C G A E F D G F E D C G D E C

REGISTRATION MENU											
CHURCH ORGAN	THEATRE OPERA	ORGAN COMBO	MARCHING BAND	POLKA	WALTZ	BIG BAND	SWING	BLUES	ROCK	ESQUERNA	REGGAE
FULL FLUTE	THEATRE BALLAD	DIDGERIDOO	MARCHING BAND 2	BLUESBAND	COUNTRY BALLAD	ROBBERY	MP3 ROCK	LYRICAL	SAMBA	TANGO	

She Wore A Yellow Ribbon

American Folk Song

Play along in time with the Bluegrass rhythm. / Spielen Sie im Takt zum Bluegrass-Rhythmus. / Jouez en mesure avec le rythme de Bluegrass. / Toque al compás de ritmo Bluegrass.

One measure

C INTRO.

One measure

C

D(D7)

G

C

G(G7)

C

F

C

G(G7)


C

F

C

G(G7)

C

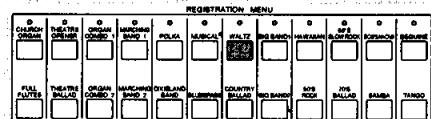

★★

Liebesträume Nr.3

F. Liszt

C
INTRO.

C

A(A7)

D(D7)

G(G7)

C

G(G7)

C

E(E7)

A(A7)

D(D7)

G(G7)

C
ENDING

REGISTRATION MENU															
CHURCH ORGAN	THEATRE ORGAN	ORGAN COMBO	MARCHING BAND 1	POLKA	MUSICAL	WALZ	BIG BAND	MINI LAN	PARADE	CONCERT	ROCK	REGGAE			
FUSS FLUTES	THEATRE BALLAD	ORGAN COMBO 2	MARCHING BAND 2	DIXIELAND	BLUES	COUNTRY	COUNTRY BALLAD	REGGAE	NEW ROCK	NEW BALLAD	SAMBRA	TANGO			



The Stage Coach

American Folk Song

C
INTRO.

G(G7)

C

G(G7)

C ENDING →

REGISTRATION MENU															
CHURCH ORGAN	THEATRE ORGAN	ORGAN COMBO	MARCHING BAND 1	POLKA	MUSICAL	WALZ	BIG BAND	MINI LAN	PARADE	CONCERT	ROCK	REGGAE			
FUSS FLUTES	THEATRE BALLAD	ORGAN COMBO 2	MARCHING BAND 2	DIXIELAND	BLUES	COUNTRY	COUNTRY BALLAD	REGGAE	NEW ROCK	NEW BALLAD	SAMBRA	TANGO			

When The Saints Go Marching In

American Folk Song

C
INTRO.

C

C

C

G(G7)

C

F

C ENDING →

REGISTRATION MENU											
O CHURCH ORCHESTRA	O THEATRE OPERA	O GROUP COMBO	O MARCHING BAND	O POLKA	O MUSICAL	O WALTZ	O BIG BAND	O HONKY TONK	O ROCK	O DISCO	O FOLK
FULL FLUTES	THEATRE BALLAD	GROUP COMBO 2	MARCHING BAND 2	DIXIELAND	MUSICAL	WALTZ	BIG BAND	HONKY TONK	ROCK	DISCO	FOLK
DRUMS	DRUM COMBO	DRUM COMBO 2	MARCHING BAND 3	DIXIELAND	COUNTRY	BALLO	ROCKABILLY	ROCK	ROCK	DISCO	FOLK
PIANO	PIANO	PIANO	PIANO	PIANO	PIANO	PIANO	PIANO	PIANO	PIANO	PIANO	PIANO



Careless Love

American Folk Song

Sprightly, with feeling / Lebhaft, mit Gefühl. / Alerte, avec émotion / Enérgico, con sentimiento

C
INTRO.

G(G7) C G(G7)

C F C G(G7) C

REGISTRATION MENU											
O CHURCH ORCHESTRA	O THEATRE OPERA	O GROUP COMBO	O MARCHING BAND	O POLKA	O MUSICAL	O WALTZ	O BIG BAND	O HONKY TONK	O ROCK	O DISCO	O FOLK
FULL FLUTES	THEATRE BALLAD	GROUP COMBO 2	MARCHING BAND 2	DIXIELAND	MUSICAL	WALTZ	BIG BAND	HONKY TONK	ROCK	DISCO	FOLK
DRUMS	DRUM COMBO	DRUM COMBO 2	MARCHING BAND 3	DIXIELAND	COUNTRY	BALLO	ROCKABILLY	ROCK	ROCK	DISCO	FOLK
PIANO	PIANO	PIANO	PIANO	PIANO	PIANO	PIANO	PIANO	PIANO	PIANO	PIANO	PIANO



Aloha Oe

Hawaiian Folk Song

x x C F C

G(G7) C

F C F G(G7)

C F C

G(G7) C F

C G(G7)

C G(G7) C

REGISTRATION MENU											
CHURCH	THEATRE	ORGAN	MARCHING	POLKA	MUSICAL	WALTZ	BIG BAND	MINSTREL	BLUES	ROCK	REGGAE
FULL FLUTES	THEATER	ORGAN CORDO	MARCHING BAND 1	POLKA BAND	MUSICAL BAND	WALTZ BAND	BIG BAND	MINSTREL BAND	BLUES BAND	ROCK BAND	REGGAE BAND
FULL FLUTES	THEATER	ORGAN CORDO	MARCHING BAND 2	DIXIELAND BAND	BLUESBAND	COUNTRY BAND	ROCK BAND	REGGAE BAND	BLUES BAND	ROCK BAND	REGGAE BAND
FULL FLUTES	THEATER	ORGAN CORDO	MARCHING BAND 2	DIXIELAND BAND	BLUESBAND	COUNTRY BAND	ROCK BAND	REGGAE BAND	BLUES BAND	ROCK BAND	REGGAE BAND

Red River Valley

American Folk Song

Play along in time with the 50's Rock rhythm. / Spleien Sie im Takt zum Rock-Rhythmus der 50er. / Jouez en mesure avec le rythme de rock 50. / Toque al compás de ritmo Rock de 50.

C
INTRO.

C

E E E D E D C C C

C G F E D D G F

C E D C D F G A A

G B C D E D C C C

C ENDING

REGISTRATION MENU											
CHURCH	THEATRE	ORGAN	MARCHING	POLKA	MUSICAL	WALTZ	BIG BAND	MINSTREL	BLUES	ROCK	REGGAE
FULL FLUTES	THEATER	ORGAN CORDO	MARCHING BAND 1	POLKA BAND	MUSICAL BAND	WALTZ BAND	BIG BAND	MINSTREL BAND	BLUES BAND	ROCK BAND	REGGAE BAND
FULL FLUTES	THEATER	ORGAN CORDO	MARCHING BAND 2	DIXIELAND BAND	BLUESBAND	COUNTRY BAND	ROCK BAND	REGGAE BAND	BLUES BAND	ROCK BAND	REGGAE BAND
FULL FLUTES	THEATER	ORGAN CORDO	MARCHING BAND 2	DIXIELAND BAND	BLUESBAND	COUNTRY BAND	ROCK BAND	REGGAE BAND	BLUES BAND	ROCK BAND	REGGAE BAND


Placer d'amor

J. P. E. Martini

C
INTRO.

C G C 3 G(G7) C G 3

F G(G7) C 3 F(Dm) C G(G7) C ENDING

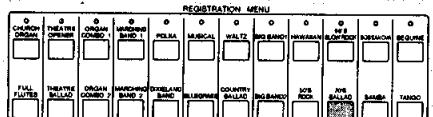

Home Sweet Home


Traditional

C
INTRO.

INTRO.

C F C G(G7) C

C F C G(G7) C ENDING →

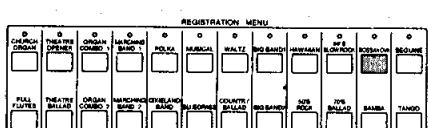

三

Salut d'amour

E. Elgar

Play along in time with the Bossanova rhythm. / Spielen Sie im Takt zum Bossanova-Rhythmus. / Jouez en mesure avec le rythme de bossanova. / Toque al compás de ritmo Bossanova.

C
INTRO.


INTRO.

C Dm G7 C E7

Am D7 G7 C

F A7 Dm C G7

C
ENDING →

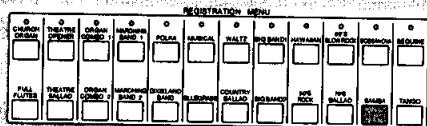


Danza Dell'ore "La Gioconda"

A. Ponchielli

C
INTRO.

G(G7) C B(B7) Em
G D(D7) G(G7) C G(G7)
C E(E7) F C G(G7) C
C ENDING →

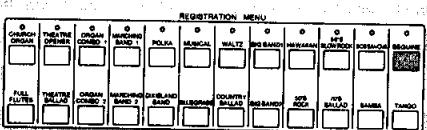


Iron Bar

Jamaican Folk Song

C
INTRO.

C F G(G7) C
C F G(G7) C
C Dm G(G7) C
C Dm G(G7) C
C Dm G(G7) C
C ENDING →

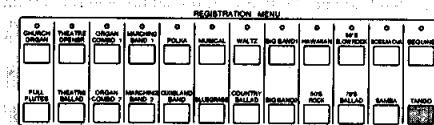




★★★

El Choclo

A. Villoldo

Play along in time with the Tango rhythm. / Spielen Sie im Takt zum Tango-Rhythmus. / Jouez en mesure avec le rythme de tango. / Toque al compás de ritmo Tango.

Am
INTRO.

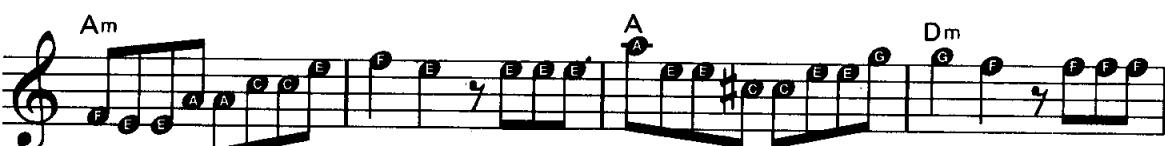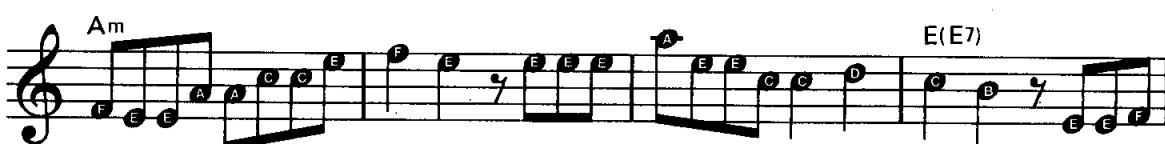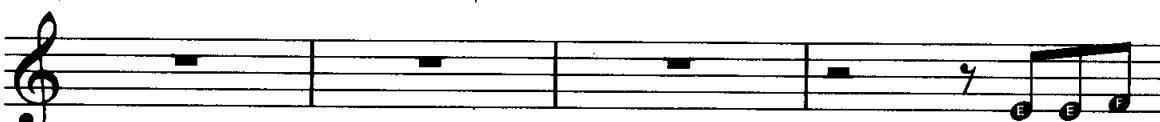

For details of products, please contact your nearest Yamaha or the authorized distributor listed below.

Pour plus de détails sur les produits, veuillez-vous adresser à Yamaha ou au distributeur le plus proche de vous figurant dans la liste suivante.

Die Einzelheiten zu Produkten sind bei Ihrer unten aufgeführten Niederlassung und bei Yamaha Vertragshändlern in den jeweiligen Bestimmungsländern erhältlich.

Para detalles sobre productos, contacte su tienda Yamaha más cercana o el distribuidor autorizado que se lista debajo.

NORTH AMERICA

CANADA

Yamaha Canada Music Ltd.

135 Milner Avenue, Scarborough, Ontario,
M1S 3R1, Canada
Tel: 416-298-1311

U.S.A.

Yamaha Corporation of America,

Keyboard Division

6600 Orangethorpe Ave., Buena Park, Calif. 90620,
U.S.A.
Tel: 714-522-9011

MIDDLE & SOUTH AMERICA

MEXICO

Yamaha De Mexico S.A. De C.V.,

Departamento de ventas

Javier Rojo Gomez No.1149, Col. Gpe Del
Moral, Deleg. Iztapalapa, 09300 Mexico, D.F.

Tel: 686-00-33

BRASIL

Yamaha Musical Do Brasil LTDA.

Ave. Reboucas 2636, São Paulo, Brasil
Tel: 55-11 853-1377

PANAMA

Yamaha De Panama S.A.

Edificio Interseco, Calle Elvira Mendez no.10, Piso
3, Oficina #105, Ciudad de Panama, Panama
Tel: 507-69-5311

OTHER LATIN AMERICAN COUNTRIES AND CARIBBEAN COUNTRIES

Yamaha Music Latin America Corp.

6101 Blue Lagoon Drive, Miami, Florida 33126,
U.S.A.
Tel: 305-261-4111

EUROPE

THE UNITED KINGDOM

Yamaha-Kemble Music(U.K.) Ltd.

Sherbourne Drive, Tilbrook,
Milton Keynes, MK7 8BL England
Tel: 0908-366700

IRELAND

Danfay Ltd.

61D, Sallynoggin Road, Dun Laoghaire, Co. Dublin
Tel: 01-2859177

GERMANY/SWITZERLAND

Yamaha Europa GmbH.

Siemensstraße 22-34, D-2084 Rellingen, F.R. of
Germany
Tel: 04101-3030

AUSTRIA/HUNGARY/SLOVENIA/ ROMANIA/BULGARIA

Yamaha Music Austria Ges m b H.

Schleiergasse 20, A-1100 Wien Austria
Tel: 0222-60203900

THE NETHERLANDS

Yamaha Music Benelux B.V.,

Verkoop Administratie

Kannalweg 18G, 3526 KL Utrecht, The Netherlands
Tel: 030-828411

BELGIUM/LUXEMBOURG

Yamaha Music Benelux B.V.,

Brussels-office

Keberg Imperiastraat 8, 1930 Zaventem, Belgium
Tel: 02-7258220

FRANCE

Yamaha Musique France, Division

Instruments Electroniques et de Scène
BP 70-77312 Marne-la-Vallée Cedex 2, France
Tel: 01-64-61-4000

ITALY

Yamaha Musica Italia S.P.A.,

Home Keyboard Division
Viale Italia 88, 20020 Lainate(Milano), Italy
Tel: 02-935-771

SPAIN

Yamaha-Hazen Electronica Musical, S.A.

Jorge Juan 30, 28001, Madrid, Spain
Tel: 91-577-7270

PORTUGAL

Valentim de Carvalho C.I SA

Estrada de Porto Salvo, Paço de Arcos 2780 Oeiras,
Portugal
Tel: 01-443-3398/4030/1823

GREECE

Philippe Nakas S.A.

Navarinou Street 13, P.Code 10680, Athens, Greece
Tel: 01-364-7111

SWEDEN

Yamaha Scandinavia AB

J. A. Wettergrens gata 1, Box 30053, 400 43
Göteborg, Sweden
Tel: 031-496090

DENMARK

YS Copenhagen Liaison Office

Finsensvej 86, DK-2000 Frederiksberg, Denmark
Tel: 31-87 30 88

FINLAND

Fazer Music Inc.

Aleksanterinkatu 11, SF 00100 Helsinki, Finland
Tel: 0435 011

NORWAY

Narud Yamaha AS

Østerndalen 29, 1345 Østerås
Tel: 02-24 47 90

ICELAND

Páll H. Pálsson

P.O. Box 85, 121 Reykjavik, Iceland
Tel: 01-19440

OTHER EUROPEAN COUNTRIES

Yamaha Europa GmbH.

Siemensstraße 22-34, D-2084 Rellingen, F.R. of
Germany
Tel: 04101-3030

AFRICA

Yamaha Corporation, International Marketing Division

Nakazawa-cho 10-1, Hamamatsu, Japan 430
Tel: 053-460-2311

MIDDLE EAST

TURKEY/CYPRUS

Yamaha Musique France, Division Export

BP70-77312 Marne-la-Vallée Cedex 2, France
Tel: 01-64-61-4000

OTHER COUNTRIES

Yamaha Corporation, International Marketing Division

Nakazawa-cho 10-1, Hamamatsu, Japan 430
Tel: 053-460-2311

ASIA

HONG KONG

Tom Lee Music Co., Ltd.

11/F, Silvercord Tower 1, 30 Canton Road,
Tsimshatsui, Kowloon, Hong Kong
Tel: 730-1098

INDONESIA

PT. Yamaha Music Indonesia (Distributor)

PT. Nusantik

Gedung Yamaha Music Center, Jalan Jend. Gatot
Subroto Kav. 4, Jakarta 12930, Indonesia
Tel: 21-520-2577

MALAYSIA

Yamaha Music Malaysia Sdn., Bhd.

16-28, Jalan SS 2/72, Petaling Jaya, Selangor,
Malaysia
Tel: 3-717-8977

PHILIPPINES

Yupangco Music Corporation

339 Gil J. Puyat Avenue, P.O. Box 885 MCPO,
Makati, Metro Manila, Philippines
Tel: 819-7551

SINGAPORE

Yamaha Music Asia Pte., Ltd.

Blk 17A Toa Payoh #01-190 Lorong 7
Singapore 1231
Tel: 354-0133

TAIWAN

Kung Hsue She Trading Co., Ltd.

No. 322, Section 1, Fu Hsing S. Road,
Taipei 106, Taiwan, R.O.C.
Tel: 02-709-1266

THAILAND

Siam Music Yamaha Co., Ltd.

865 Phornprapha Building, Rama I Road,
Patumwan, Bangkok 10330, Thailand
Tel: 2-215-3443

THE PEOPLE'S REPUBLIC OF CHINA AND OTHER ASIAN COUNTRIES

Yamaha Corporation, International Marketing Division

Nakazawa-cho 10-1, Hamamatsu, Japan 430
Tel: 053-460-2311

OCEANIA

AUSTRALIA

Yamaha Music Australia Pty. Ltd.

17-33 Market Street, South Melbourne, Vic. 3205,
Australia
Tel: 3-699-2388

NEW ZEALAND

Music Houses of N.Z. Ltd.

146/148 Captain Springs Road, Te Papapa,
Auckland, New Zealand
Tel: 9-634-0099

COUNTRIES AND TRUST TERRITORIES IN PACIFIC OCEAN

Yamaha Corporation, International Marketing Division

Nakazawa-cho 10-1, Hamamatsu, Japan 430
Tel: 053-460-2311

YAMAHA
YAMAHA CORPORATION