# Quickstart Guide
# CONCERT CDP2000-BK

**MAIN VOLUME**
For adjusting the volume.

**SPEAKERS**
For switching the loud-speakers on and off.

**SONG**
Control elements for the internal music sequencer. Can be used to record and play back your own music pieces.

**TEMPO/VALUE**
The display shows parameter values and menu pages.

**SOUND SELECT**
Use these 14 buttons to select a sound. You can also select two sounds at the same time.

**REVERB**
For selecting one of four room effects.

**VELOCITY**
For adjusting the key velocity from soft to hard.

**BRIGHTNESS**
For changing the brilliance of the sound.

**METRONOME**
For starting and stopping the metronome click.

**TEMPO/EDIT MODE**
The SELECT button selects TEMPO or EDIT mode. Use the ◀ ▶ buttons to adjust the tempo and scroll through the EDIT menus.

**VALUE/SONG**
Use these two buttons to enter parameter values.

**EFFECT**
For selecting one of four modulation effects.

**TRANSPOSE**
For transposing the keyboard up or down, so that difficult scales are easier to play.

**DEMO**
For switching to DEMO mode.

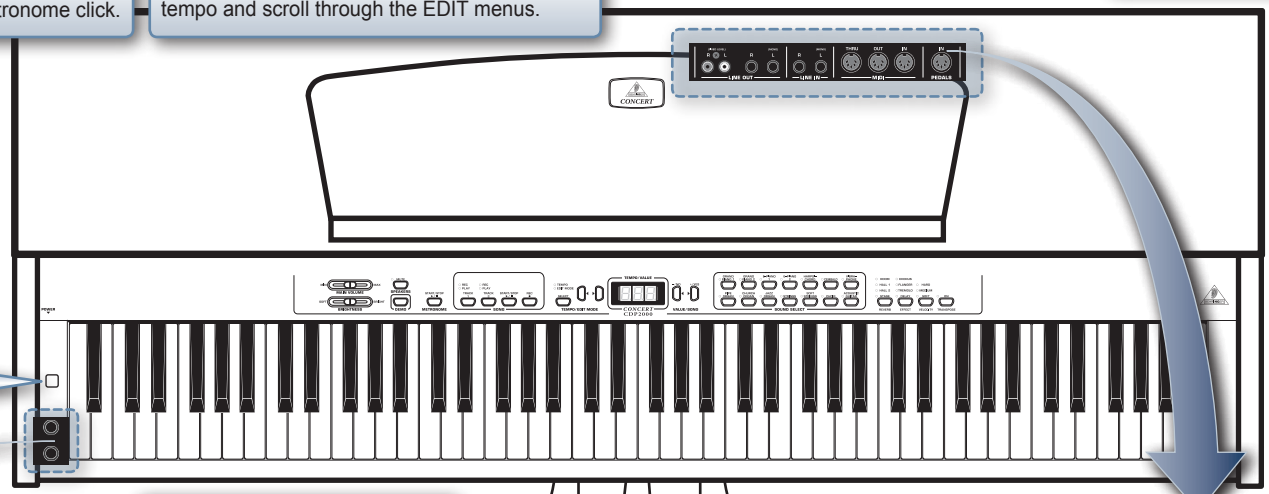

**POWER**
For switching the piano on and off.

**PEDALS**
Soft, sostenuto and damper pedal (from left to right).

**PHONES**
Here you can connect two pairs of headphones. This will automatically cut off the built-in loudspeakers.

**LINE OUT**
Connector for recording devices (e.g. MD recorder) or external amplifiers.

**LINE IN**
Connector for feeding devices (e.g. CD player) to be played back via the piano's loudspeakers .

**MIDI**
Connector for external sound modules or music computer.

**PEDALS**
Connector for the pedal unit of the piano.

A54-A0934-52501