

DIS Digital Conference Systems DC 6190 P Conference Unit

DC 6190 P Conference Unit

- · Conference unit for tabletop placement
- · Configurable for chairman or delegate functionality
- · Lockable XLR microphone connector
- · Reply function to allow brief comments or questions during a conference
- Two headphone jacks for listening to language interpretation
- Exchangeable buttons
- Loudspeaker



Description

The DC 6190 P is a fully digital portable conference unit in the DIS DCS 6000 Digital Conference System.

The DC 6190 P can be configured for a chairman or a delegate (default). The unit is easily configured by holding down the mute and the microphone button while pressing the left volume button for 10 seconds (up for chairman, down for delegate). The configuration is stored in the unit so it recalls its configuration if it is used in another system setup.

The microphone button enables the user to activate/deactivate the microphone, indicated by the LED ring on the microphone. The floor channel is distributed through the built-in loudspeaker except when the microphone is turned on. There are two headphone jacks to listen to the floor channel or one of the 31 interpretation channels.

To support both configurations, the left button changes functionality to a mute or all-delegate off button. The chairman configuration enables 'all delegates off' functionality to immediately silence all microphones, leaving the chairman with exclusive speaking rights. The delegate configuration uses this button as a mute button to temporarily mute the audio while retaining speaking privileges.

The function button can be exchanged to match the current functionality of the unit, including the Reply feature. Improving the flow of the conference, Reply mode enables the user to briefly comment or ask a question to the present speaker without affecting the current speakers or request queue. Reply mode is available in VOX, Manual, and Automatic microphone operating modes.

The gooseneck microphones GM 652x or GM 6622 can be locked to the unit with a 1.5 mm hex key. The lock is accessible from the small hole below the DIS logo on the side of the XLR socket. Turn the hex key counter clockwise to lock the gooseneck microphone to the unit and turn the hex key clockwise to unlock the gooseneck microphone from the unit.

The DC 6190 P can be combined with any conference units from the DCS 6000 Digital Conference System.

Features

The DC 6190 P has the following standard features:

- · Conference unit delegate or chairman operation
- Supports Reply functionality to briefly comment or ask a question to the present speaker
- Functions in all DIS microphone operation modes: Automatic, FIFO, Manual and VOX (voice activation)
- Support for three microphone interrupt modes enabling 'ping pong' mode
- Voice activation and automatic-off microphone features
- Two headphone connectors for listening to interpretation channels
- · Fully digital audio transmission
- Two RJ-45 ports provide power, audio, and control transport across a single chain of chairman, delegate, and interpretation units
- DCS-LAN connection uses CAT 5e (or higher) shielded F/UTP or U/FTP cabling
- Exchangeable buttons for alternate functions and different languages
- · Lockable XLR gooseneck microphone connector
- High-quality loudspeaker for listening to the conference

Specifications

Electrical

Frequency response (headphones)	65 Hz-16 kHz
Frequency range (loudspeaker)	150 Hz-15 kHz
Power consumption	2.5 W
Power maximum (loudspeaker)	3.0 W RMS
THD	< 0.1 %
Signal-to-noise ratio	> 90 dBA
Headphone connection	Two 3.5 mm jack, female ste- reo sockets

Interconnections

DCS-LAN	auto-termination
Mechanical	
Mounting	Tabletop
Dimensions (H x W x D)	61 x 150 x 168 mm
Weight	650 g
Color	Black
Temperature range	5° to 40° C

Two RJ45 female sockets with


Certifications

The DCS 6000 system conforms to standard IEC 60914.

How To Order

Portable conference unit. Features integrated channel selectors, headphone outputs, loudspeak- er and CM buttons. Configurable as chairman or delegate.	DC 6190 P
English Reply button DC 61xx -10PK	ACC-DC 61xx 10PK
Spare Part Set DCS 6000 P	SPS DCS 6000 P

Drawing

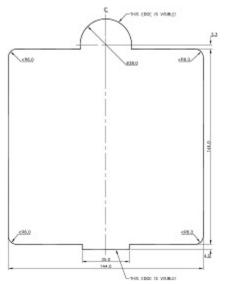



United States, Canada, Latin America, Caribbean: Shure Incorporated 5800 West Touhy Avenue Niles, IL 60714-4608 USA

Phone: +1 847-600-2000 Fax: +1 847-600-1212 (USA) Fax: +1 847-600-6446 Email: info@shure.com www.shure.com Europe, Middle East, Africa: Shure Europe GmbH Jakob-Dieffenbacher-Str. 12, 75031 Eppingen, Germany

Phone: +49-7262-92490 Fax: +49-7262-9249114 Email: info@shure.de www.shure.eu Asia, Pacific: Shure Asia Limited 22/F, 625 King's Road North Point, Island East Hong Kong

Phone: +852-2893-4290 Fax: +852-2893-4055 Email: info@shure.com.hk www.shureasia.com